

Bulkhead Wiring Harness (In Compartment) LH

WIRING SYSTEM

65.Bulkhead Wiring Harness (In Compartment) LH

A: LOCATION

1. ENGINE TYPE FA


Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB1	10	GR	D-1	B31	Bulkhead wiring harness
AB2	4	Y	C-5	AB7	Driver's airbag module
AB66	2	B	C-3		Driver's knee airbag module
B23	10	★	B-2	B28	Bulkhead wiring harness (with push button start)
B28	10	★	B-2	B23	
B31	10	GR	D-1	AB1	Airbag wiring harness
B32	8	★	B-3		Turn signal and hazard unit
B40	16	B	C-2		Data link connector
B41	2	★	C-2		Power window circuit breaker
B52	24	★	C-2		F/B
B54	48	B	C-2		TCM
B65	4	B	B-3		Stop light and brake switch
B68	14	★	C-5	ST1	Roll connector
B70	10	★	C-5		Combination switch
B71	20	★	C-4		
B72	8	★	C-4		Ignition switch (without push button start)
B77	6	★	C-3		Mode door actuator
B92	10	★	D-2	R5	Rear wiring harness LH
B99	24	★	D-1	R3	
B101	8	B	D-2	D11	Front door cord LH
B106	2	★	B-2		Clutch start switch
B107	2	L	C-2		Clutch switch
B123	2	★	D-2		Key lock (without push button start)
B124	2	★	D-2		
B150	24	★	B-2		Auto headlight beam leveler CM
B152	10	GR	C-2		F/B
B158	8	★	C-2		
B159	9	★	C-2		
B162	2	★	C-2		
B180	4	★	B-2		Remote engine start CM (without push button start)
	8	★	B-2		Remote engine start CM (with push button start)
B181	2	★	C-2	B182	Bulkhead wiring harness
B182	2	★	C-2	B181	
B225	44	★	C-2		Relay holder
B231	5	★	C-5		Steering angle sensor
B235	6	★	B-4		Air mix door actuator LH
B280	34	★	B-2		Body integrated unit
B281	35	★	B-2		
B315	6	B	B-4		Accelerator pedal position sensor
B367	8	★	B-3		Impact sensor
B415	7	B	C-5		Immobilizer antenna (without push button start)
B422	5	★	A-4		ID code box
B424	7	B	C-4		Steering lock CM (with push button start)
B426	4	B	C-3		Accessory relay (with push button start)

Bulkhead Wiring Harness (In Compartment) LH

WIRING SYSTEM

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
B475	4	★	C-3		Wiper relay unit
B550	26	B	C-3		Fuse holder
B551	12	★	C-3	i229	Instrument panel wiring harness
B552	17	GR	C-3	i230	
B553	20	★	C-3	i231	
B555	2	★	C-5		Key warning switch (without push button start)
B557	2	★	C-4		Key lock solenoid (without push button start)
B558	7	★	C-5		Combination switch
B559	5	★	A-4		Security CM
B572	18	★	C-2		Keyless access CM
B573	28	★	B-2		
B574	30	★	B-2		
B575	22	★	B-1	B576	Bulkhead wiring harness (with push button start)
B576	22	★	B-1	B575	
★ : White or natural color					

WIRING SYSTEM



Bulkhead Wiring Harness (In Compartment) LH

WIRING SYSTEM

2. ENGINE TYPE EJ

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB1	10	GR	D-1	B31	Bulkhead wiring harness
AB2	4	Y	C-5	AB7	Driver's airbag module
AB66	2	B	C-3		Driver's knee airbag module
B23	10	★	B-2	B28	Bulkhead wiring harness (with push button start)
B28	10	★	B-2	B23	
B31	10	GR	D-1	AB1	Airbag wiring harness
B32	8	★	B-3		Turn signal and hazard unit
B40	16	B	C-2		Data link connector
B41	2	★	C-2		Power window circuit breaker
B52	24	★	C-2		F/B
B65	4	B	B-3		Stop light and brake switch
B68	14	★	C-5	ST1	Roll connector
B70	10	★	C-5		Combination switch
B71	20	★	C-4		
B72	8	★	C-4		Ignition switch (without push button start)
B77	6	★	C-3		Mode door actuator
B92	10	★	D-2	R5	Rear wiring harness LH
B99	24	★	D-1	R3	
B101	8	B	D-2	D11	Front door cord LH
B106	2	★	B-2		Clutch start switch
B107	2	L	C-2		Clutch switch
B150	24	★	B-2		Auto headlight beam leveler CM
B152	10	GR	C-2		F/B
B158	8	★	C-2		
B159	9	★	C-2		
B162	2	★	C-2		
B180	4	★	B-2		Remote engine start CM (without push button start)
	8	★	B-2		Remote engine start CM (with push button start)
B181	2	★	C-2	B182	Bulkhead wiring harness
B182	2	★	C-2	B181	
B225	44	★	C-2		Relay holder
B231	5	★	C-5		Steering angle sensor
B235	6	★	B-4		Air mix door actuator LH
B280	34	★	B-2		Body integrated unit
B281	35	★	B-2		
B315	6	B	B-4		Accelerator pedal position sensor
B367	8	★	B-3		Impact sensor
B415	7	B	C-5		Immobilizer antenna (without push button start)
B422	5	★	A-4		ID code box
B424	7	B	C-4		Steering lock CM (with push button start)
B426	4	B	C-3		Accessory relay (with push button start)
B475	4	★	C-3		Wiper relay unit
B550	27	B	C-3		Fuse holder
B551	12	★	C-3	i229	Instrument panel wiring harness
B552	17	GR	C-3	i230	
B553	20	★	C-3	i231	
B555	2	★	C-5		Key warning switch (without push button start)


Bulkhead Wiring Harness (In Compartment) LH

WIRING SYSTEM

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
B558	7	★	C-5		Combination switch
B559	5	★	A-4		Security CM
B572	18	★	C-2		Keyless access CM
B573	28	★	B-2		
B574	30	★	B-2		
B575	22	★	B-1	B576	Bulkhead wiring harness (with push button start)
B576	22	★	B-1	B575	
★ : White or natural color					

Bulkhead Wiring Harness (In Compartment) LH

WIRING SYSTEM

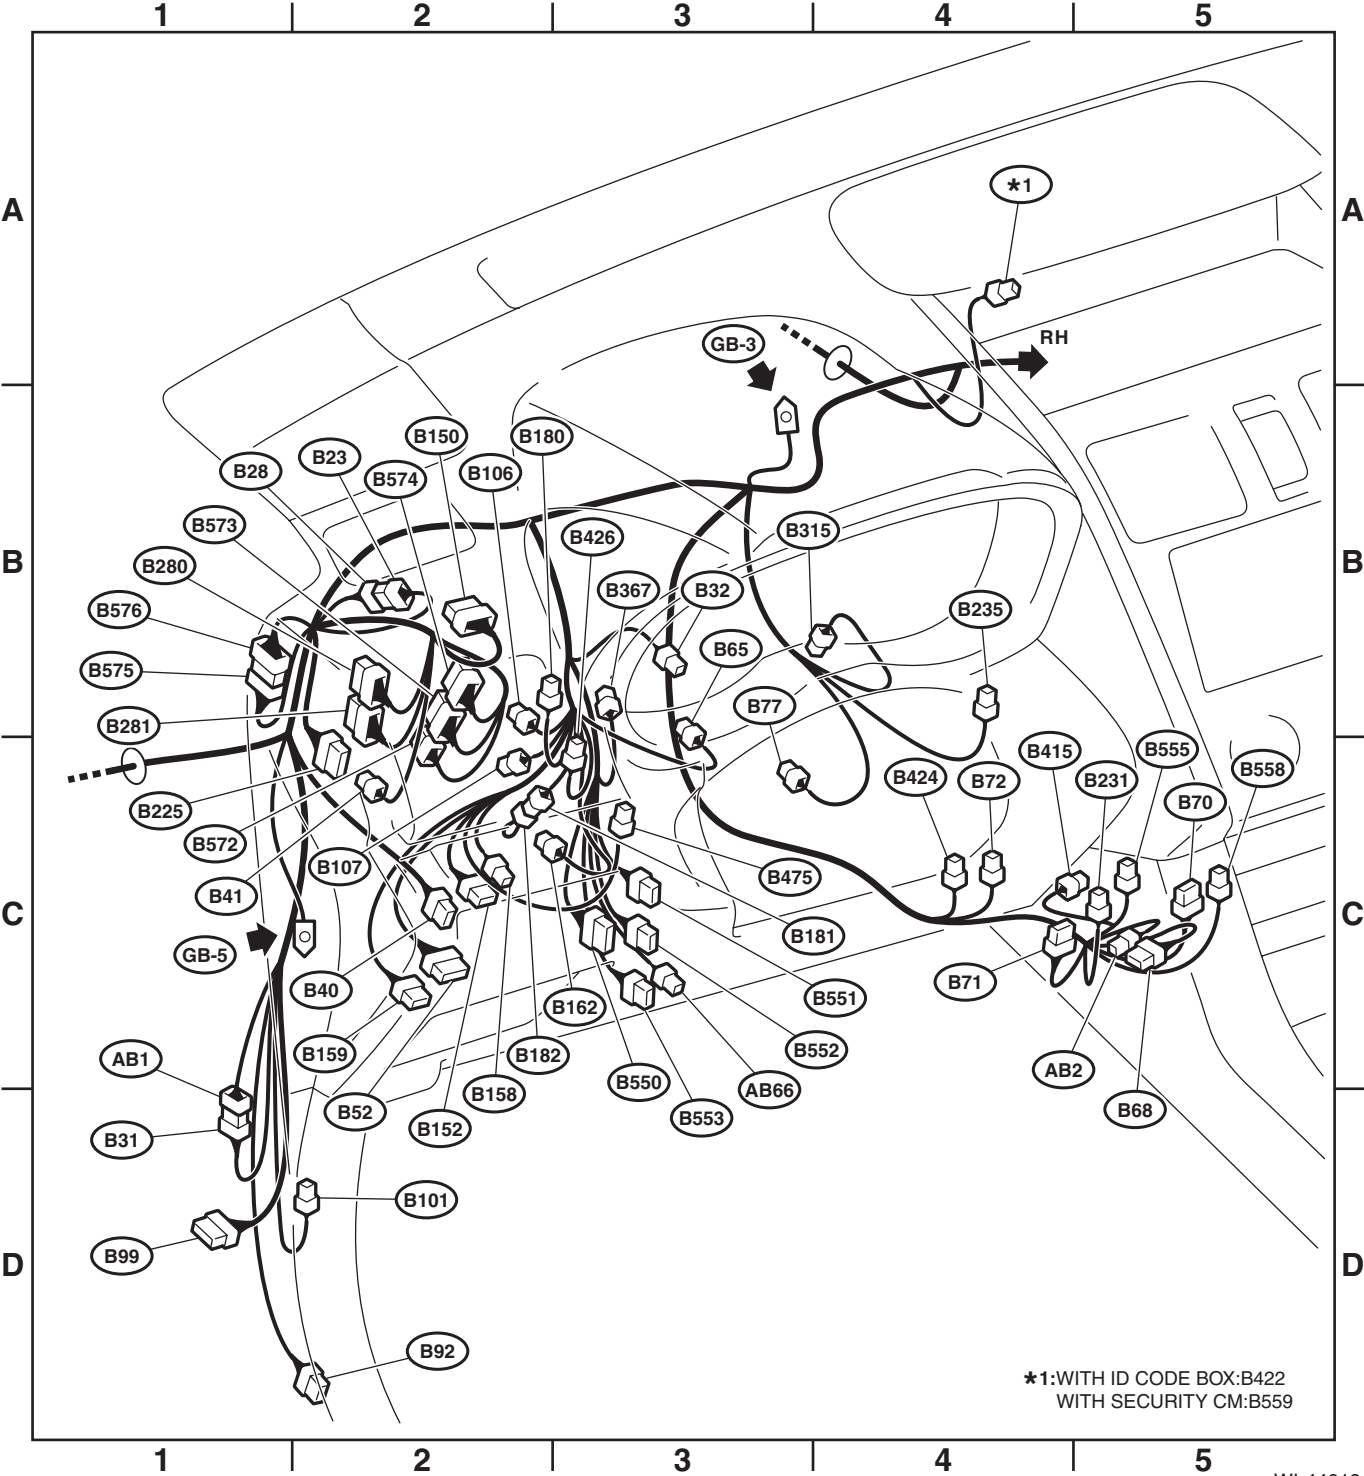

WI-44619