


## 70.Rear Wiring Harness RH

## A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB18	15	Y	C-3		Airbag CM
AB24	4	Y	B-3		Side airbag module RH
AB26	2	B	B-3		Pretensioner RH
AB28	4	Y	B-3		Side airbag sensor RH
AB30	2	B	B-3		Lap seat belt pretensioner RH
AB53	3	GR	B-3	AB59	Occupant detection wiring harness
AB59	3	BR	B-3	AB53	Rear wiring harness
AB60	2	Y	B-3		Buckle switch
AB61	10	B	C-3		Occupant detection control module
AD6	20	★	D-5	R34	Airbag wiring harness
AD7	6	★	D-4		AUX input terminal
AD8	8	★	D-4		Seat heater switch
AD9	2	★	D-4		Rear accessory power supply socket (console)
AD10	10	★	D-4	R33	Rear wiring harness LH
R1	20	★	C-1	B97	Bulkhead wiring harness
R12	3	★	A-3		Front door switch RH
R13	8	★	A-3	D28	Rear door cord RH
R21	12	B	B-4	R18	Rear wiring harness RH
R33	10	★	D-4	AD10	Multi select switch
R34	20	★	D-5	AD6	Adapter cord LH
R42	4	★	B-4		Seat heater switch RH
R43	4	L	B-4		Seat heater switch LH (without SI-DRIVE)
R44	4	★	B-3		Seat heater RH
R82	19	B	B-4	R81	Rear wiring harness LH
R98	24	★	C-1	i53	Instrument panel wiring harness
R124	2	★	C-1	AB63	Airbag wiring harness
R284	6	★	B-5		AUX input terminal
R311	2	★	B-5		Rear accessory power supply socket (console)
R382	20	★	C-1	i195	Instrument panel wiring harness
★ : White or natural color					

# Rear Wiring Harness RH

WIRING SYSTEM

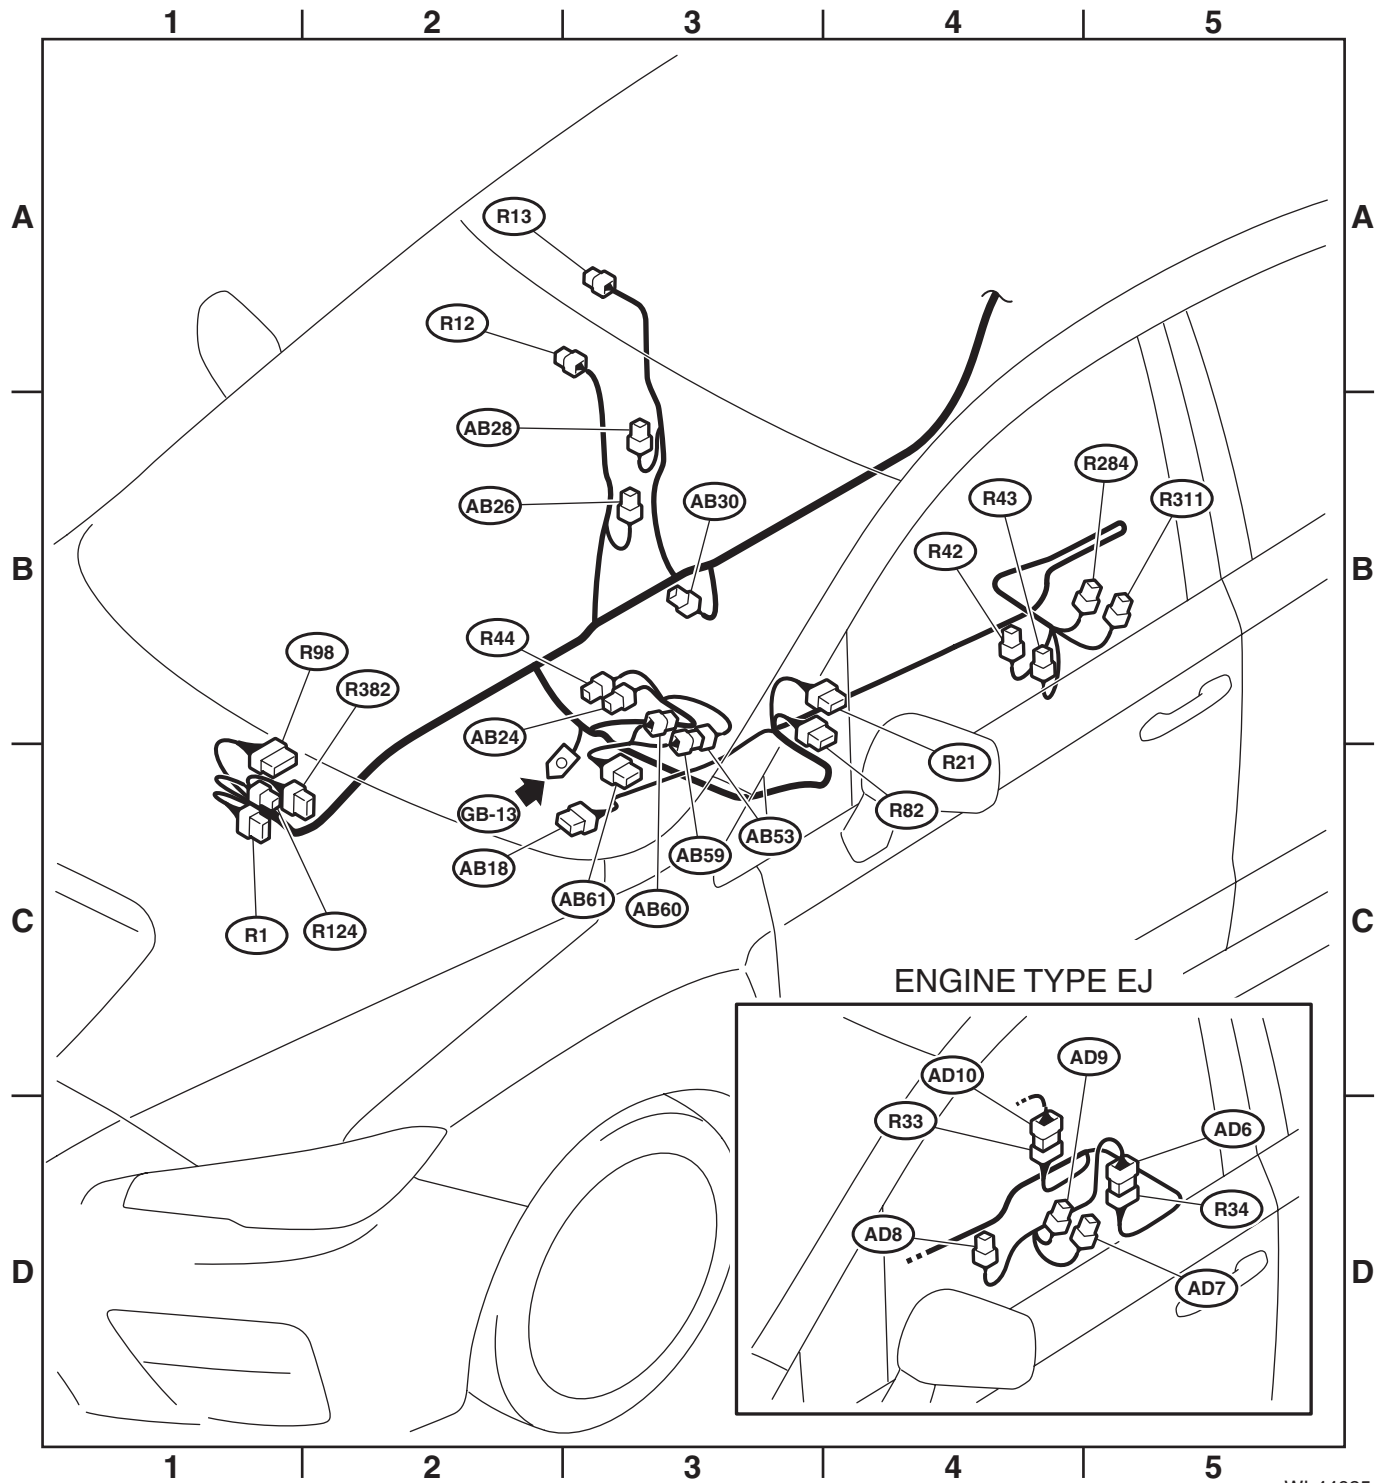

WI-44625