

4. Floor Under Protector


A: REMOVAL

1) Lift up the vehicle.

NOTE:

A plate type lift cannot be used.

2) Remove the bolts and clips, and remove the front under protector.

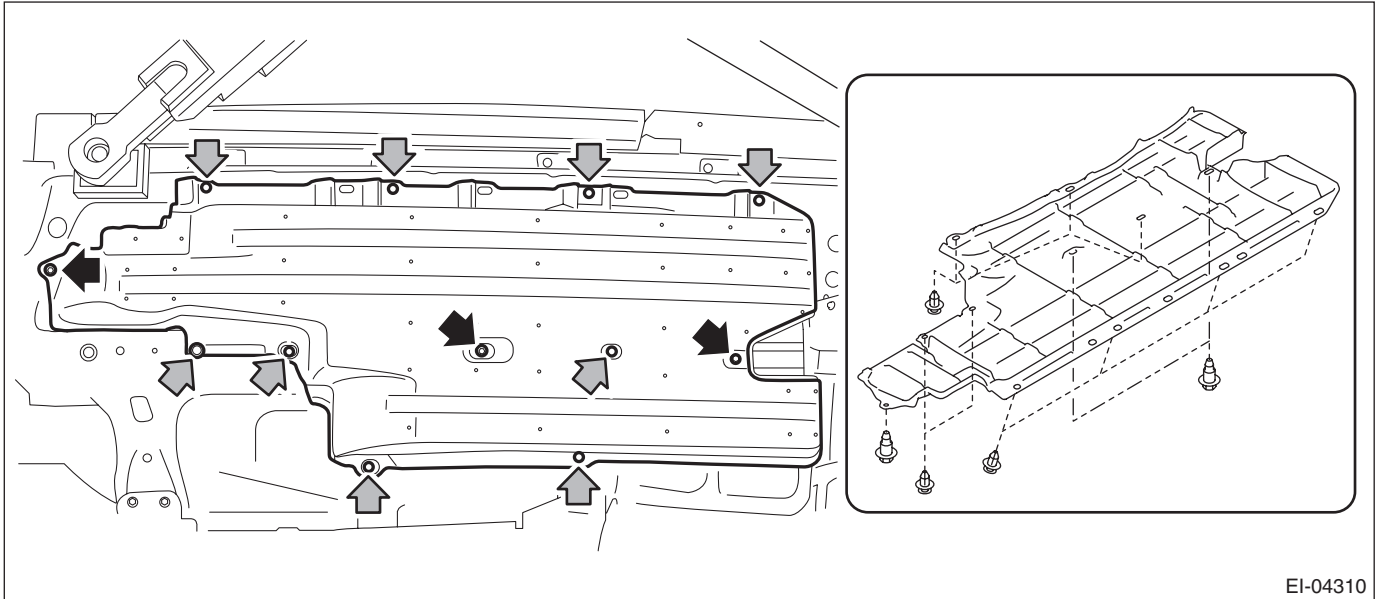

EI-04310

B: INSTALLATION

1) Install the floor under protector.

Tightening torque:

7.5 N·m (0.8 kgf-m, 5.5 ft-lb)

2) Lower the vehicle.