

General Description

EXTERIOR BODY PANELS


1. General Description

A: SPECIFICATION

Refer to Body Repair Manual for the dimensions of the body.

B: COMPONENT

1. FRONT HOOD

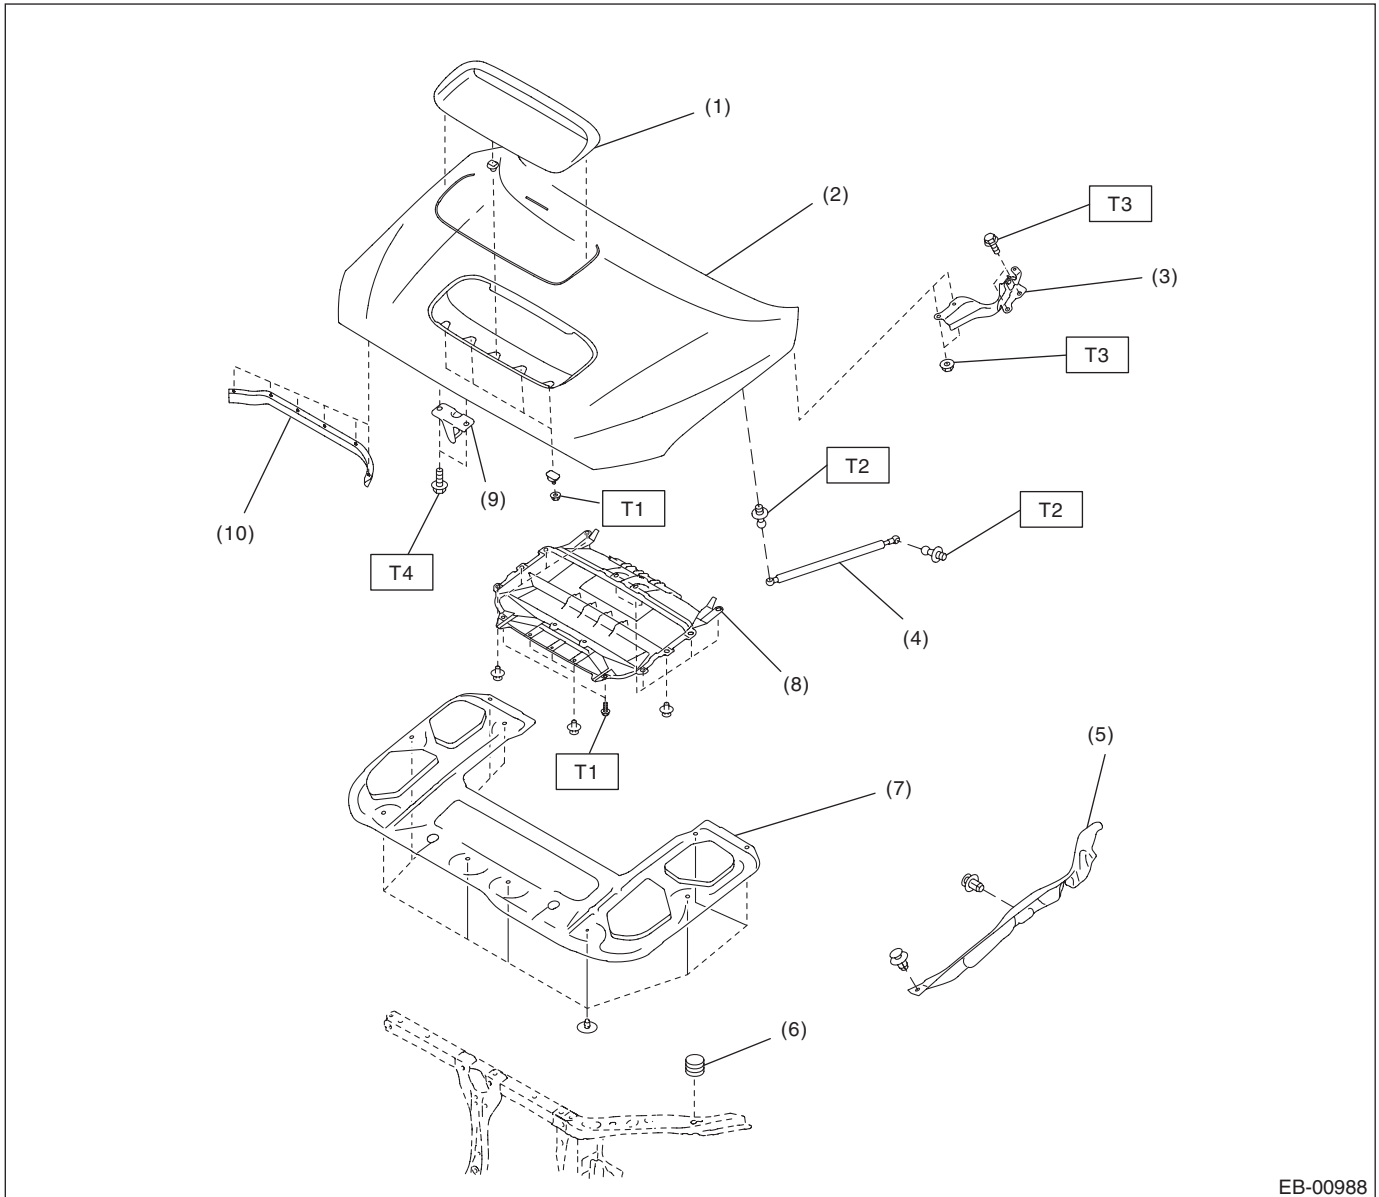

EB-00988

- | | |
|------------------------------|-----------------------------|
| (1) Grille - front hood | (6) Buffer - front hood |
| (2) Hood COMPL - front | (7) Insulator - front hood |
| (3) Hinge COMPL - front hood | (8) Duct - inner front hood |
| (4) Stay ASSY - front hood | (9) Striker - front hood |
| (5) Cover - front fender | (10) Seal - front duct |

Tightening torque: N·m (kgf-m, ft-lb)


T1: 4.5 (0.5, 3.3)

T2: 20 (2.0, 14.8)

T3: 25 (2.5, 18.4)

T4: 33 (3.4, 24.5)

2. FRONT FENDER

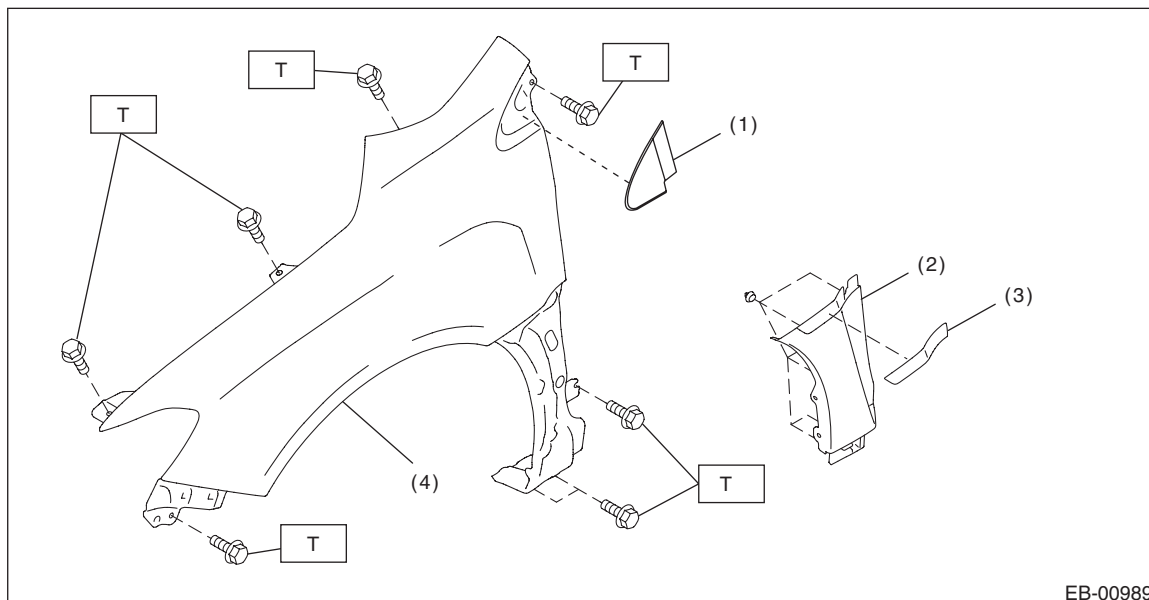

- (1) Cover ASSY - A pillar
- (2) Garnish ASSY - fender


- (3) Molding
- (4) Fender COMPL - front

Tightening torque: N·m (kgf-m, ft-lb)
T: 7.5 (0.8, 5.5)

General Description

EXTERIOR BODY PANELS


3. FRONT DOOR

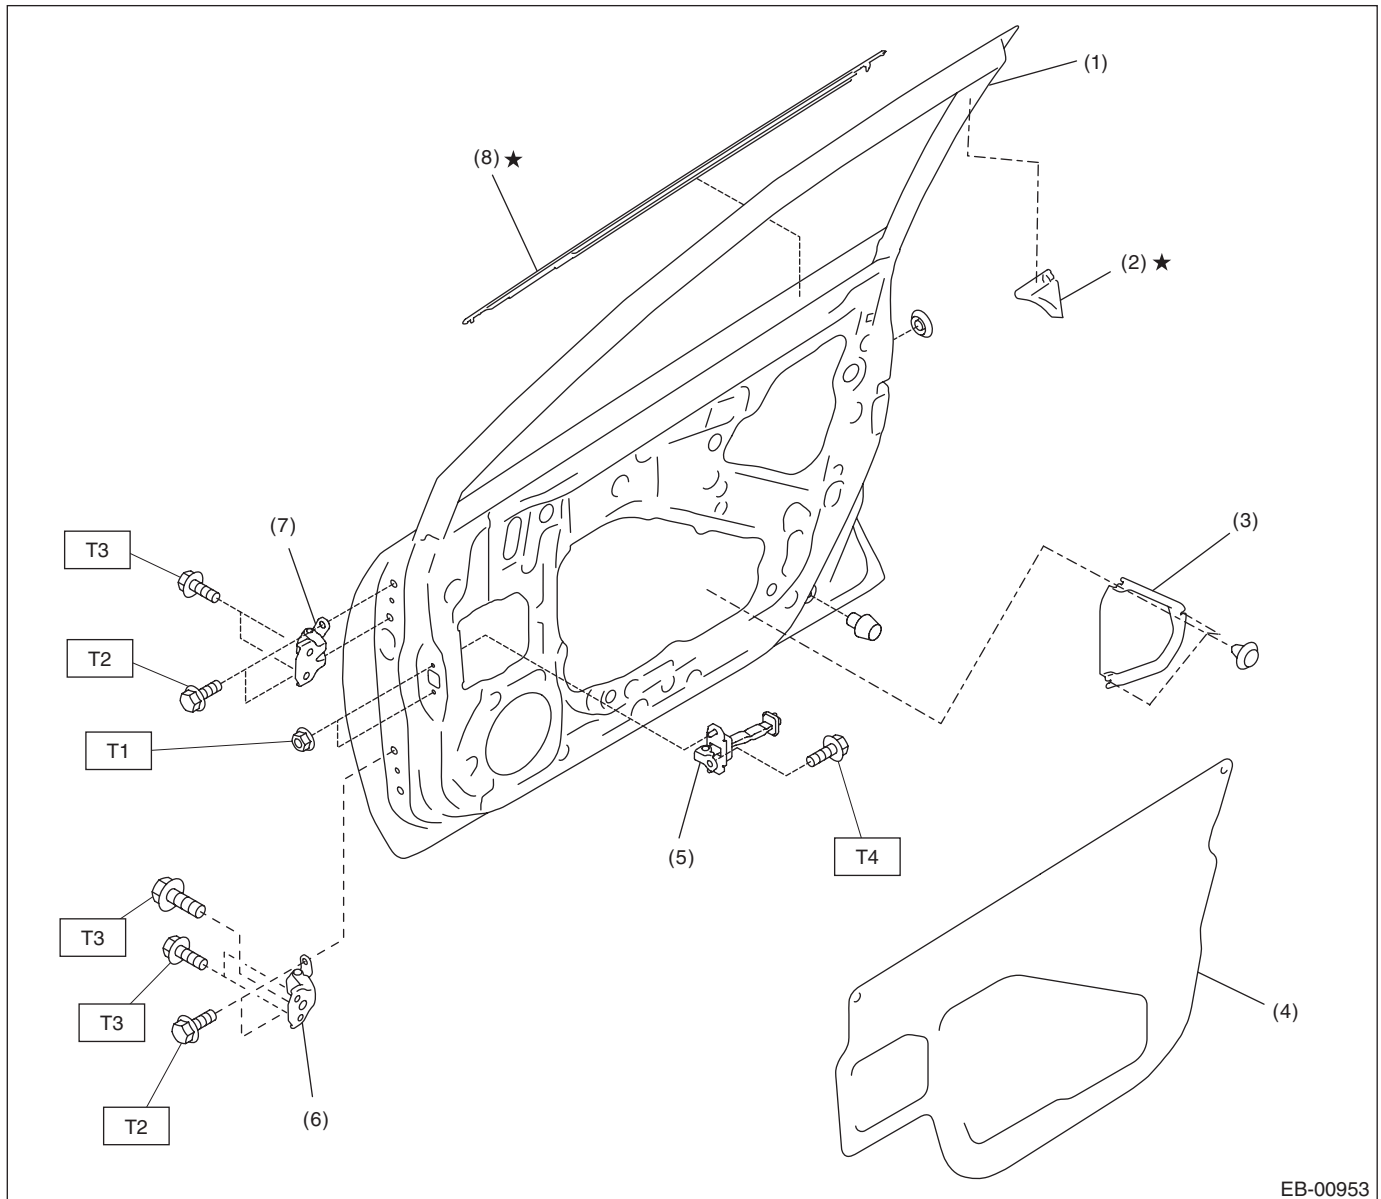

- | | |
|-------------------------------------|--------------------------------------|
| (1) Panel ASSY - front door | (5) Checker ASSY - front door |
| (2) Cover B pillar - front door INN | (6) Lower hinge - front door |
| (3) Front door inner pad | (7) Upper hinge - front door |
| (4) Sealing cover - front door | (8) Weather strip outer - front door |

Tightening torque: N·m (kgf-m, ft-lb)**T1: 7.5 (0.8, 5.5)****T2: 25 (2.5, 18.4)****T3: 30 (3.1, 22.1)****T4: 33 (3.4, 24.3)**

4. REAR DOOR

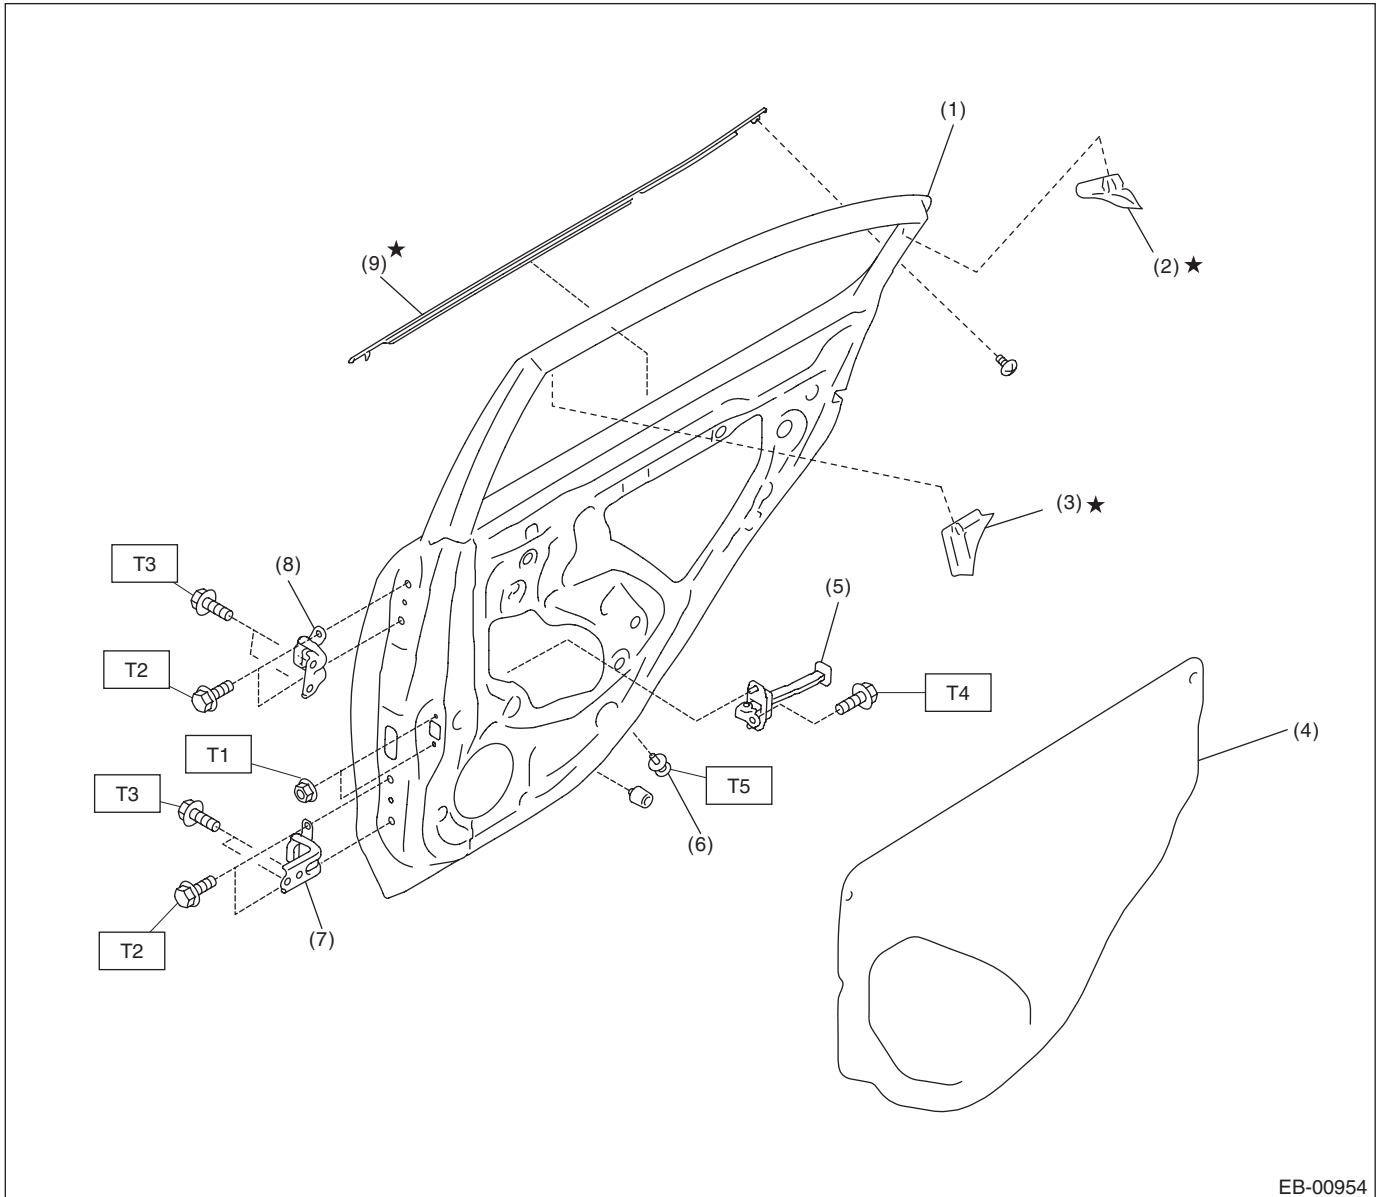

EB-00954

- | | |
|------------------------------------|-------------------------------------|
| (1) Panel ASSY - rear door | (6) Catcher - rear door |
| (2) Cover C pillar - rear door INN | (7) Lower hinge - rear door |
| (3) Cover B pillar - rear door INN | (8) Upper hinge - rear door |
| (4) Sealing cover - rear door | (9) Weather strip outer - rear door |
| (5) Checker ASSY - rear door | |

Tightening torque: N·m (kgf-m, ft-lb)

T1: 7.5 (0.8, 5.5)

T2: 25 (2.5, 18.4)

T3: 30 (3.1, 22.1)


T4: 33 (3.4, 24.3)

T5: 38 (3.9, 28.0)

General Description

EXTERIOR BODY PANELS

5. TRUNK LID PANEL

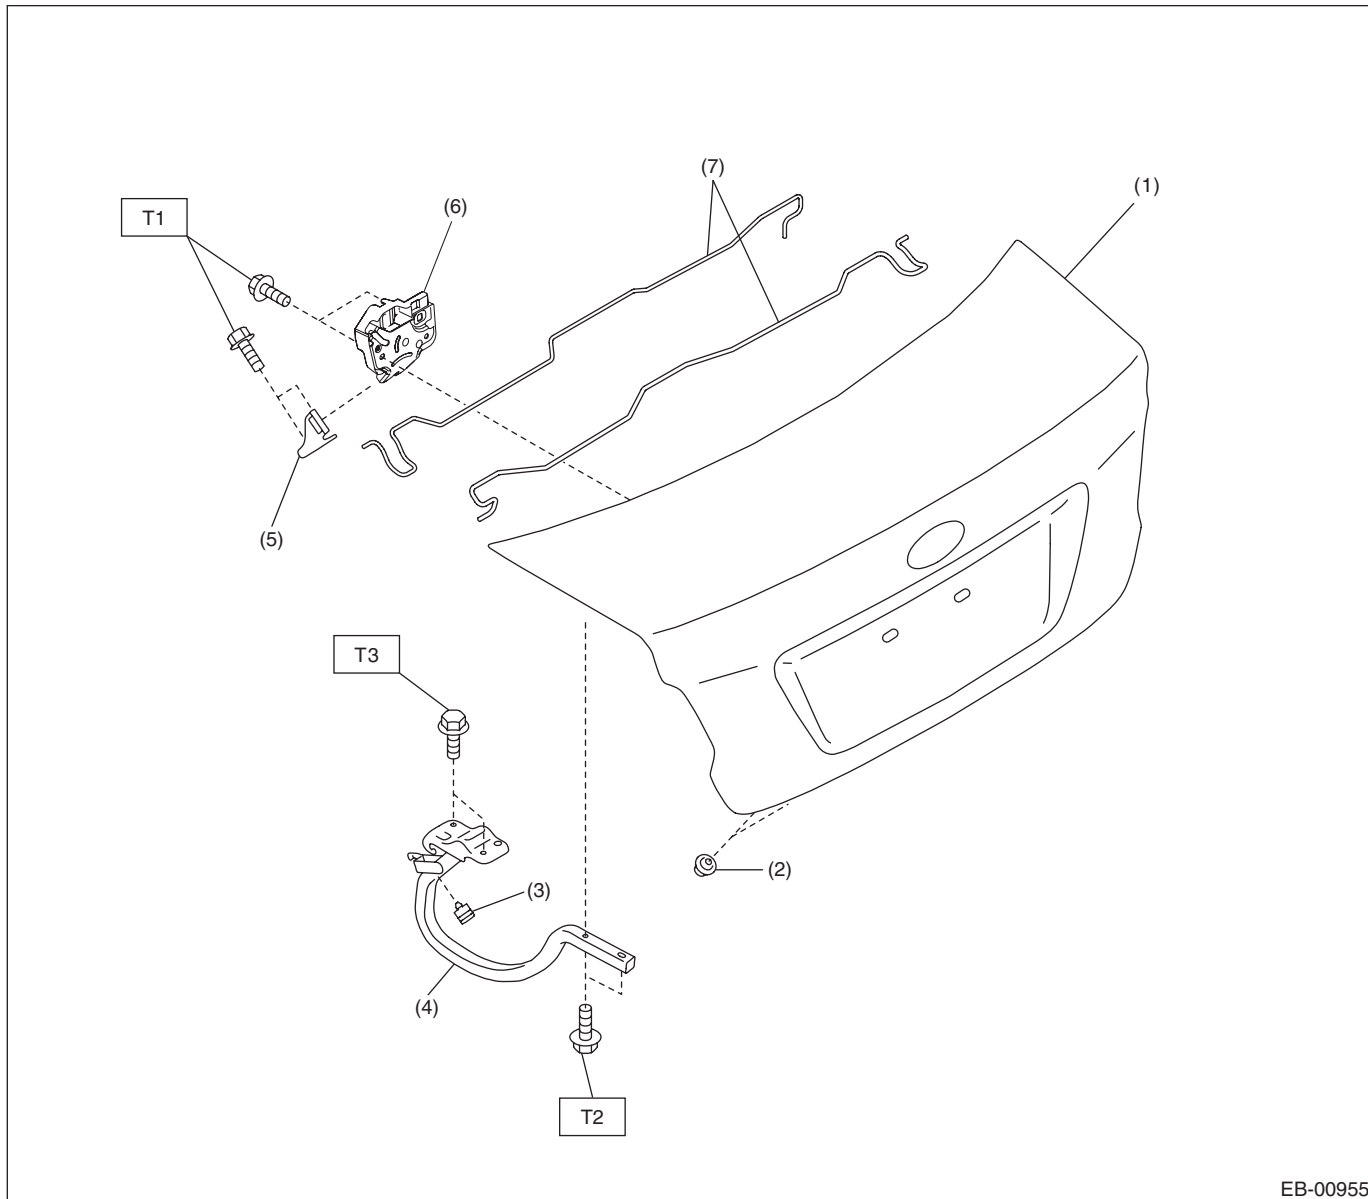

EB-00955

- | | |
|-------------------------|-----------------------------|
| (1) Trunk lid COMPL | (5) Striker - trunk |
| (2) Stopper - trunk lid | (6) Lock ASSY - trunk lid |
| (3) Stopper - trunk | (7) Torsion bar - trunk lid |
| (4) Trunk lid arm ASSY | |


Tightening torque: N·m (kgf-m, ft-lb)

T1: 7.5 (0.8, 5.5)

T2: 14 (1.4, 10.3)

T3: 18 (1.8, 13.3)

6. WEATHER STRIP

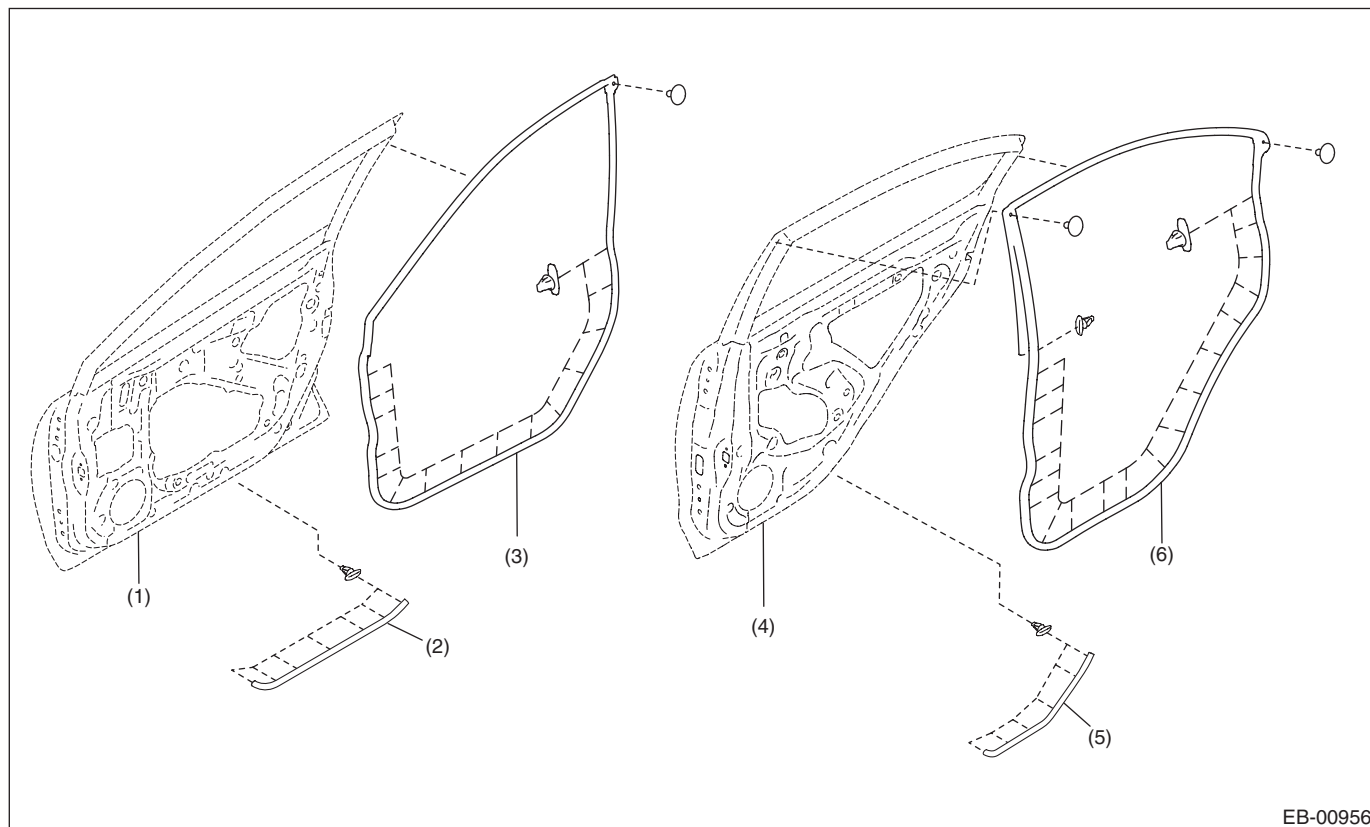


EB-00956

- | | | |
|----------------------------------------|--------------------------------|---------------------------------------|
| (1) Panel ASSY - front door | (3) Weather strip - front door | (5) Weather strip - rear door - lower |
| (2) Weather strip - front door - lower | (4) Panel ASSY - rear door | (6) Weather strip - rear door |

General Description

EXTERIOR BODY PANELS

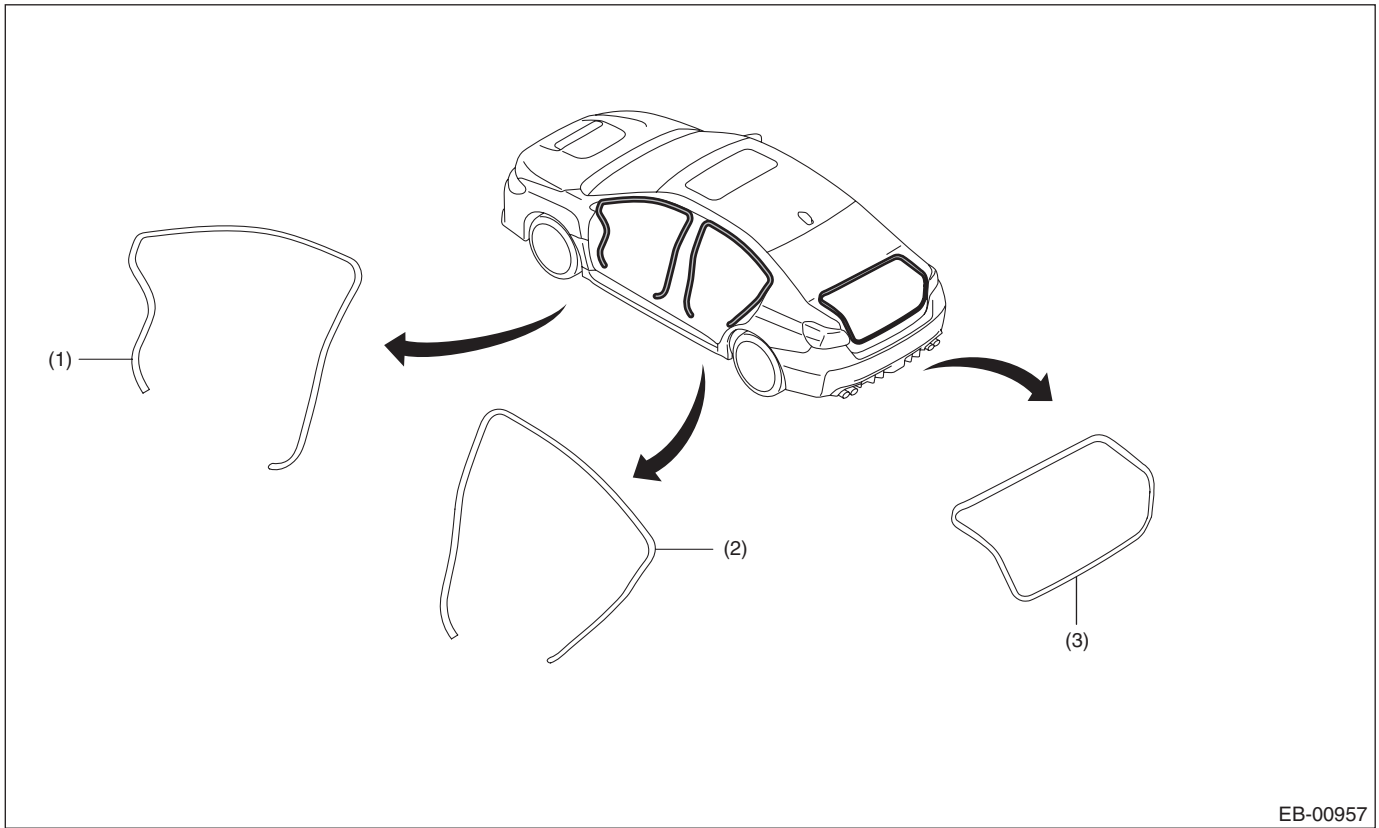

EB-00957

(1) Weather strip - body side flange
front

(2) Weather strip - body side flange
rear



(3) Weather strip - trunk lid

C: CAUTION

Exterior body panels are heavy. When removing and installing them, do not drop and damage the panels. Also, be careful not to scratch the coated surfaces of the panels.

D: PREPARATION TOOL

1. SPECIAL TOOL

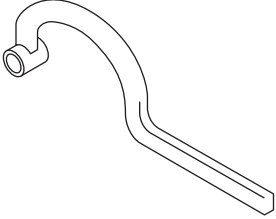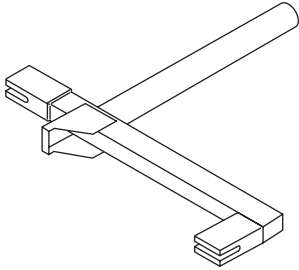ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 <p>ST-925610000</p>	925610000	WRENCH	Used for removing and installing door hinge.
 <p>ST99099FJ000</p>	99099FJ000	REMOVER	Used for removing and installing the trunk torsion bar.

2. GENERAL TOOL

TOOL NAME	REMARKS
Support jack	Used for supporting door panel.
Clip remover	Used for removing various types of clips.