

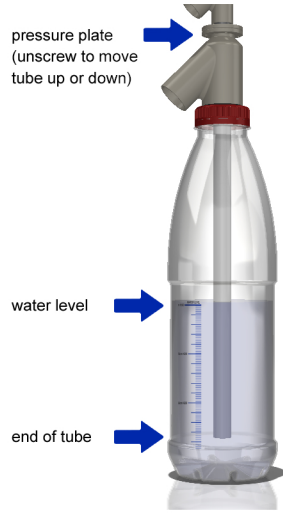
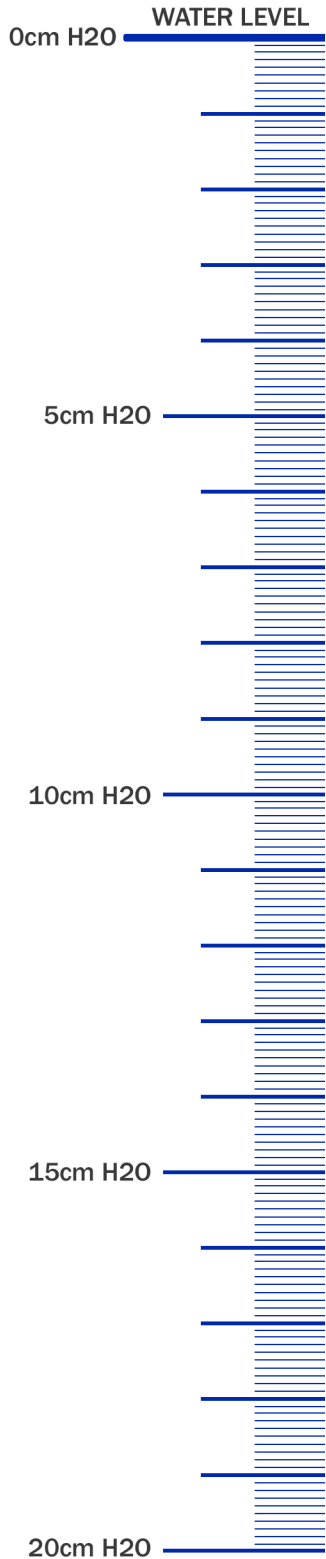




Pressure can be set by changing level of water or moving tube. Check if preset parameters do not result in spill. If they do use higher bottle. Check water level while inspiration. Use cold water.

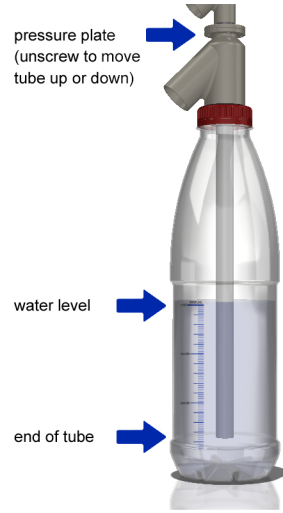

Pressure can be set by changing level of water or moving tube. Check if preset parameters do not result in spill. If they do use higher bottle. Check water level while inspiration. Use cold water.

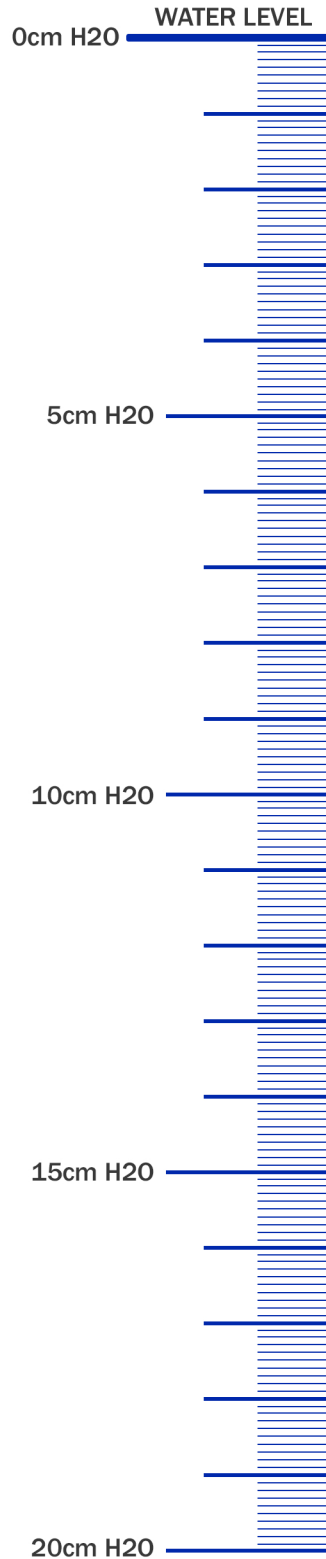

Pressure can be set by changing level of water or moving tube. Check if preset parameters do not result in spill. If they do use higher bottle. Check water level while inspiration. Use cold water.

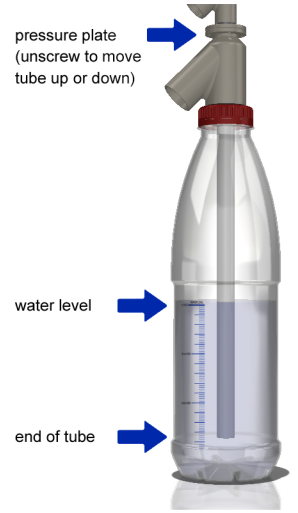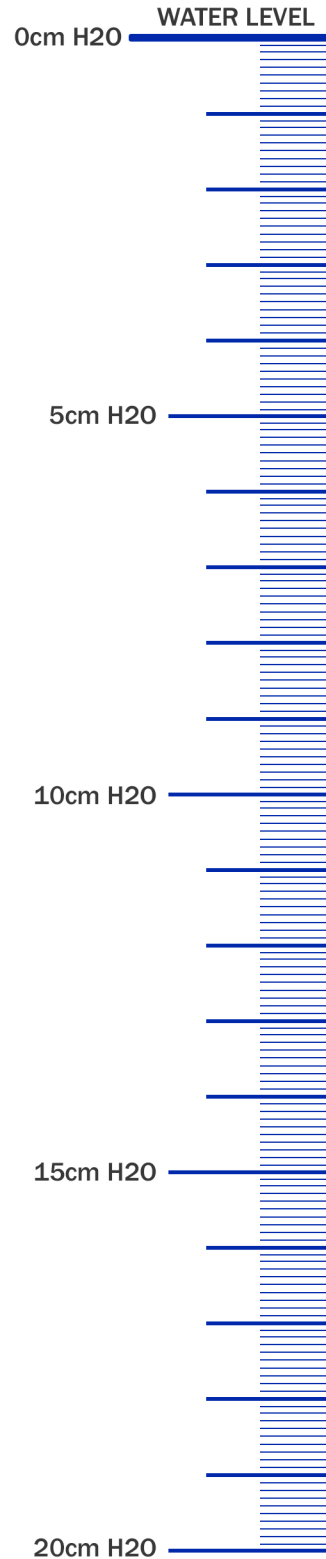

Pressure can be set by changing level of water or moving tube. Check if preset parameters do not result in spill. If they do use higher bottle. Check water level while inspiration. Use cold water.

