

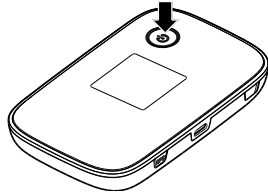


1. Connecting to the 4G LTE Hotspot


- a. Install the SIM card according to the illustration.

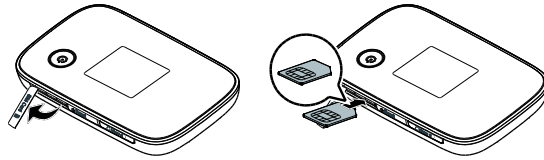

- b. Turn on the 4G LTE Hotspot: Press and hold the  button until the screen lights up, indicating that the device is turned on




- c. Establish a WiFi connection:
 - i. Select **Start > Control Panel > Network Connections > Wireless Network Connection**
 - ii. Click **View available wireless networks** to view a list of available wireless networks
 - iii. Select the wireless network connection with the 4G LTE Hotspot's SSID and click **Connect**. The SSID is available in the back of the device

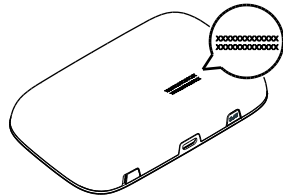


- iv. Enter the WiFi key available on the back of the device
- v. Wait a moment for the wireless network connection icon to appear in the system tray in the lower right corner of the computer screen. The wireless network connection is then established

2. Changing the 4G LTE Hotspot's SSID and password ("WPA Pre Shared Key")

- a. Follow the steps **Connecting to the 4G LTE Hotspot**
- b. Open the browser, and enter **http://192.168.1.1** in the address box
- c. Click on **Settings**

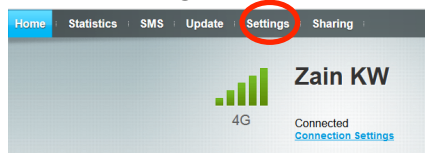


- d. Enter the user name and password to log in to the web management page
 - i. The default user name is admin.
 - ii. The default password is admin.

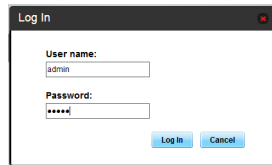


A small 'Log In' dialog box with a title bar. It contains two input fields: 'User name:' with the text 'admin' and 'Password:' with masked characters '*****'. At the bottom are two buttons: 'Log In' and 'Cancel'.

- e. Click **Next** on step 1 of 4

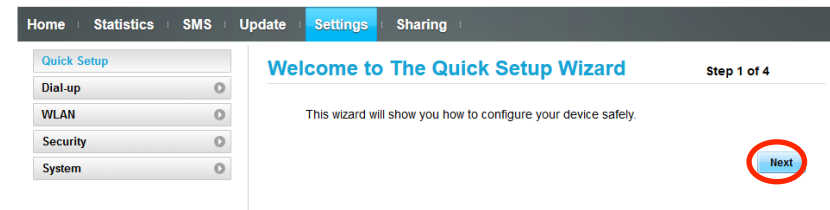


The 'Welcome to The Quick Setup Wizard' screen, Step 1 of 4. It features a sidebar with 'Quick Setup' selected and other options like 'Dial-up', 'WLAN', 'Security', and 'System'. The main area contains a welcome message and a 'Next' button circled in red.

- f. Click **Next** on step 2 of 4

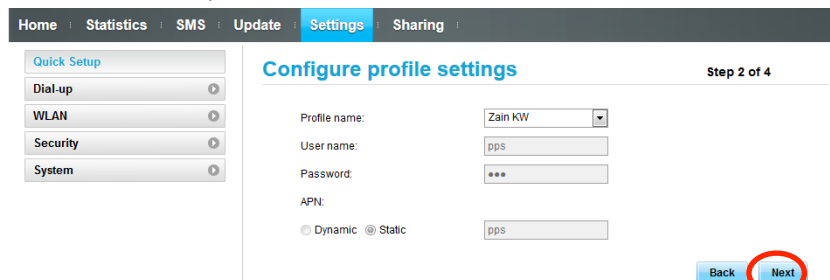


The 'Configure profile settings' screen, Step 2 of 4. It shows fields for 'Profile name' (Zain KW), 'User name' (pps), 'Password' (***), and 'APN' (pps). There are radio buttons for 'Dynamic' and 'Static' APN. A 'Next' button is circled in red.

- g. Enter a new **SSID** and **WPA pre-shared key** and then press **Next** on step 3 of 4

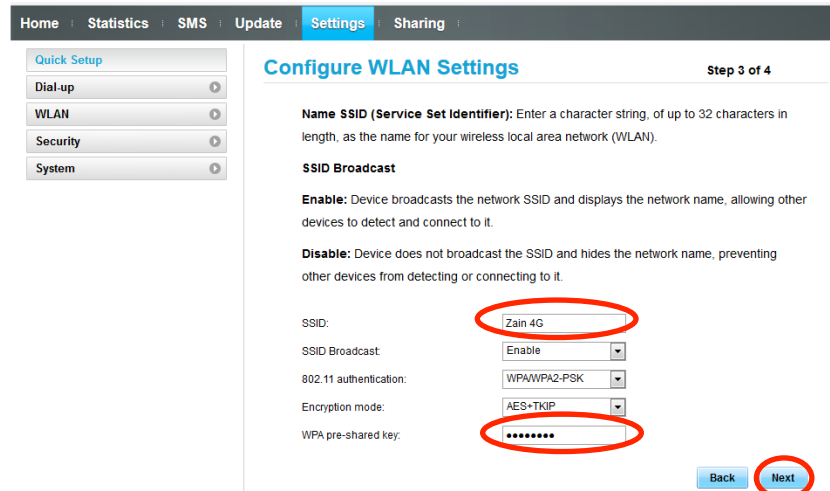

The 'Configure WLAN Settings' screen, Step 3 of 4. It includes instructions for SSID and SSID Broadcast. Fields for 'SSID' (Zain 4G), 'SSID Broadcast' (Enable), '802.11 authentication' (WPAWPA2-PSK), 'Encryption mode' (AES+TKIP), and 'WPA pre-shared key' (masked) are shown. The 'Next' button is circled in red.

- h. Click **Finish** on step 4 of 4

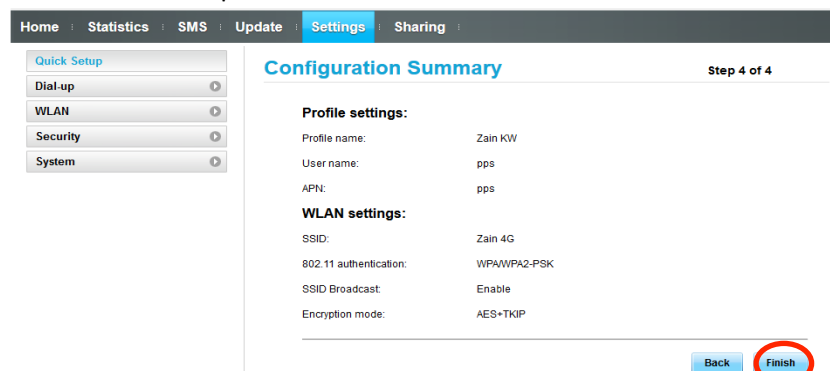

The 'Configuration Summary' screen, Step 4 of 4. It displays a summary of the configured settings for the profile and WLAN. A 'Finish' button is circled in red.


Profile settings:	
Profile name:	Zain KW
User name:	pps
APN:	pps

WLAN settings:	
SSID:	Zain 4G
802.11 authentication:	WPAWPA2-PSK
SSID Broadcast:	Enable
Encryption mode:	AES+TKIP


- i. The 4G LTE Hotspot will restart
- j. Follow the steps **Connecting to the 4G LTE Hotspot** using the newly create SSID and Key

3. Disabling the SIM PIN

- a. If the Hotspot's screen displays **Enter PIN**, follow the steps **Connecting to the 4G LTE Hotspot**

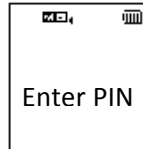

- b. Open the browser, and enter **http://192.168.1.1** in the address box
- c. Enter the SIM PIN available with the SIM pack and click **Apply**

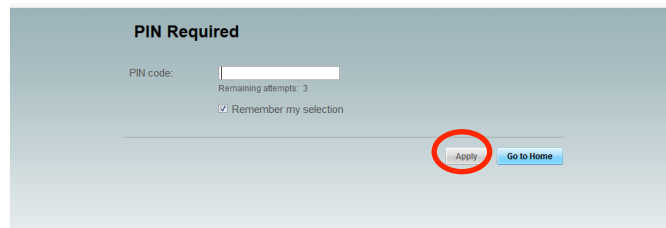

Topping up

1- Open a web browser (Internet Explorer, Chrome, Firefox...etc.) and go to connect.kw.zain.com.

2- Through this page, you can check your subscription's details, including the remaining cap, and pay your bill.