


HOPR Node PC


Your Quickstart Manual

1


Unpack + Check

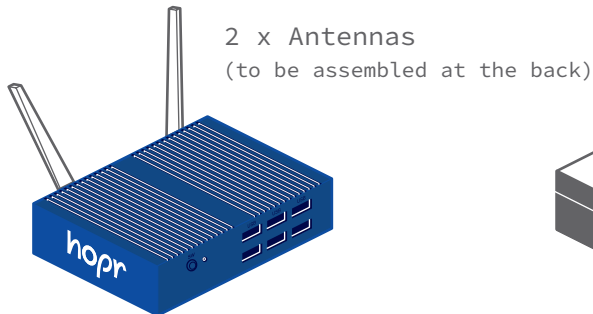

1 x HOPR Node PC

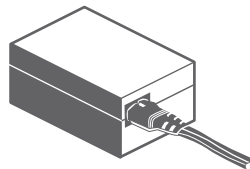

1 x Power Adapter

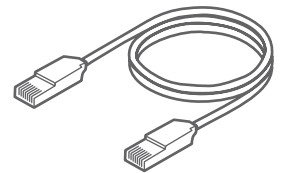



1 x Ethernet Cable

2

Connect to Your Router

Use the ethernet cable to connect your HOPR Node PC to your router.

(Router: make sure you use one of the numbered slots / usually yellow)

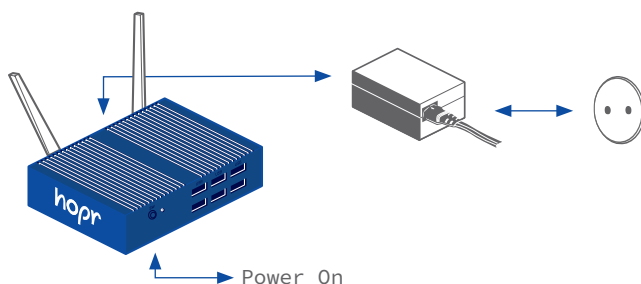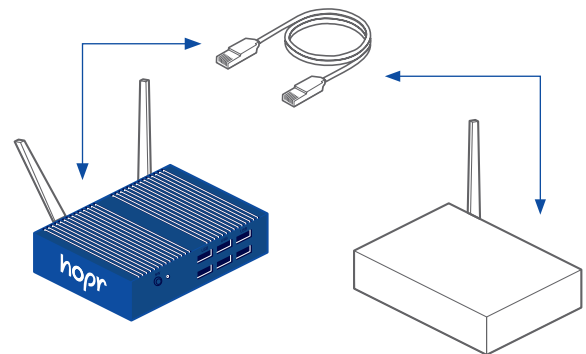

Power On

3

Connect your HOPR Node PC to an electrical outlet. Press the power button.

(Please wait up to 2 minutes for your HOPR node to fully start. A light will blink to indicate the node is on.)

4

Manage Your HOPR Node PC

- 4.1 Connect to the WiFi your HOPR Node PC creates: **AVADO**
- 4.2 Use the password for the WiFi network: **avado123**
- 4.3 Afterwards, go to: **ava.do/start**
- 4.4 Wait 48 hours for the Ethereum Node to sync
- 4.5 Login to” **HOPRnet.org/setup** to connect your wallet. Congratulations! Now you can manage your HOPR node PC