





RA121099C Wiring Harness Mech Drawings

6.0L CES ECM08 (LY6 9NH)


8-Pin Boat
Harness
Connector


Check Gauges Lamp (CGL) Circuit	TACH	Coolant Temperature Sender	Buzzer	Ignition Feed	Malfunction Indicator Lamp (MIL)	Starter Circuit	Oil Pressure Sender
1	2	3	4	5	6	7	8

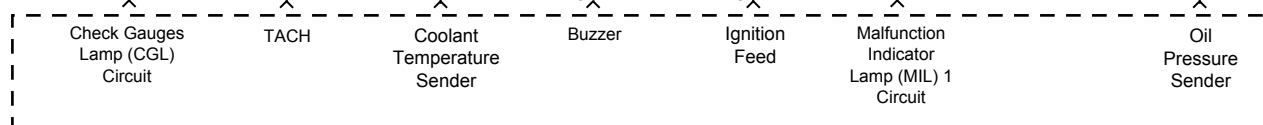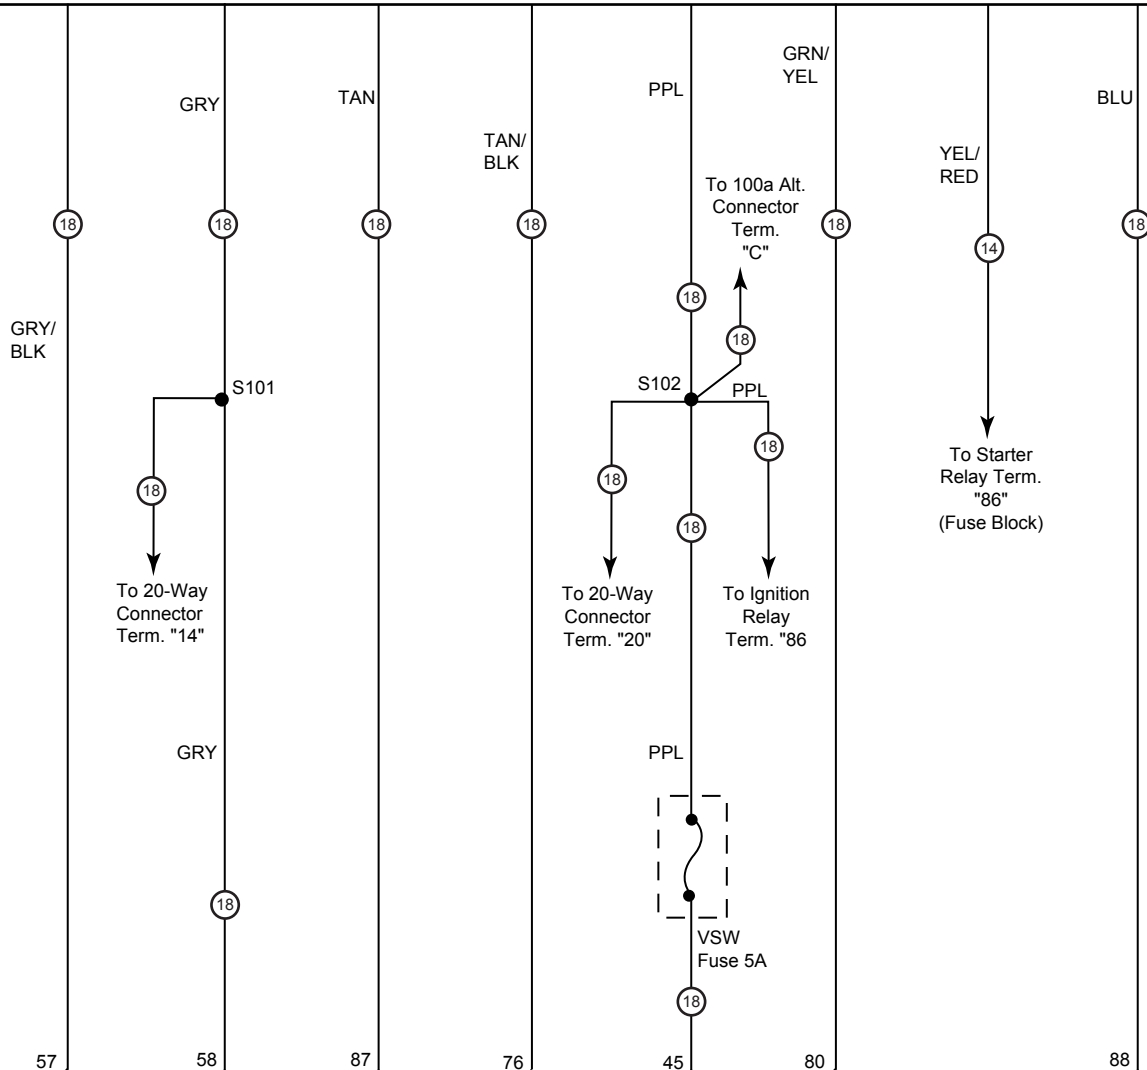



2-Pin Boat
Harness
Connector


Power to Panel	Panel Ground
1	2

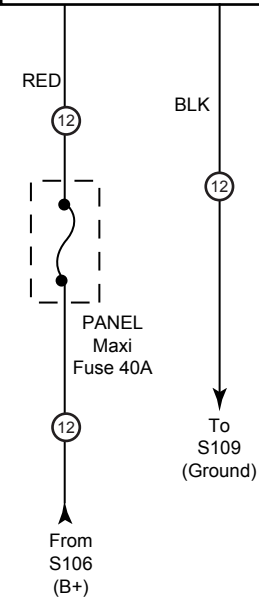





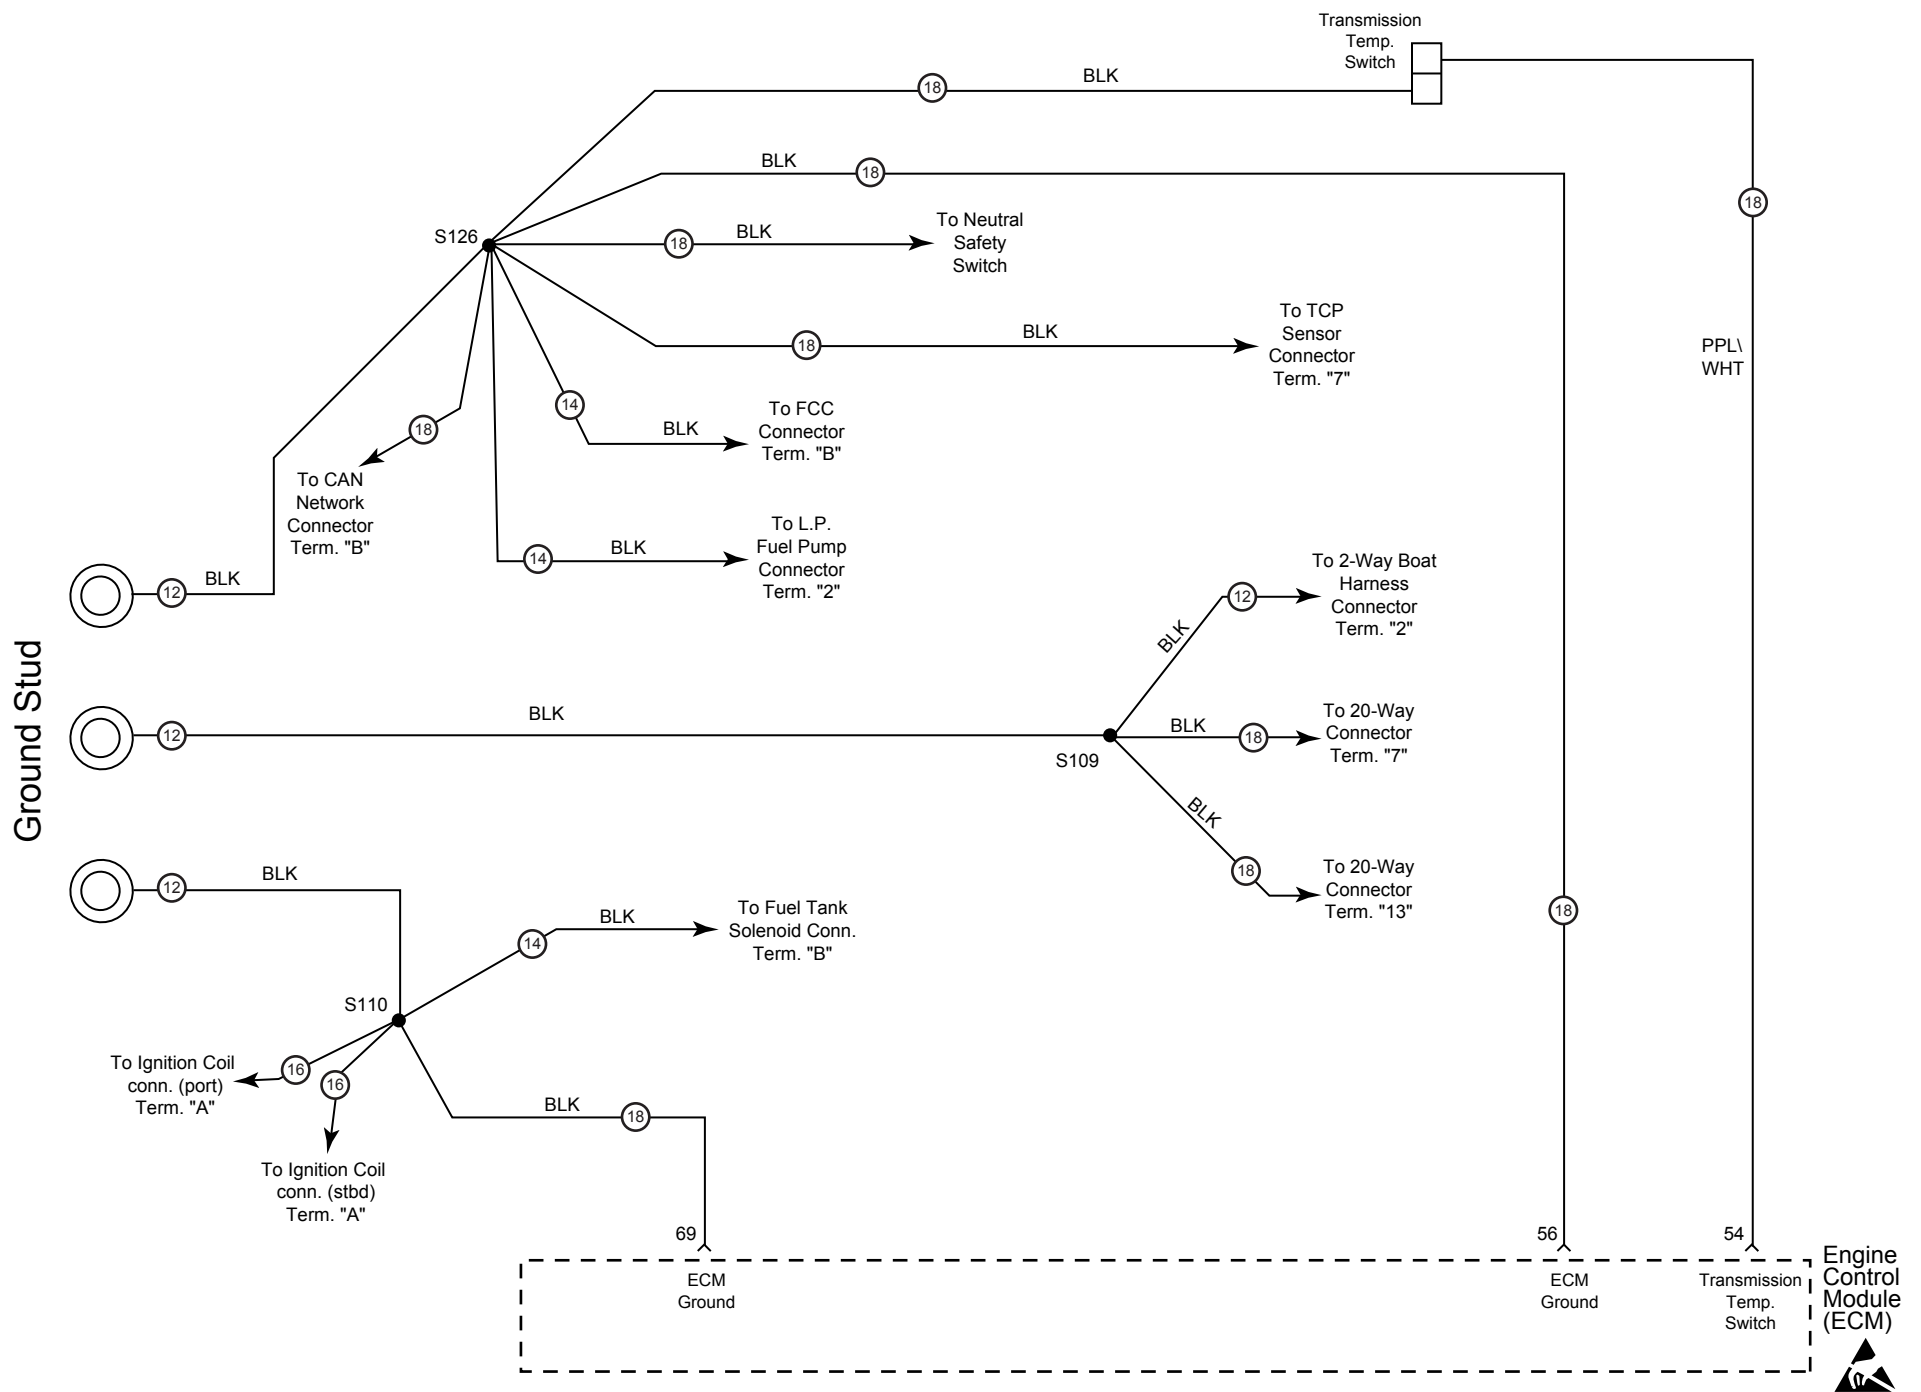





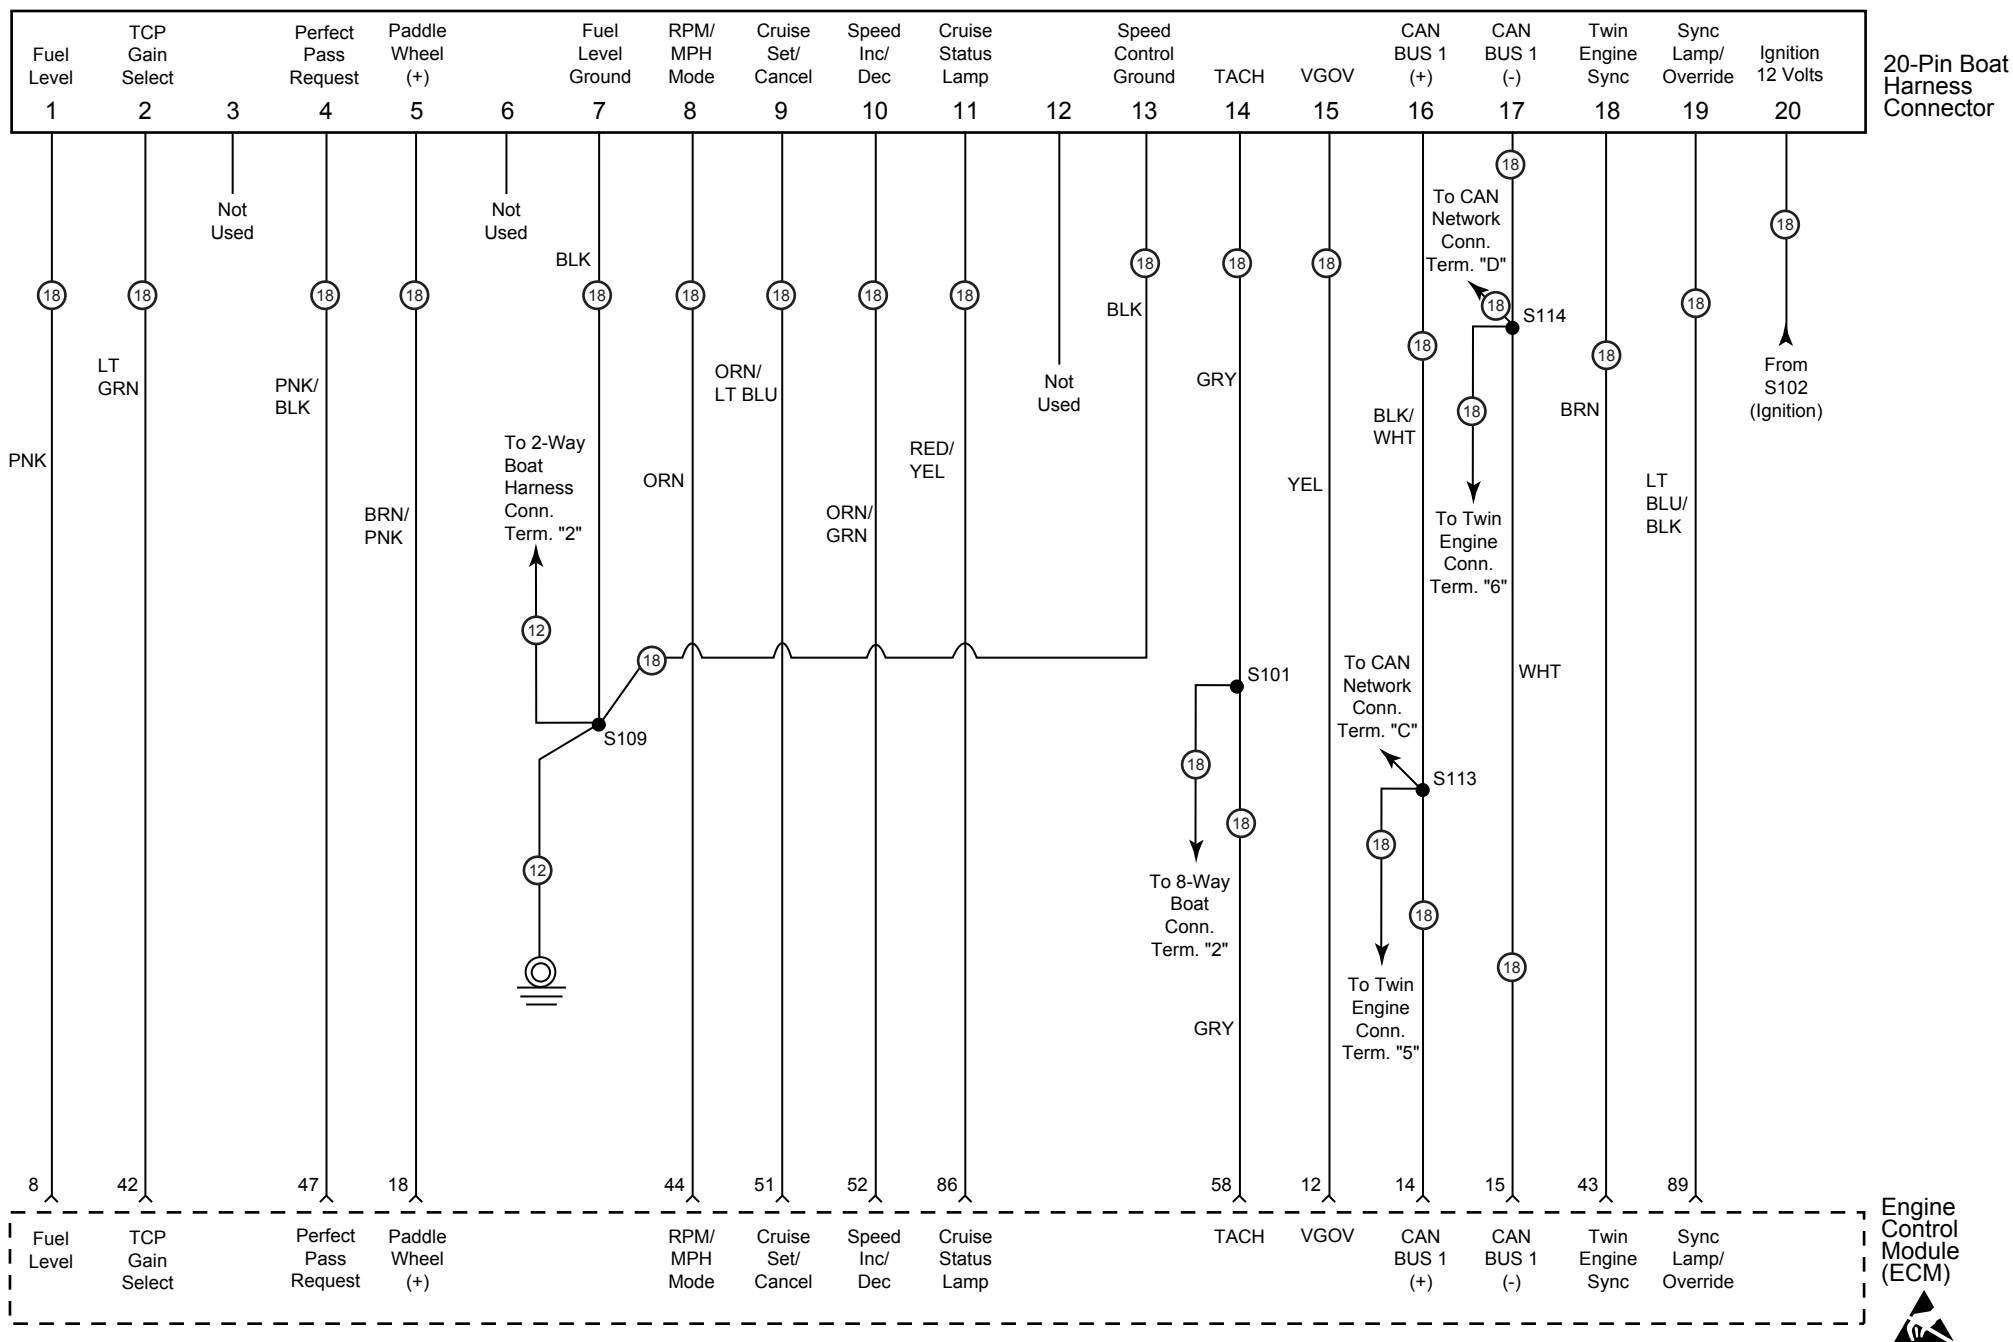





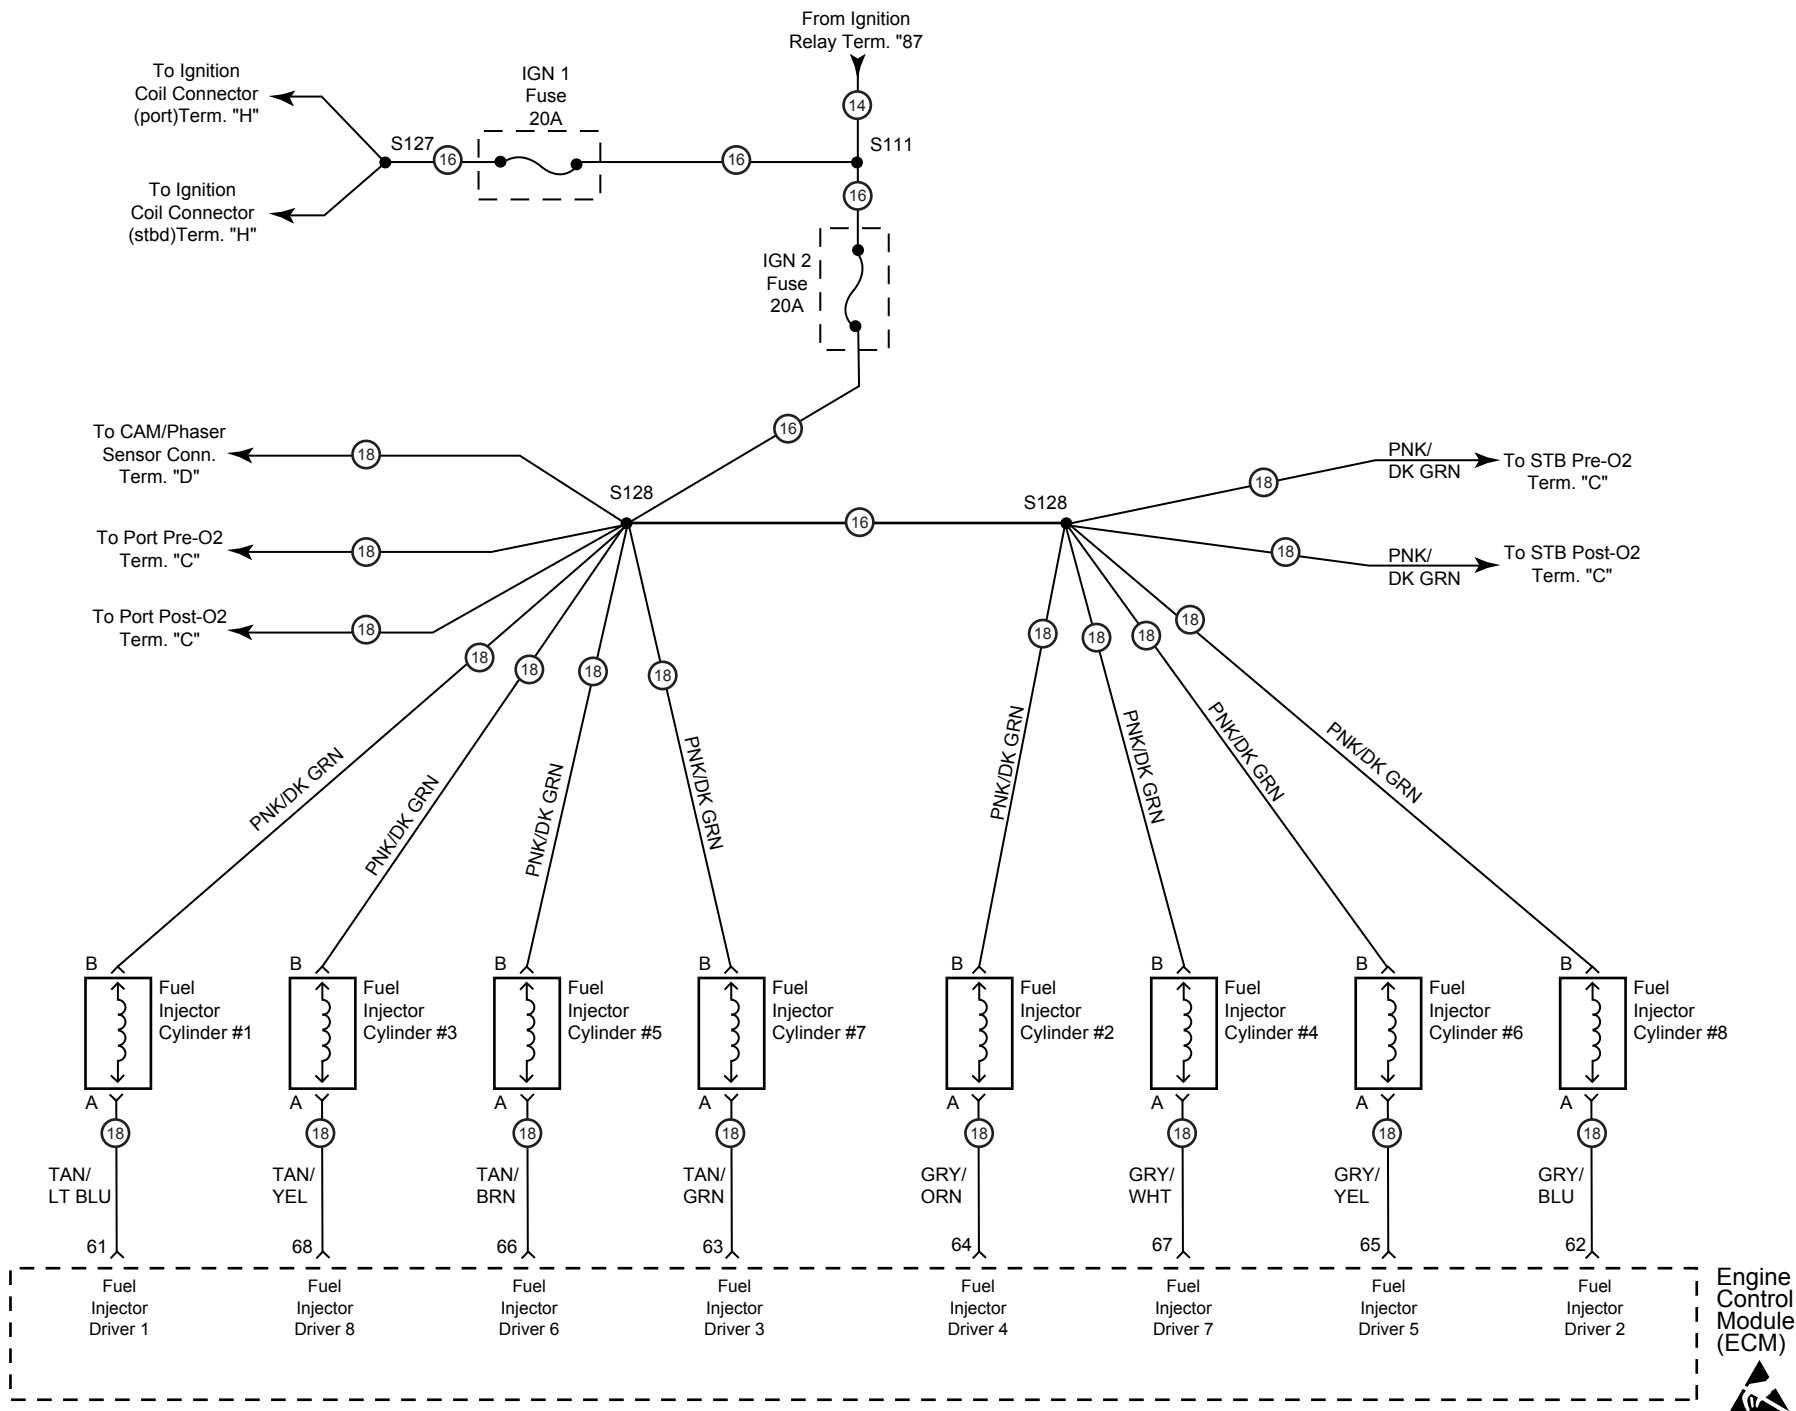




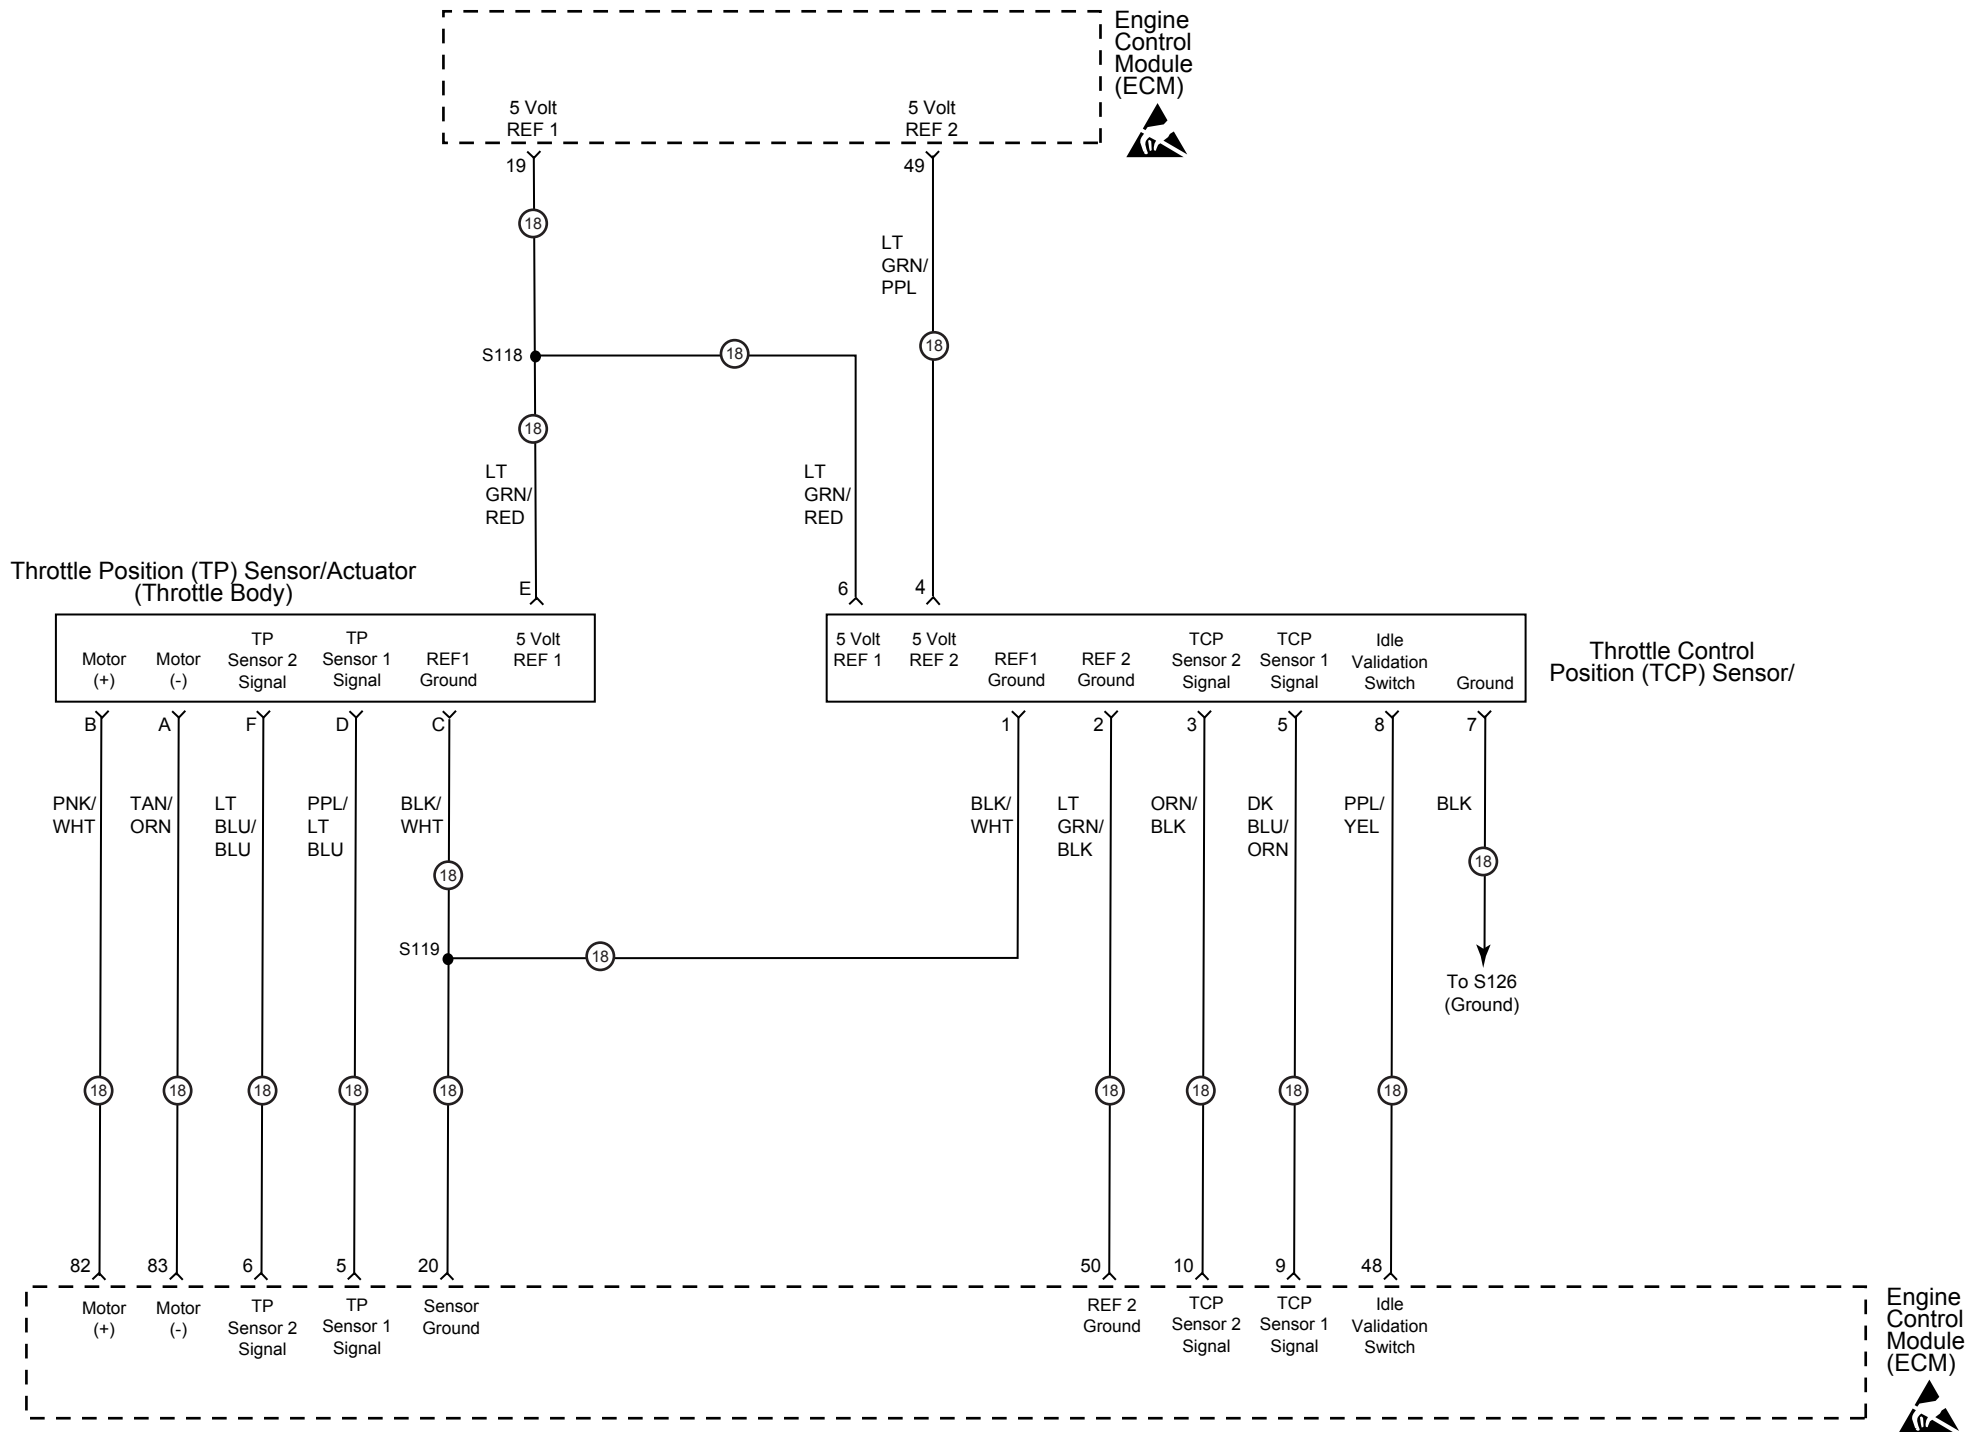

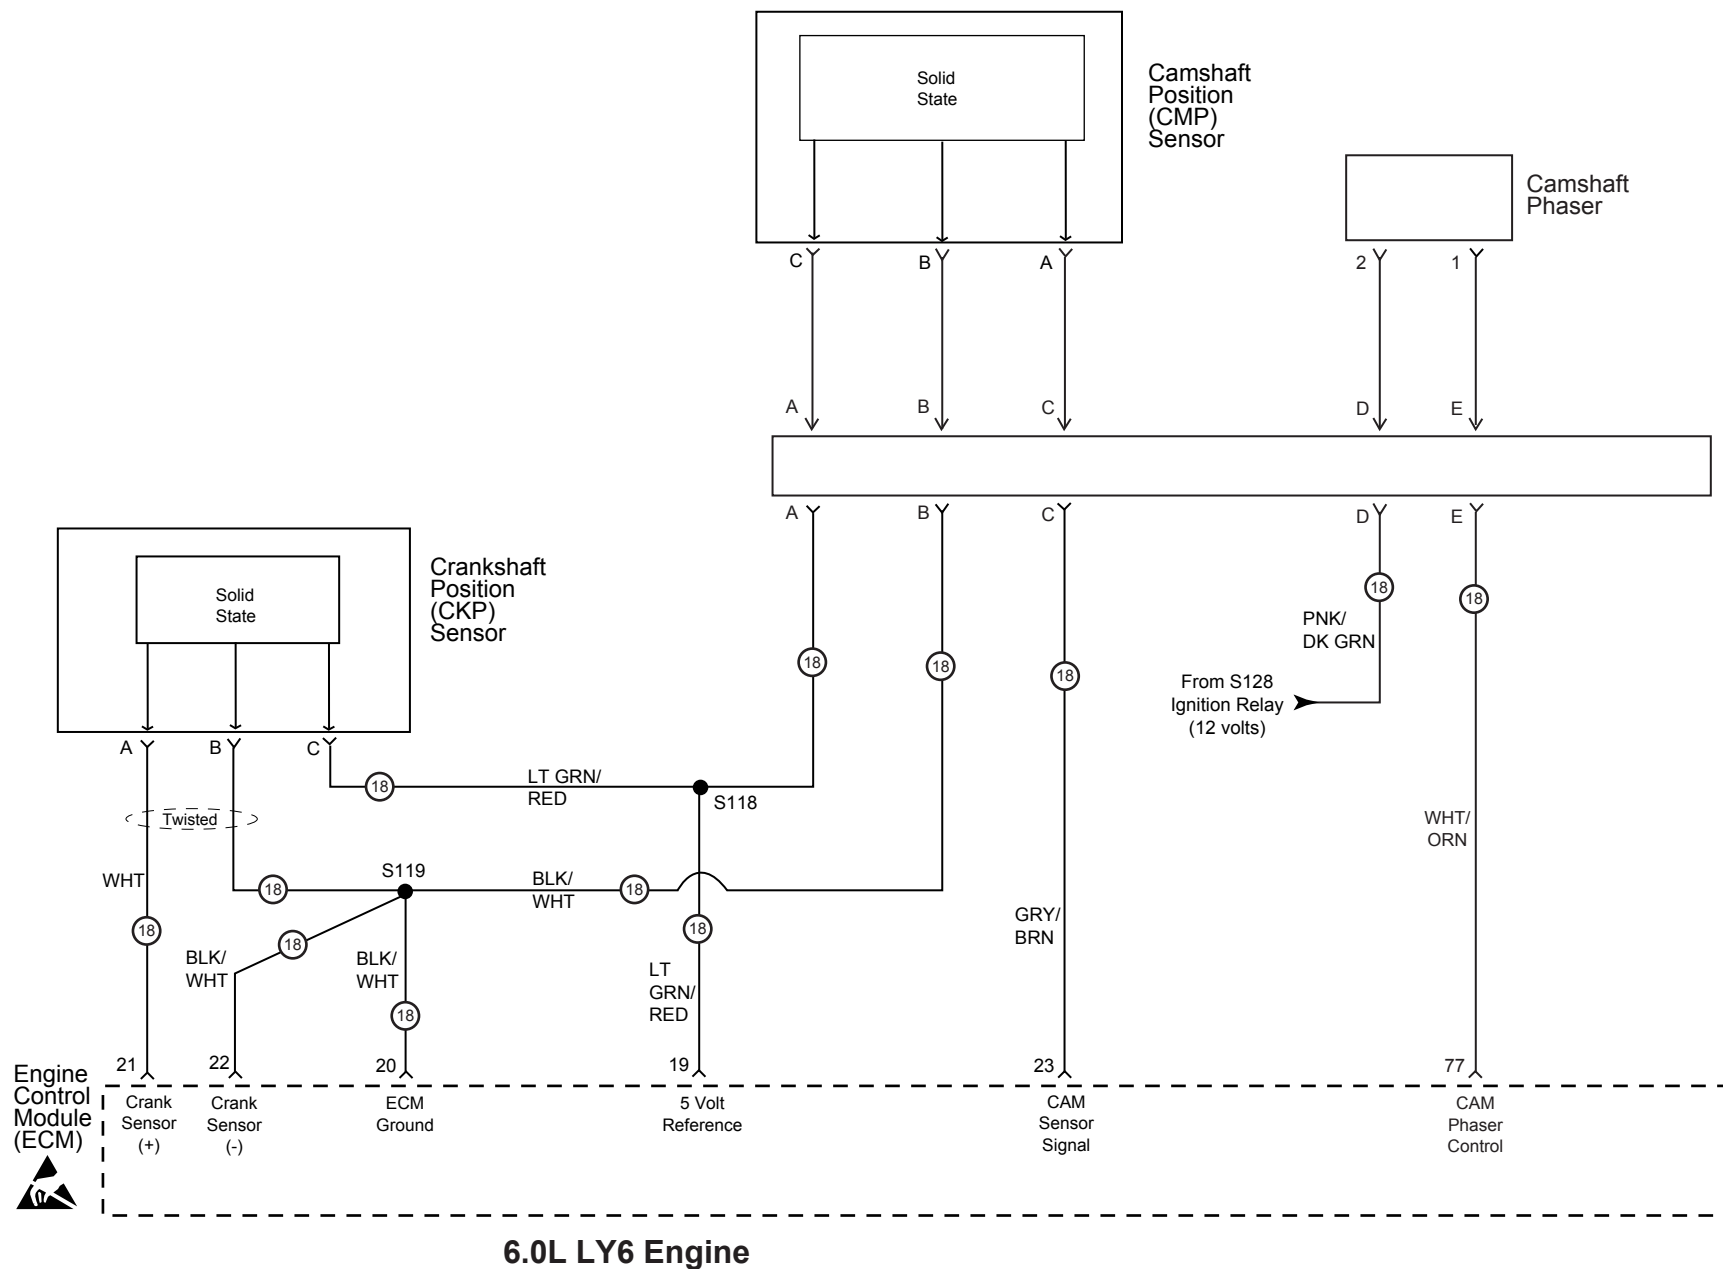


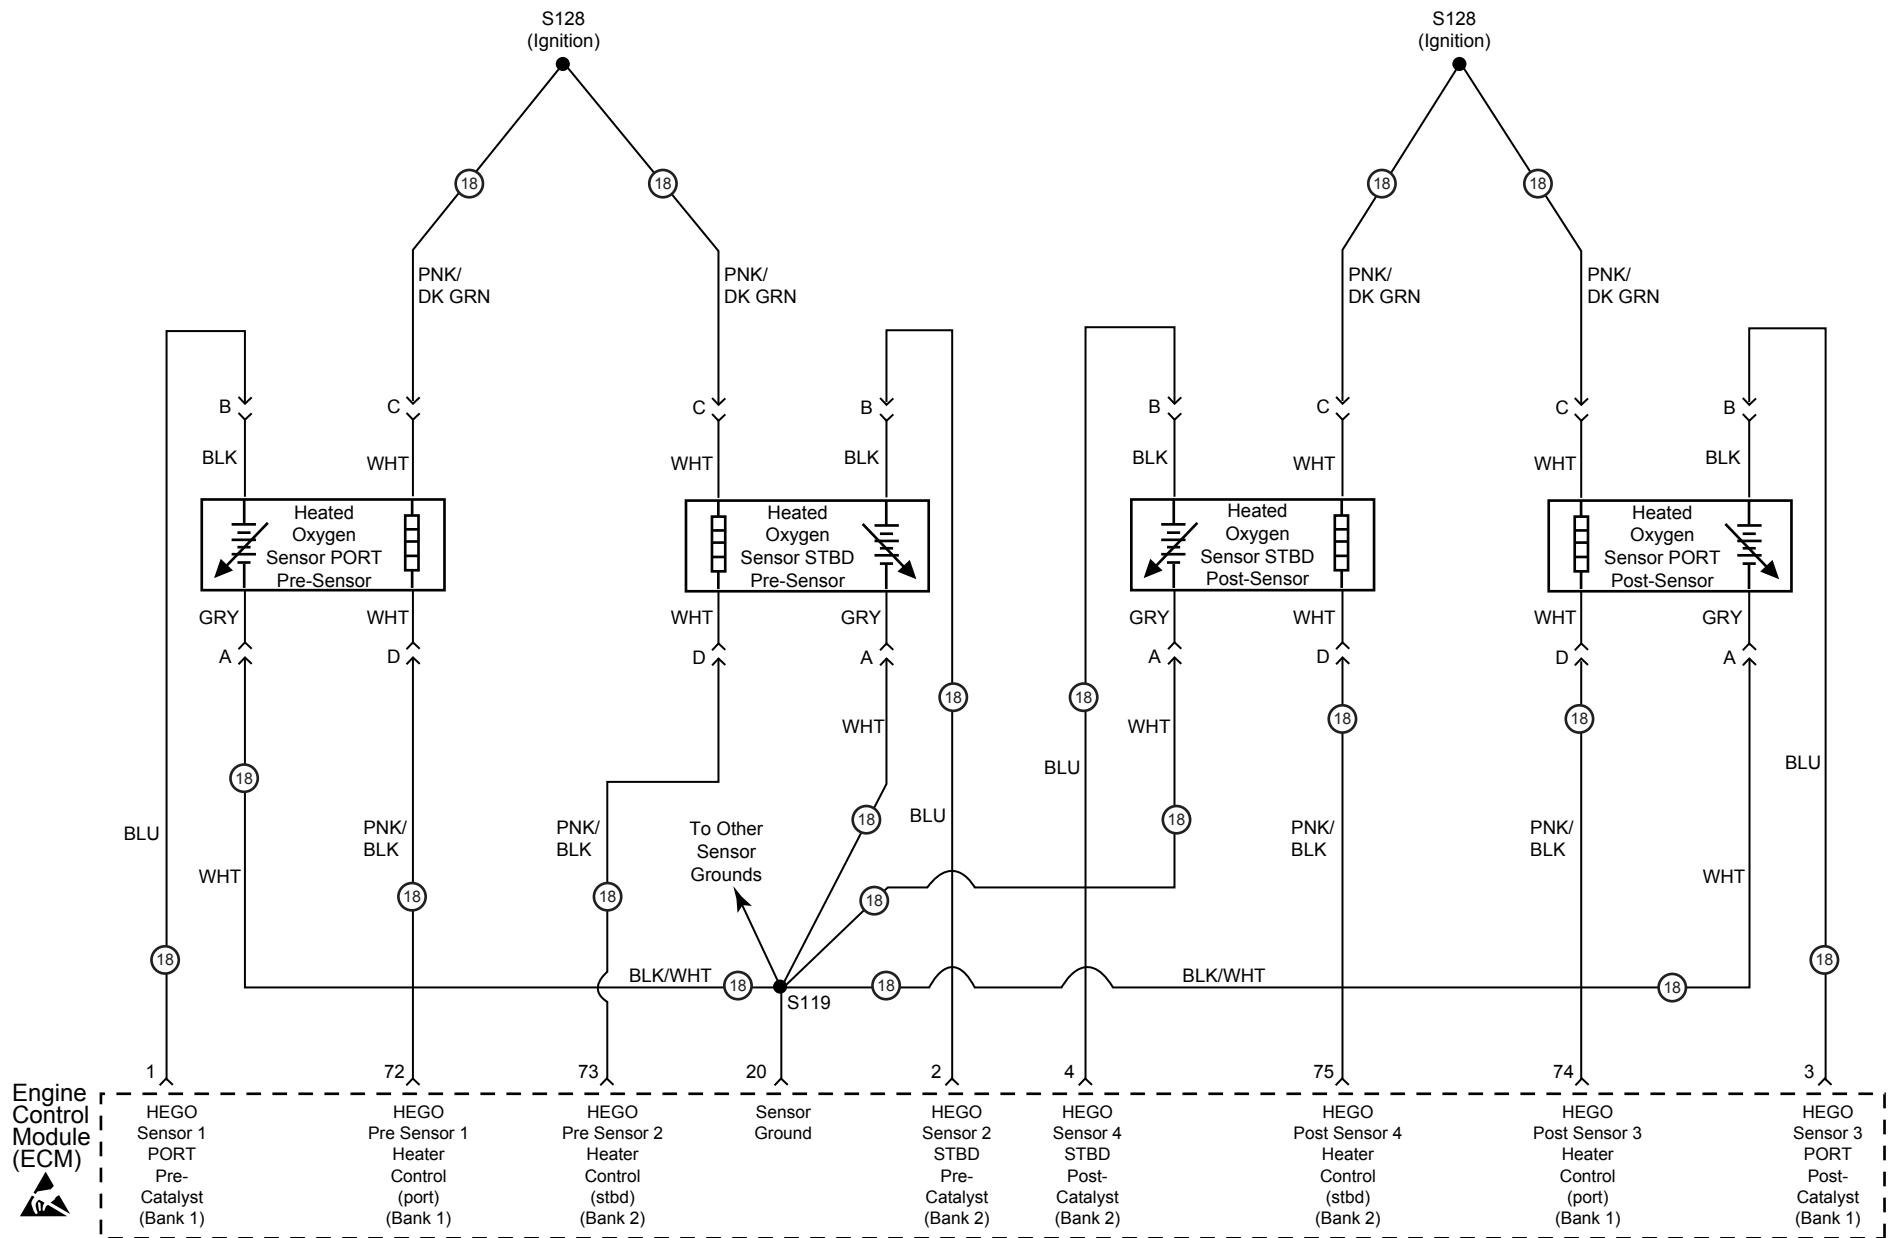

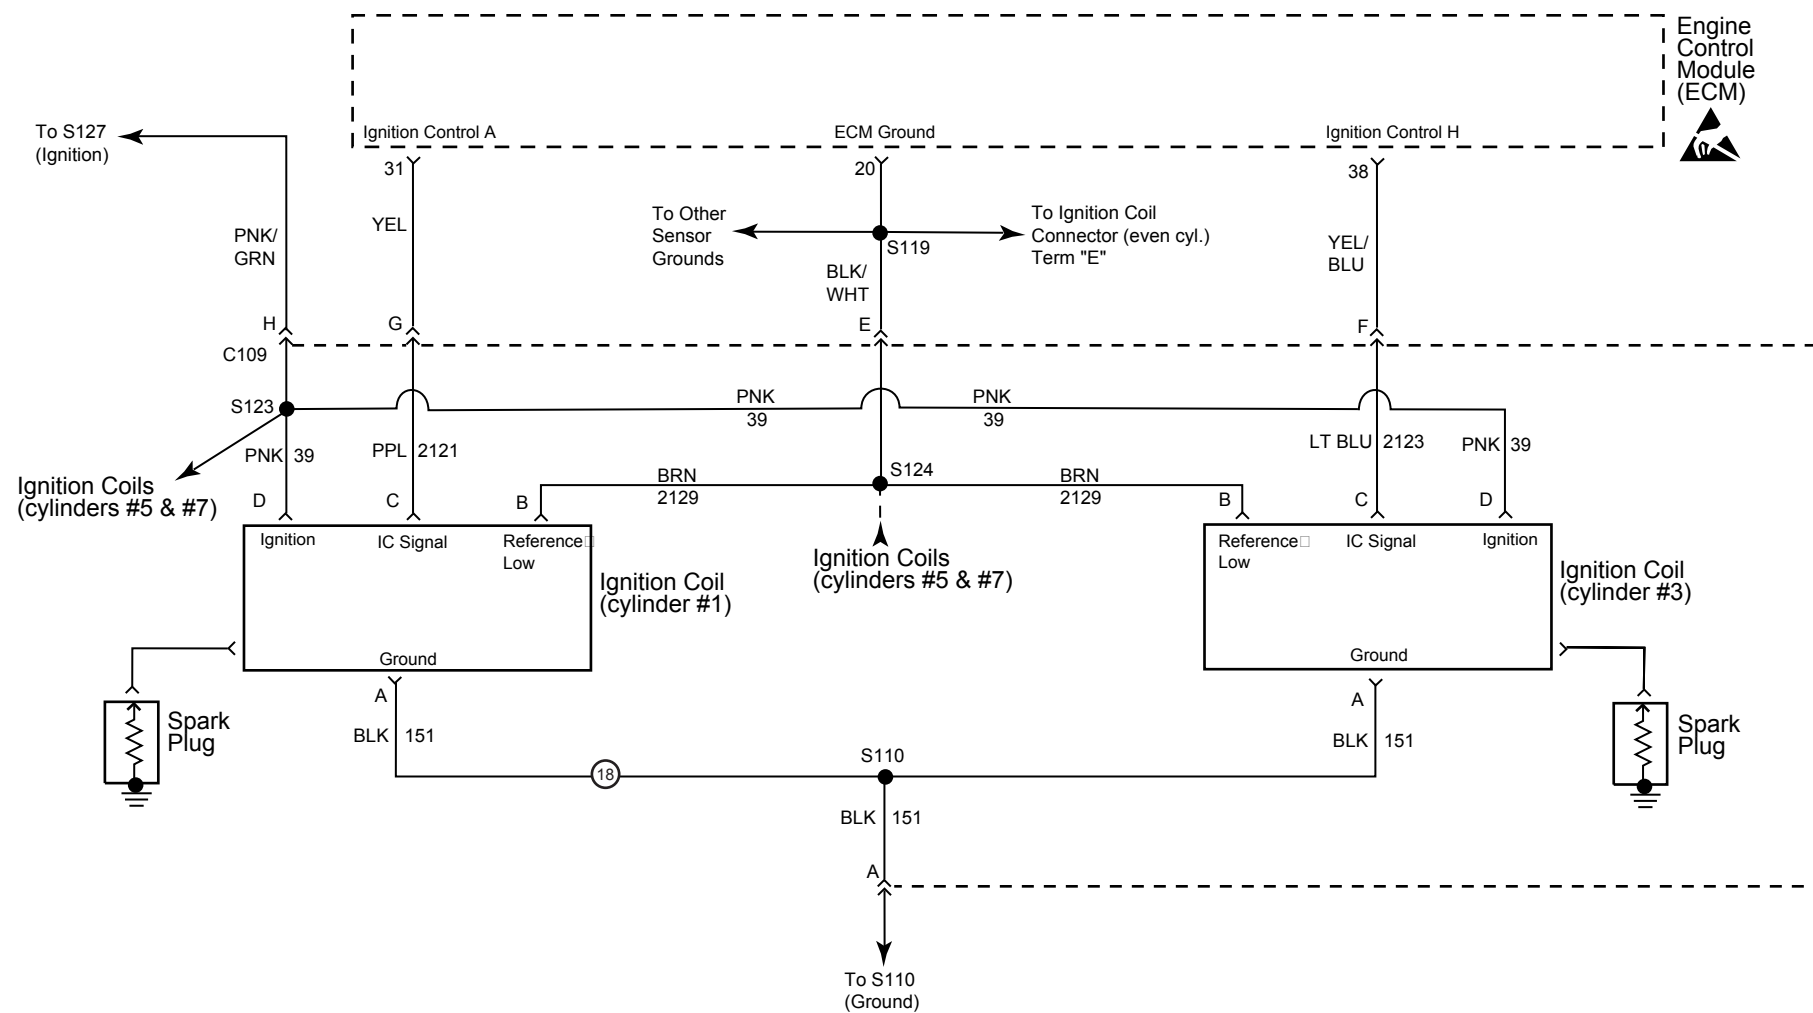


Firing Order: 1 - 8 - 7 - 2 - 6 - 5 - 4 - 3

Ignition Control: A - B - C - D - E - F - G - H

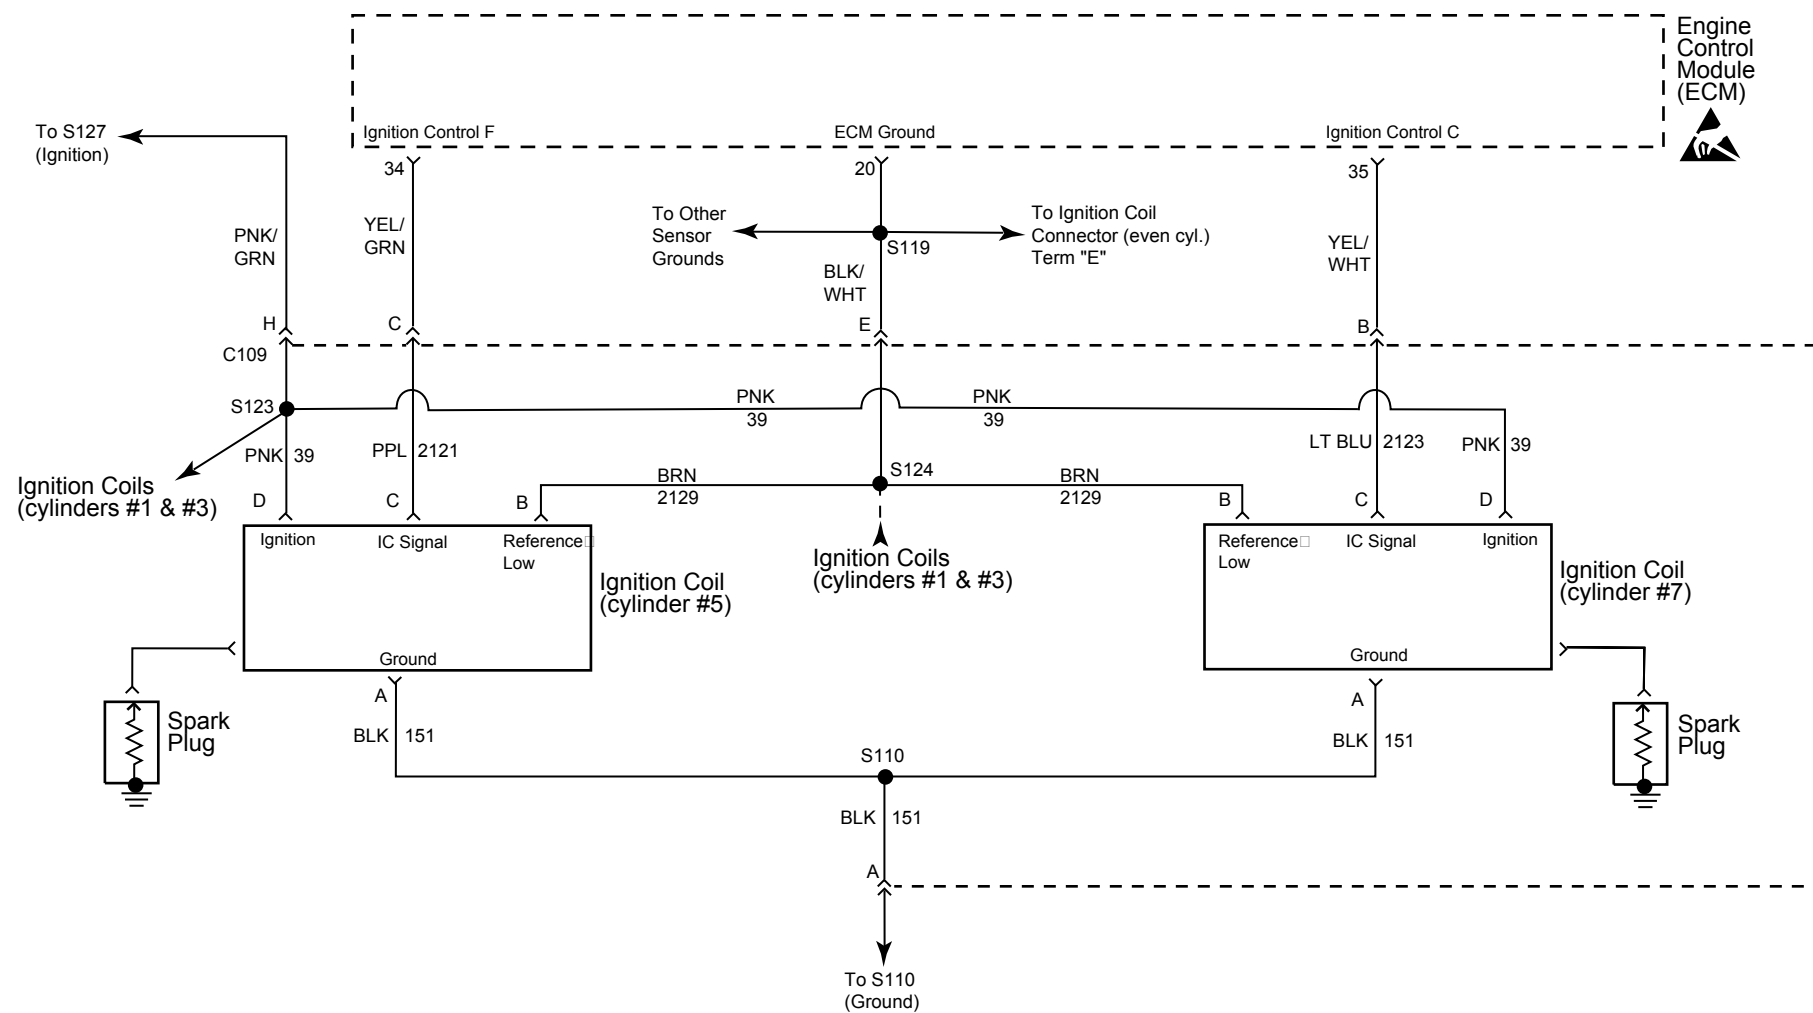


Firing Order: 1 - 8 - 7 - 2 - 6 - 5 - 4 - 3

Ignition Control: A - B - C - D - E - F - G - H

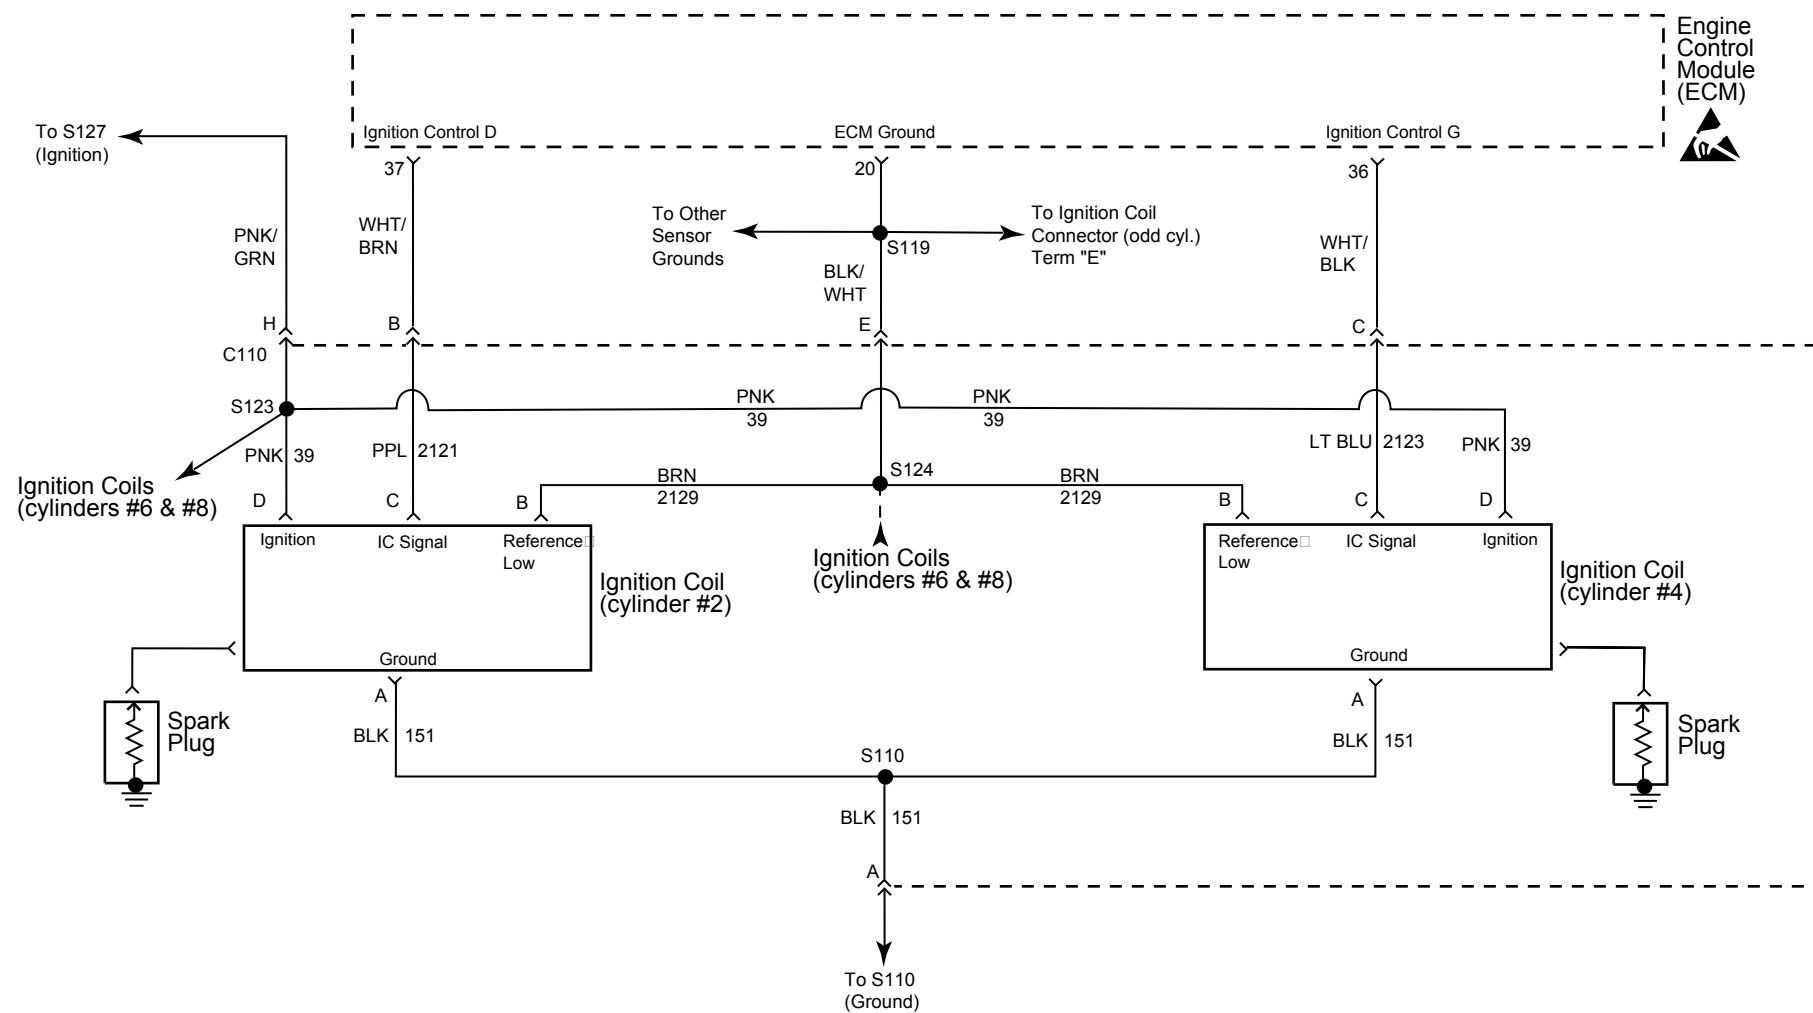

Firing Order: 1 - 8 - 7 - 2 - 6 - 5 - 4 - 3

Ignition Control: A - B - C - D - E - F - G - H

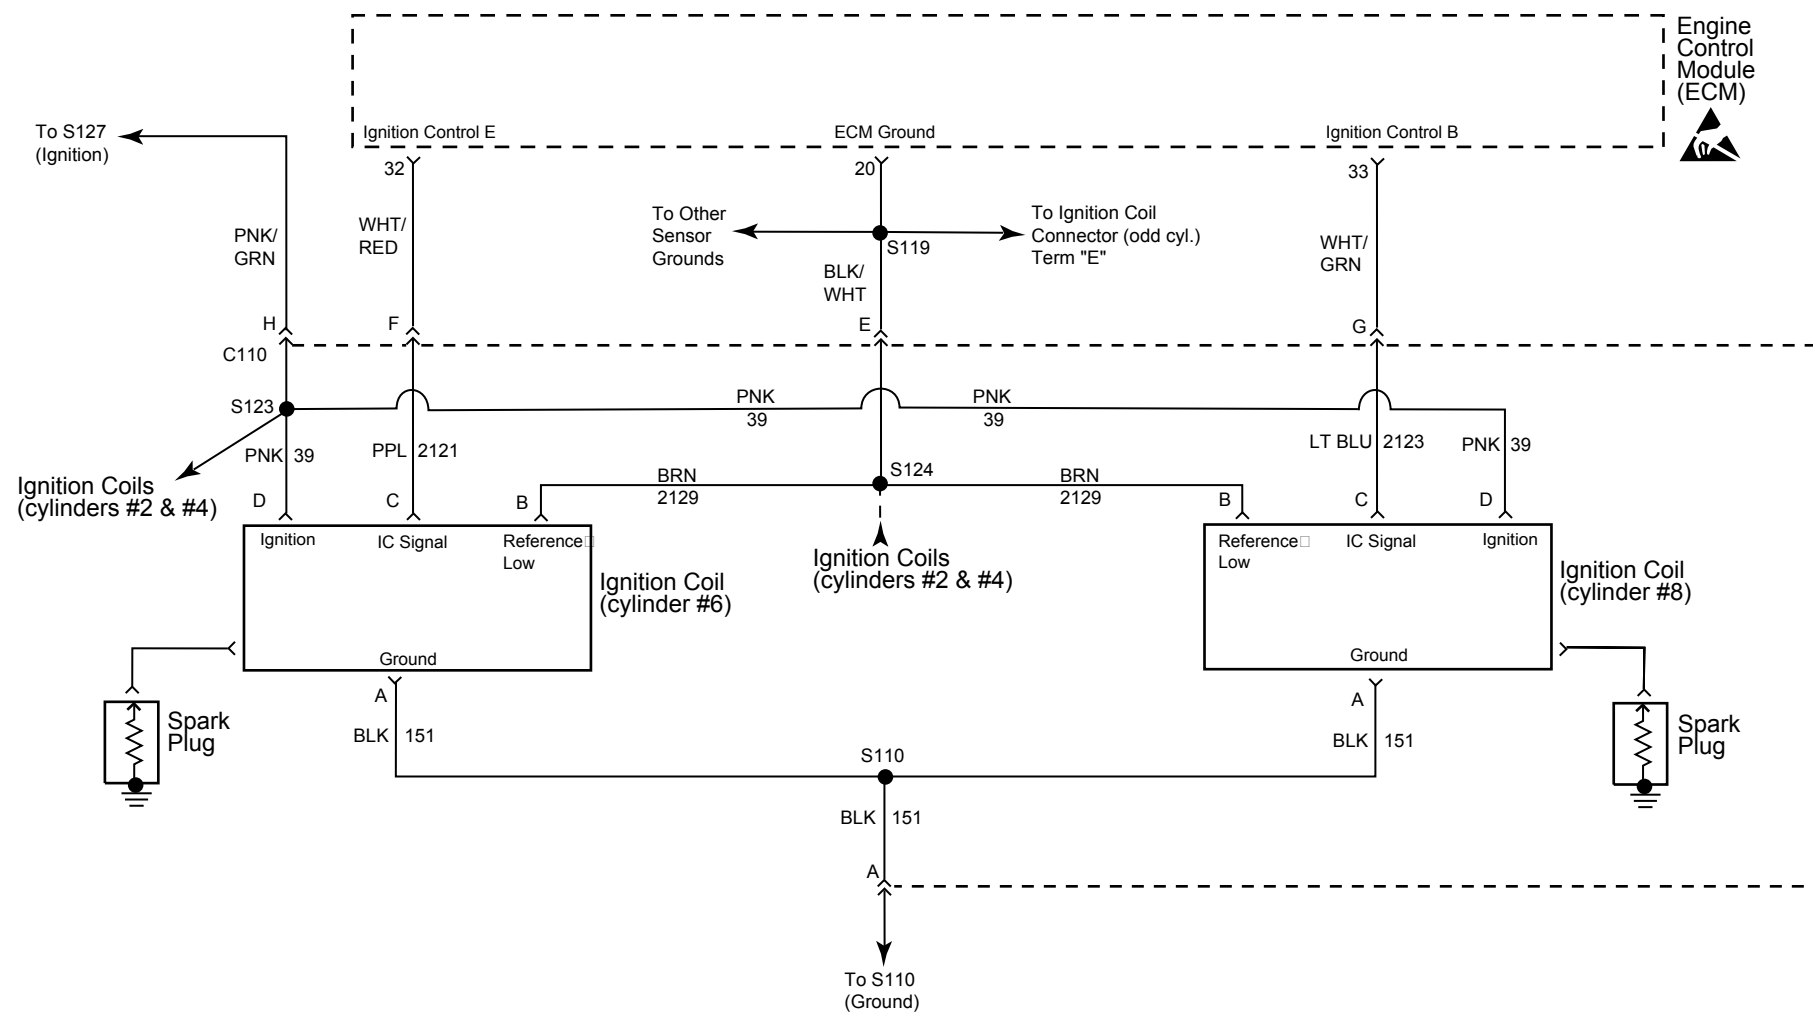

Firing Order: 1 - 8 - 7 - 2 - 6 - 5 - 4 - 3

Ignition Control: A - B - C - D - E - F - G - H