




RA121088 Wiring Harness Mech Drawings

6.0L ECM07 (LQ4)


8-Pin Boat
Harness
Connector


1	2	3	4	5	6	7	8
	TACH	Coolant Temperature Sender	Buzzer	Ignition Feed	Malfunction Indicator Lamp (MIL)	Starter Circuit	Oil Pressure Sender

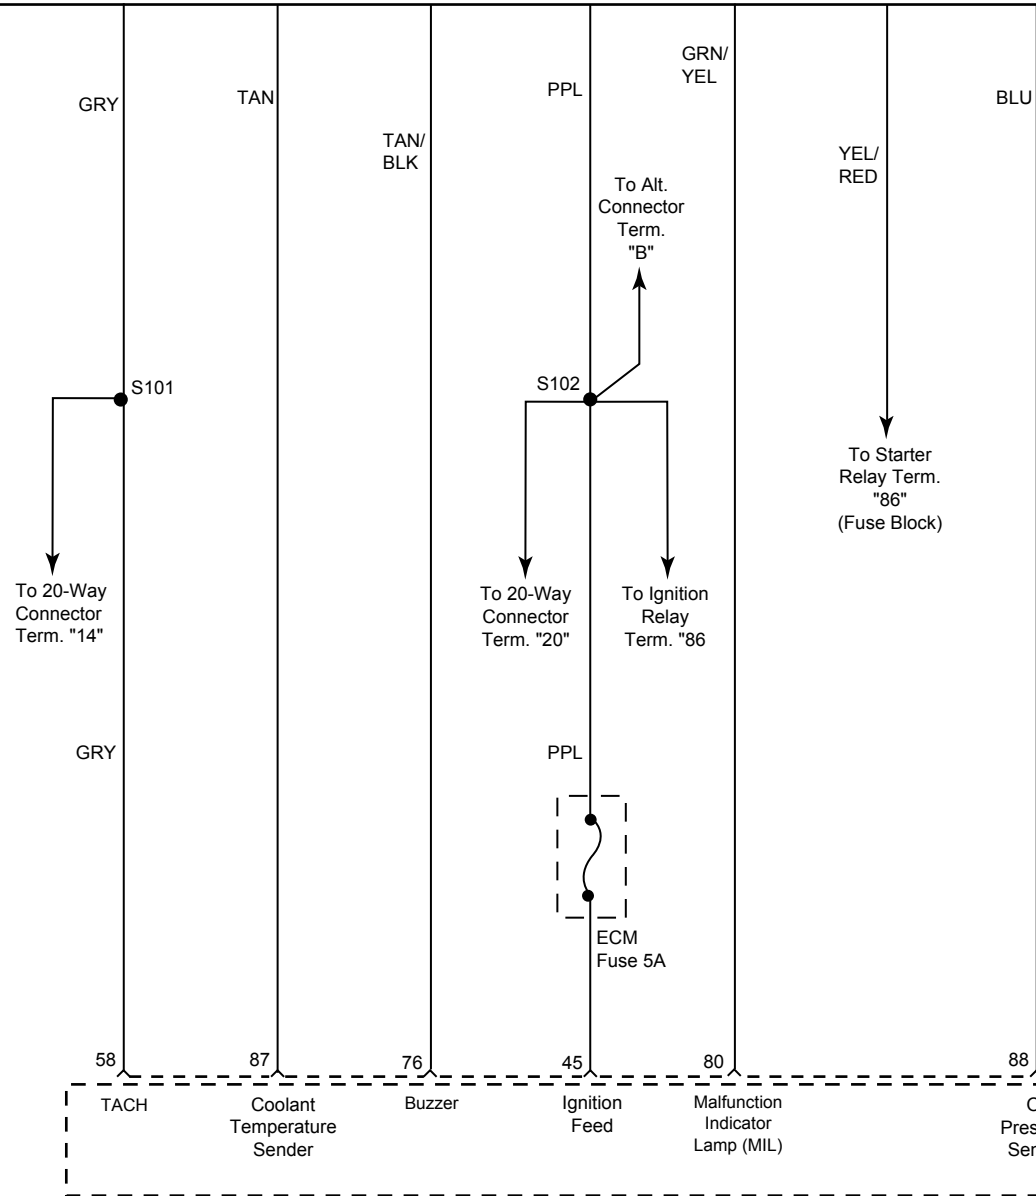



2-Pin Boat
Harness
Connector


1	2
Power to Panel	Panel Ground

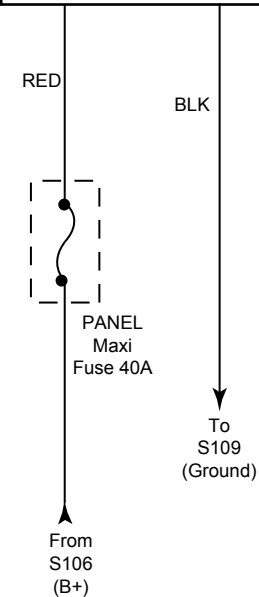


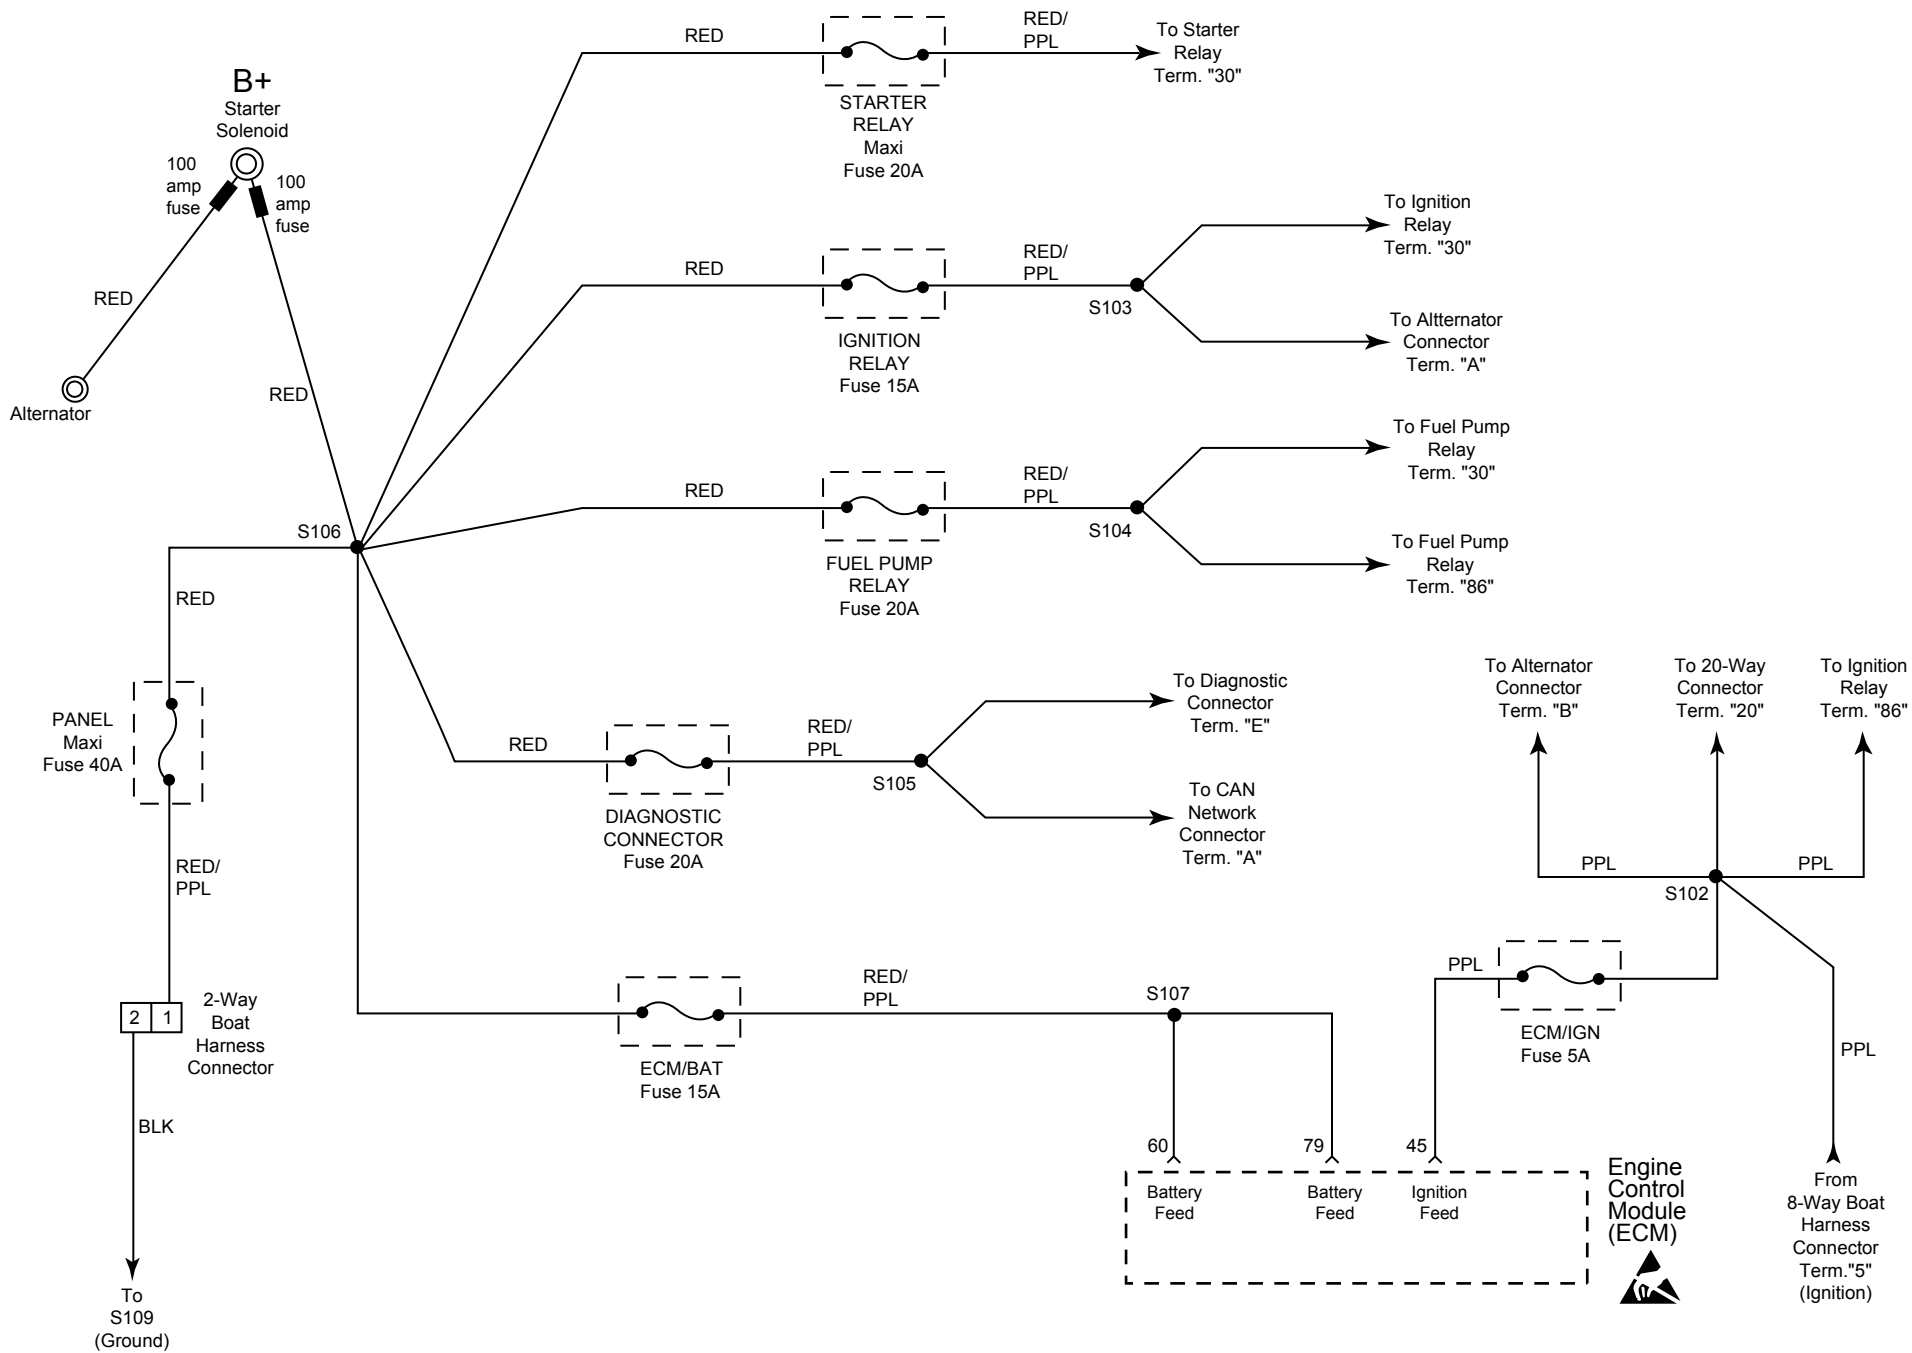


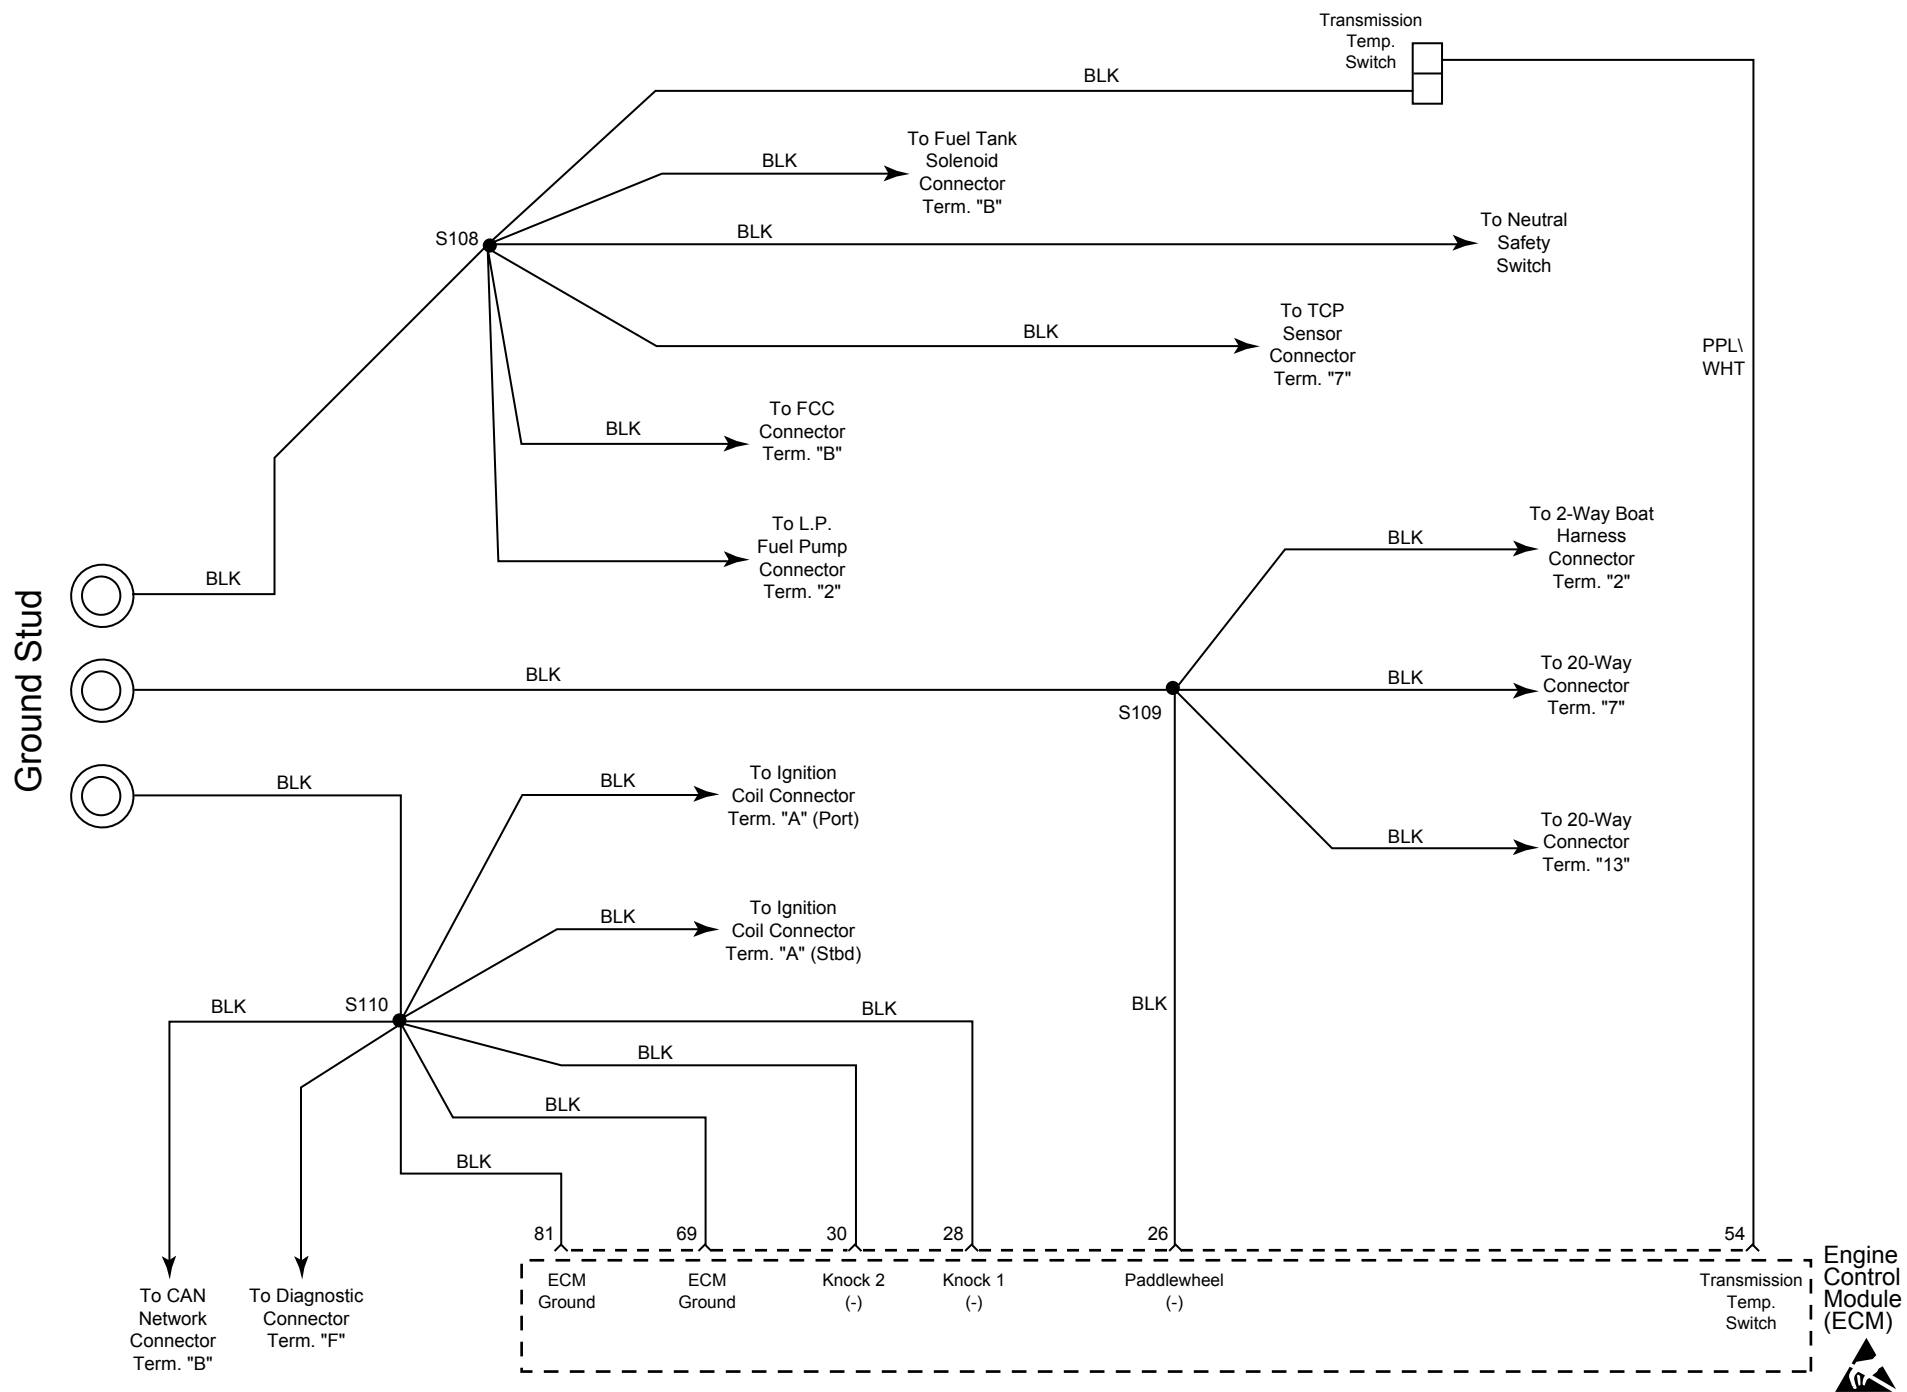


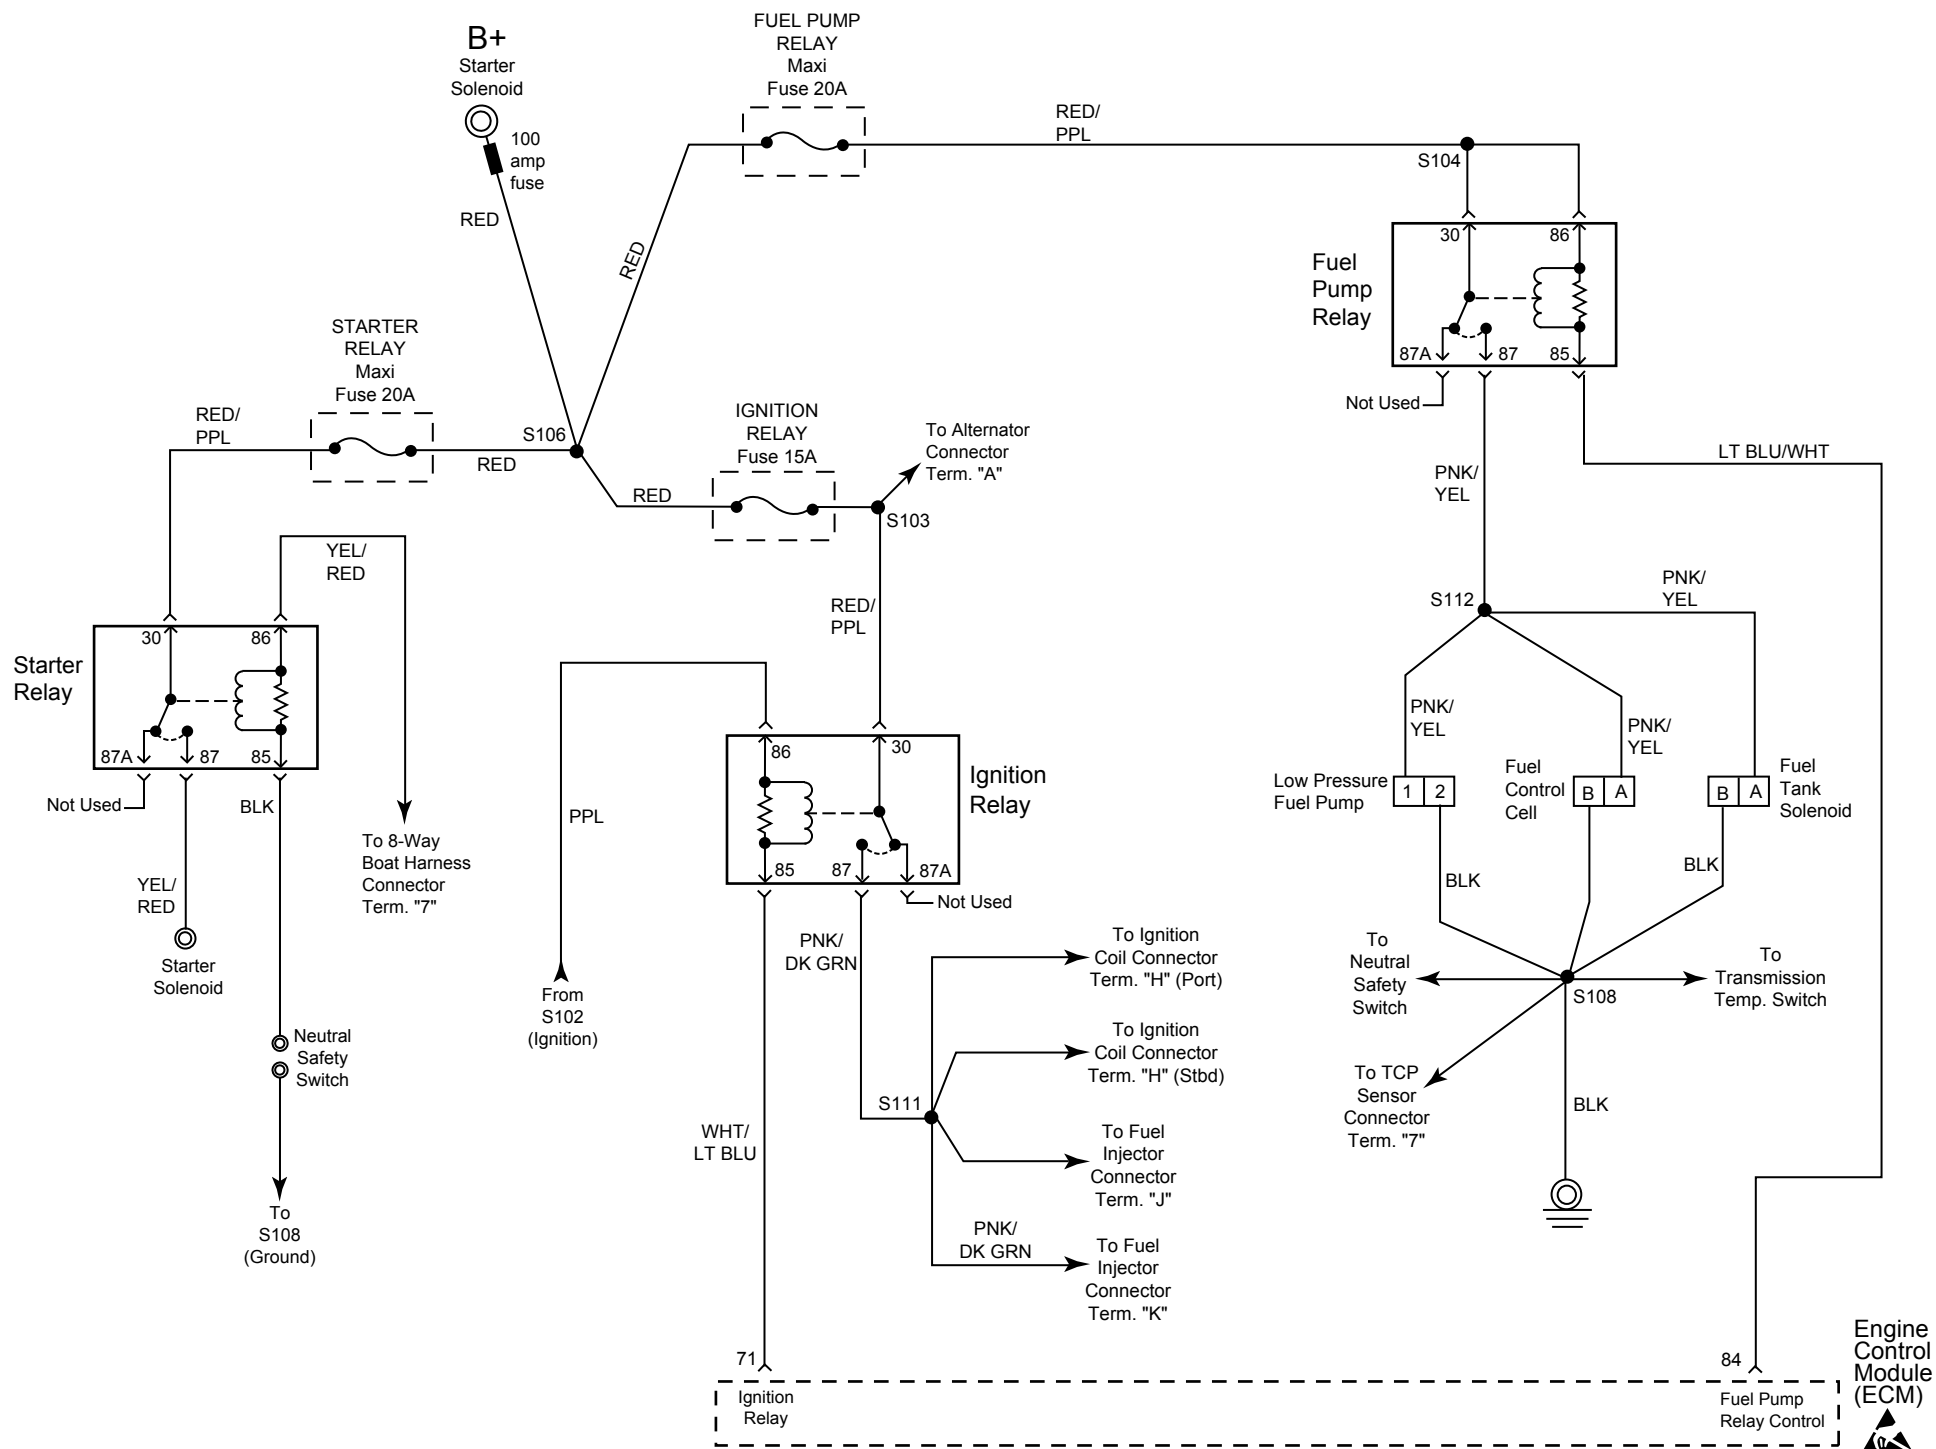


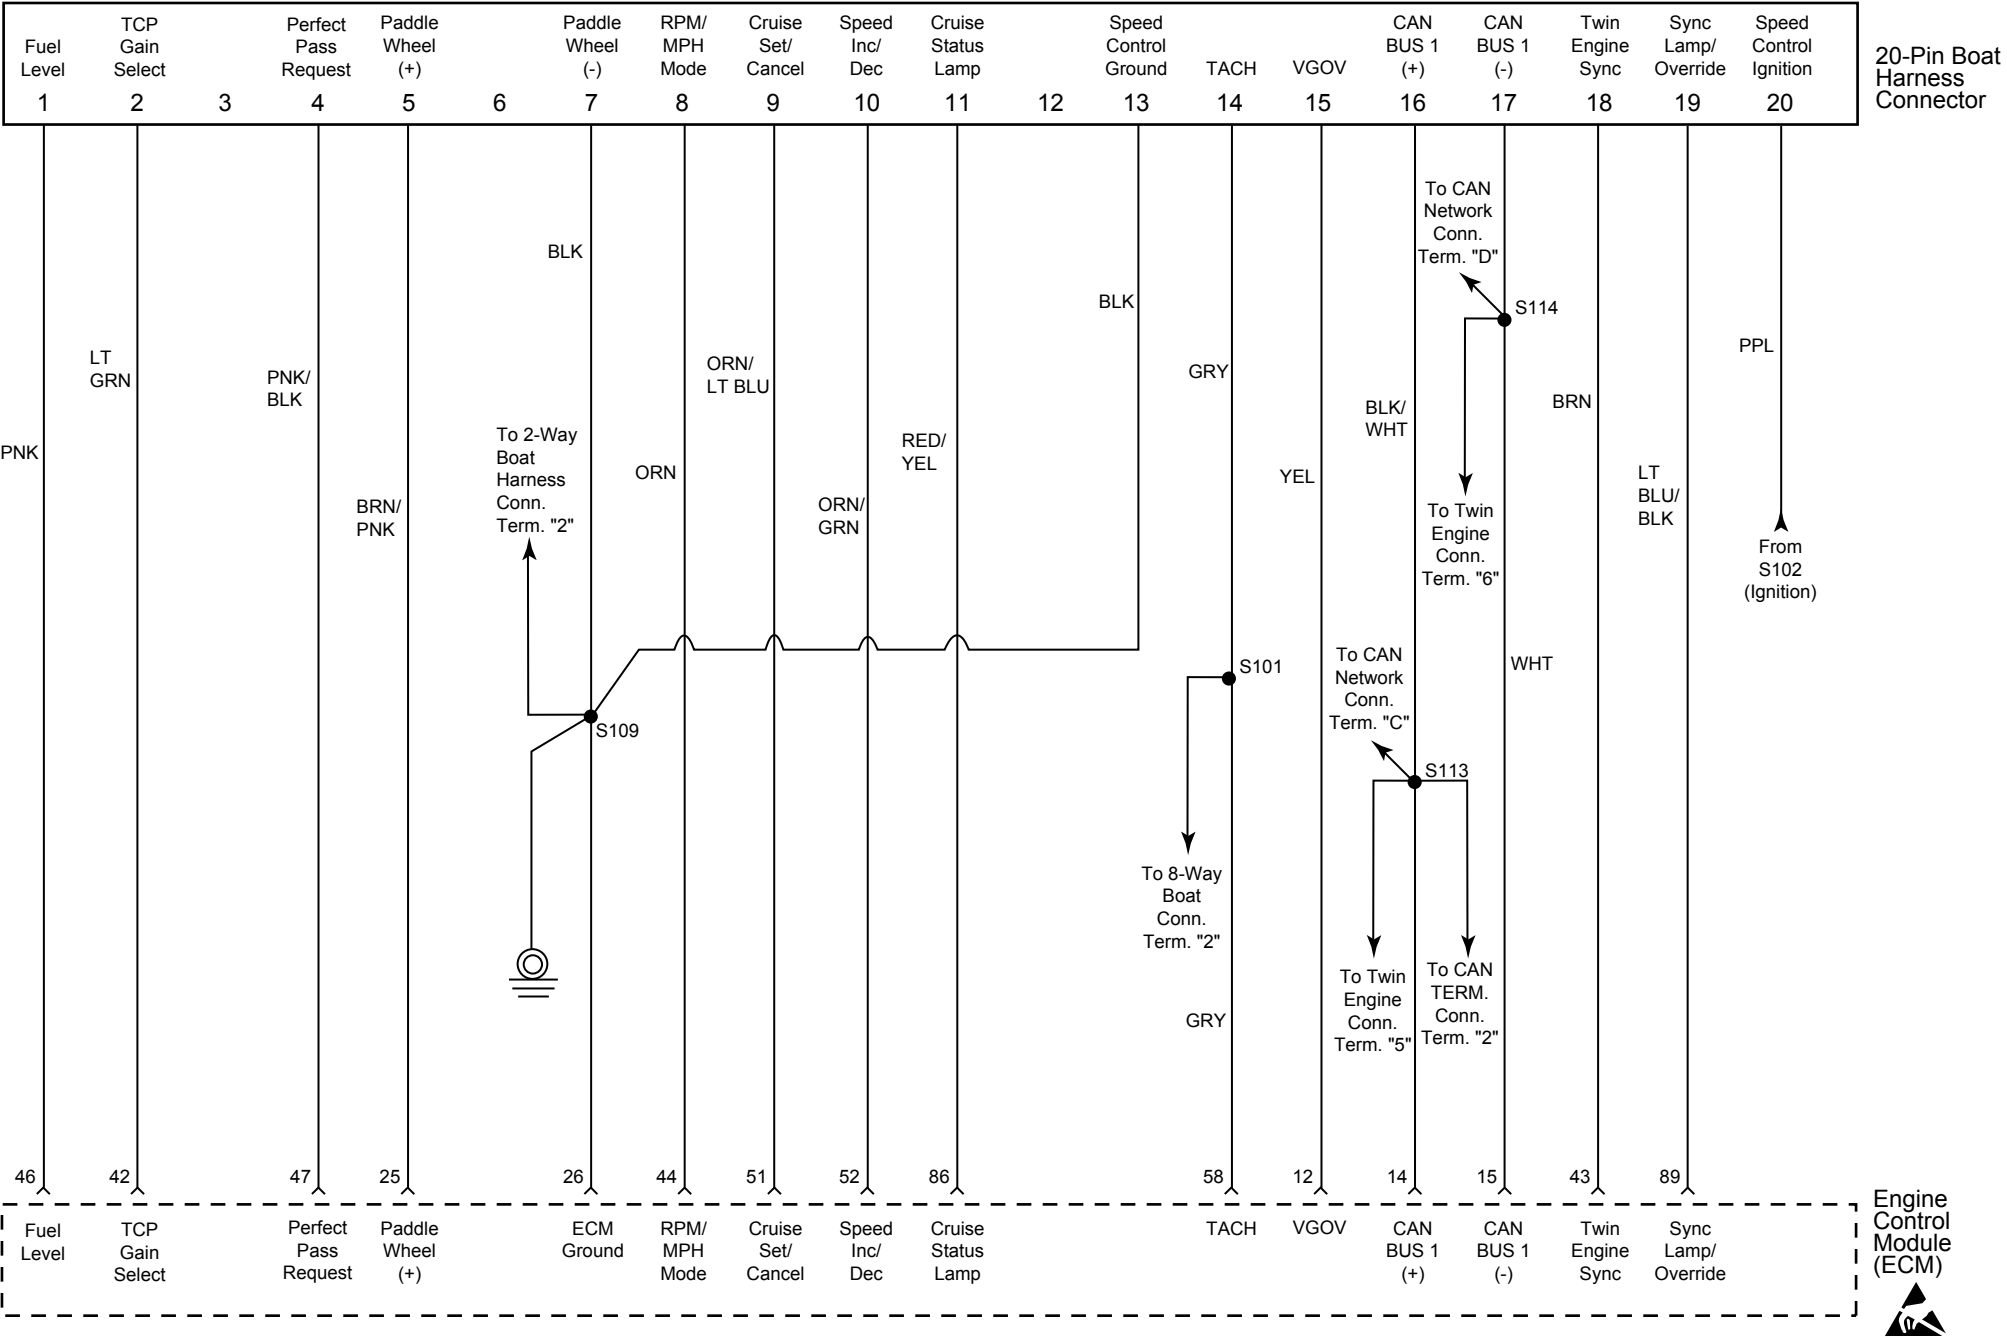


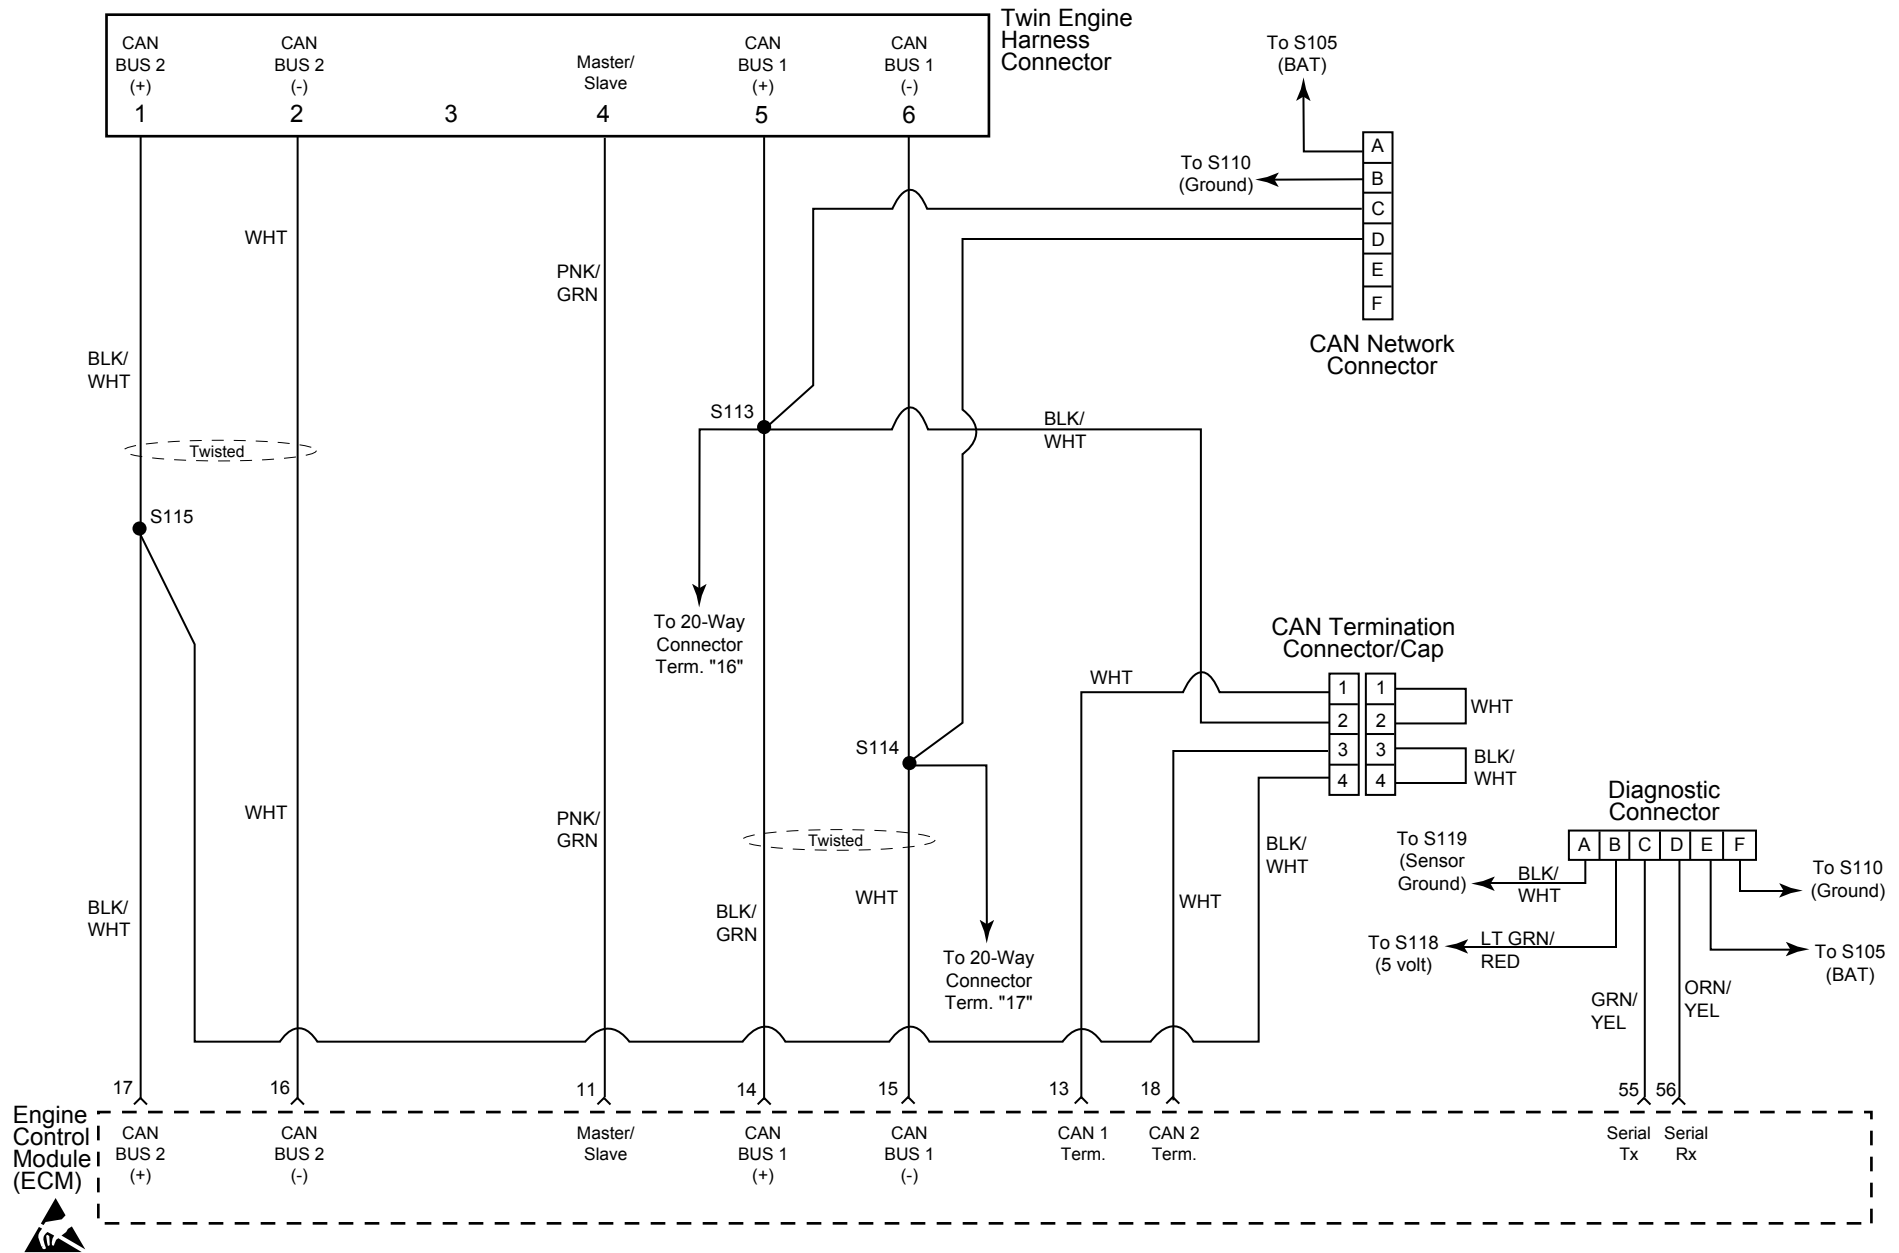


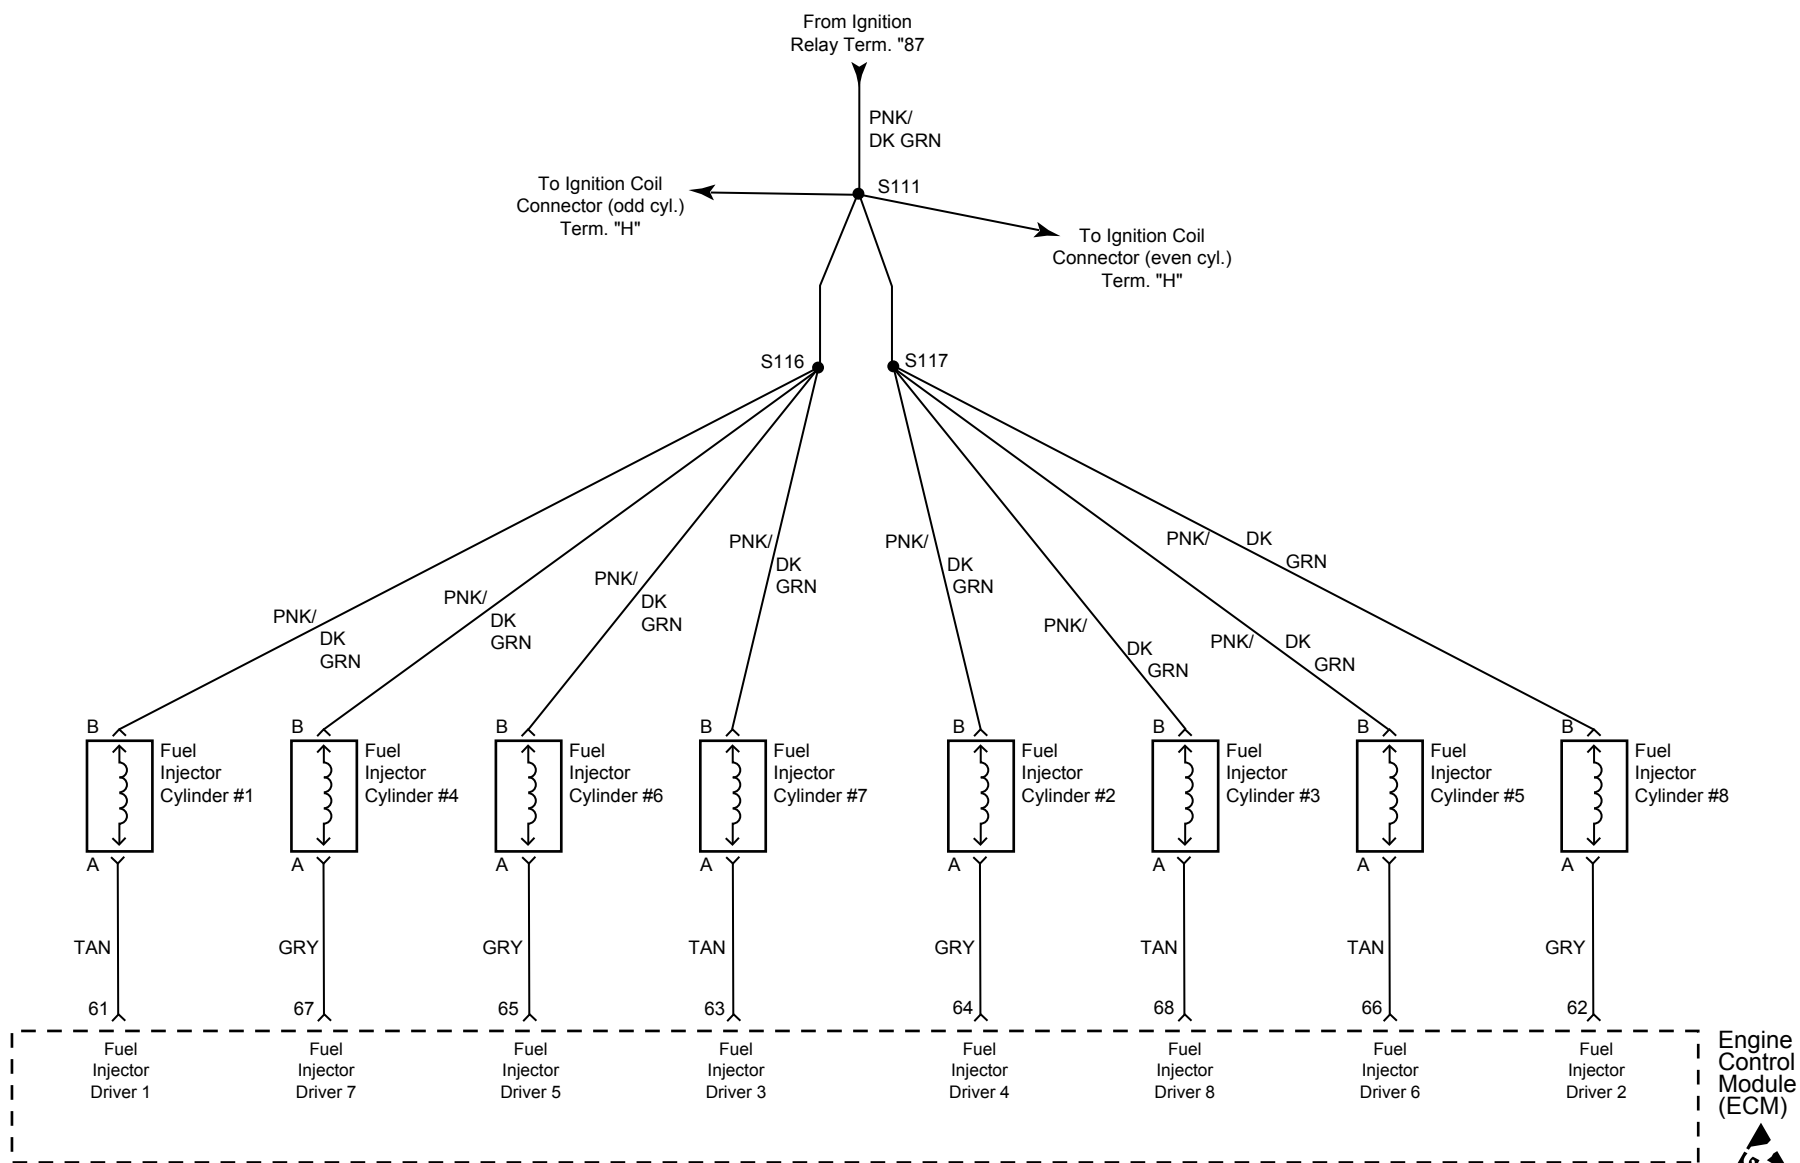

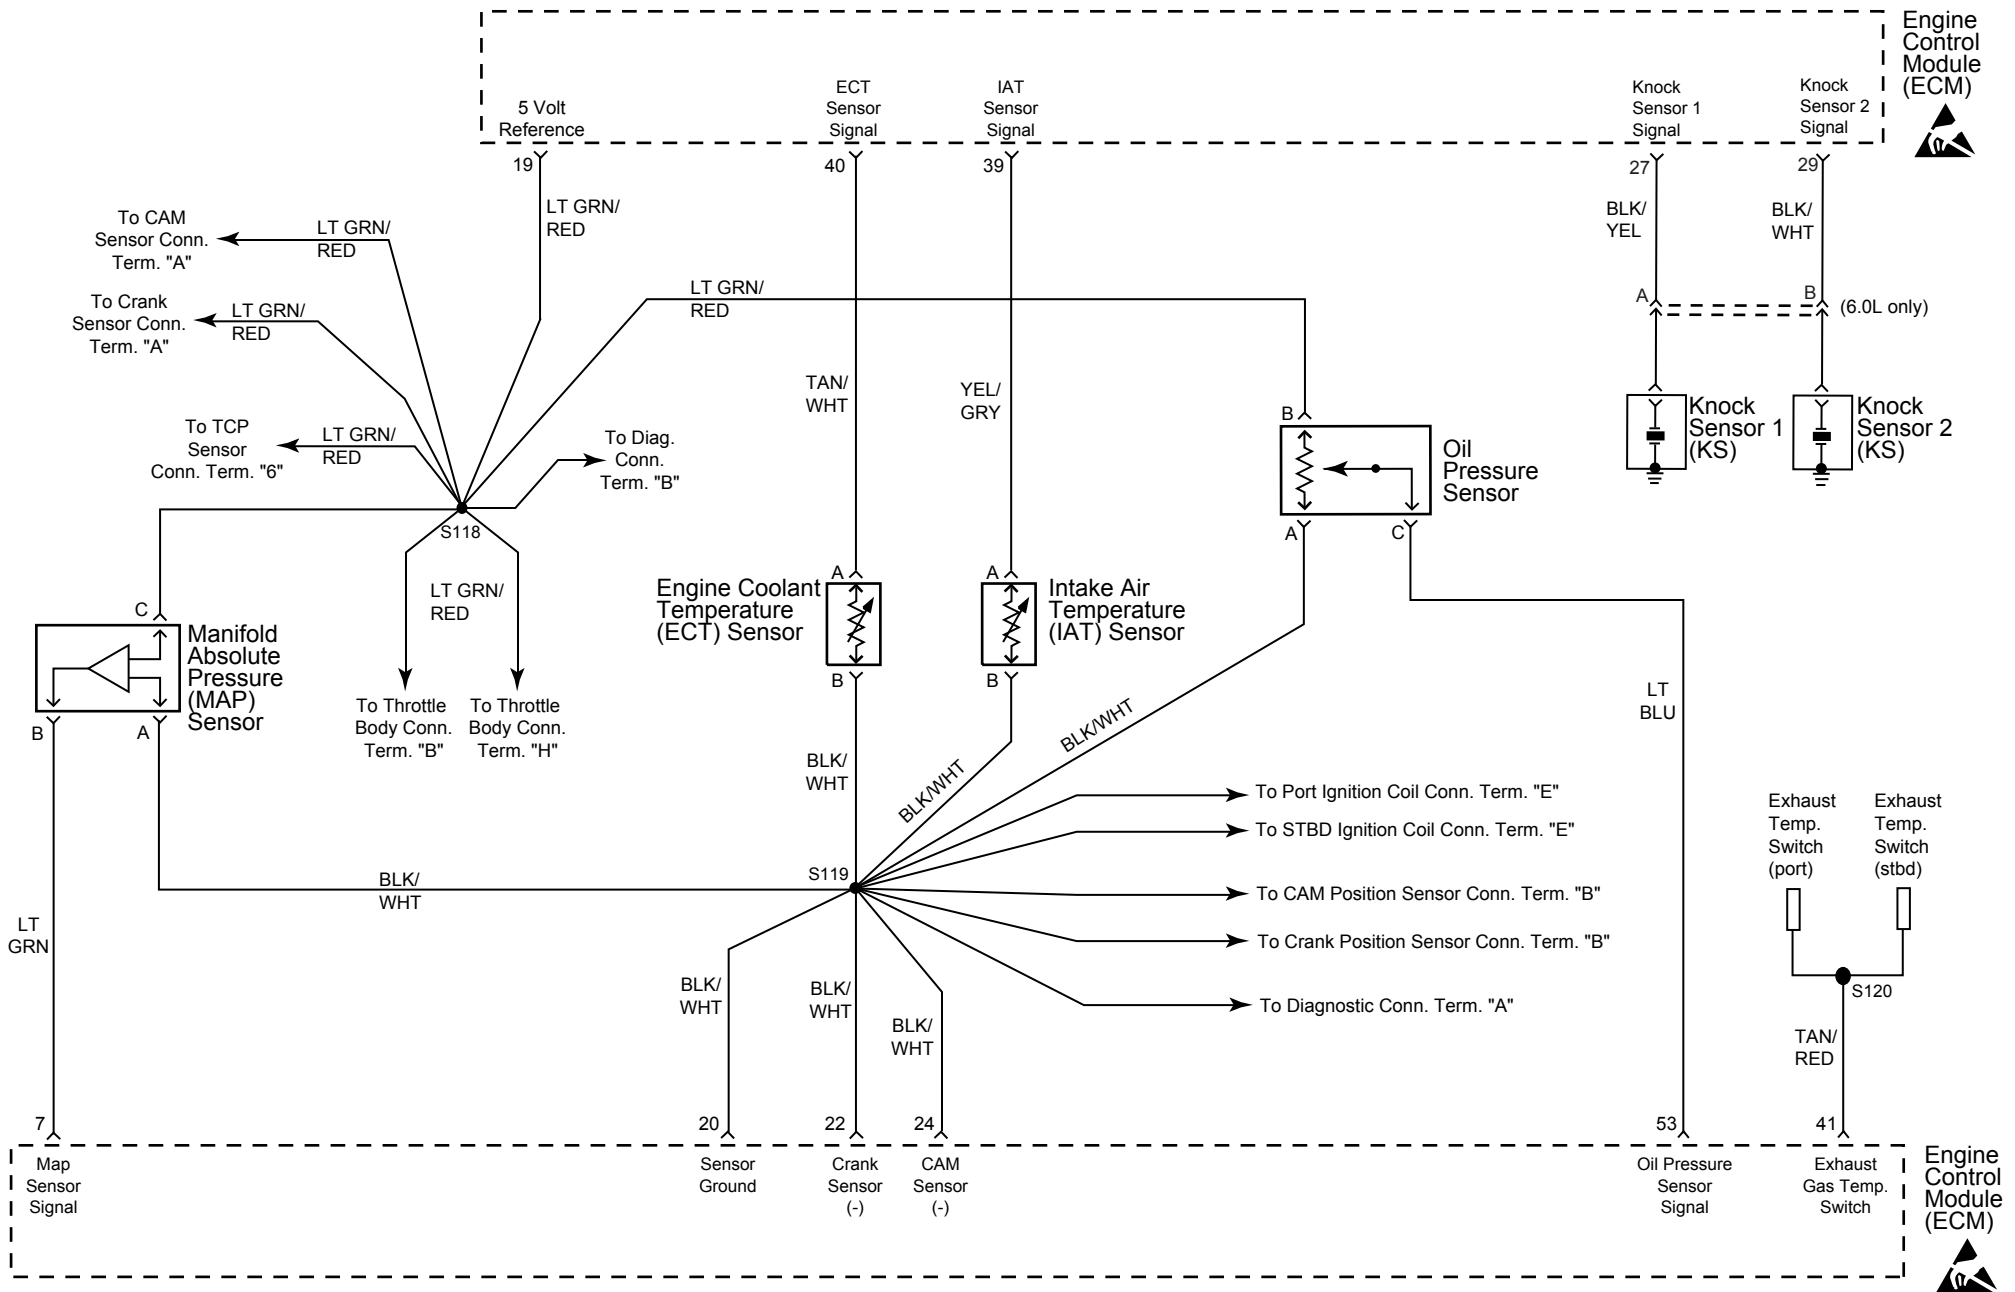

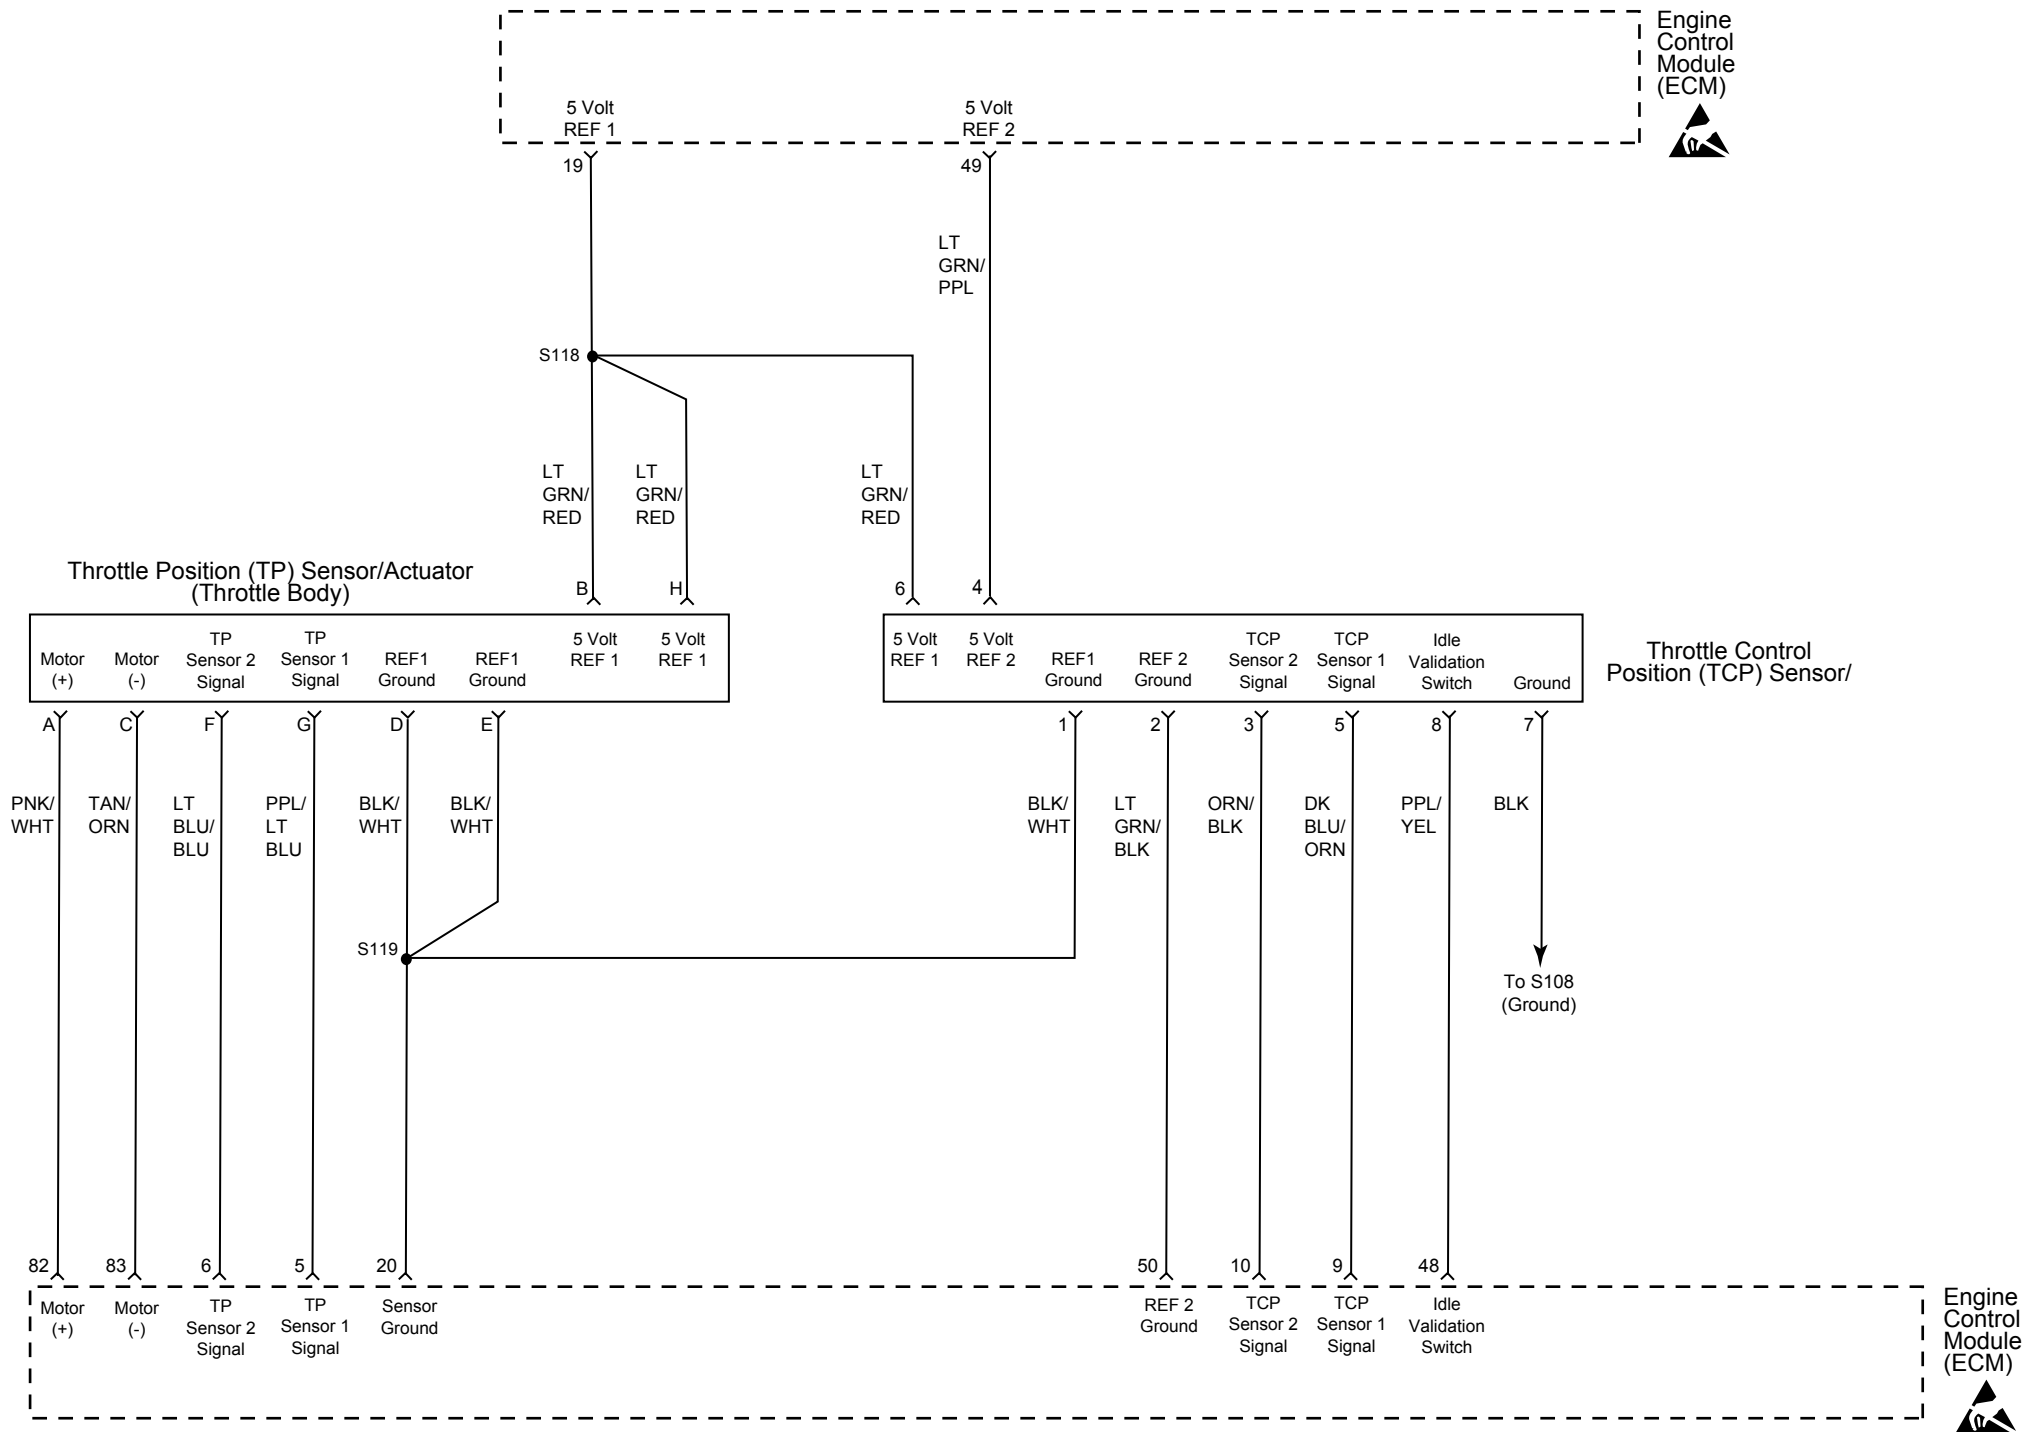


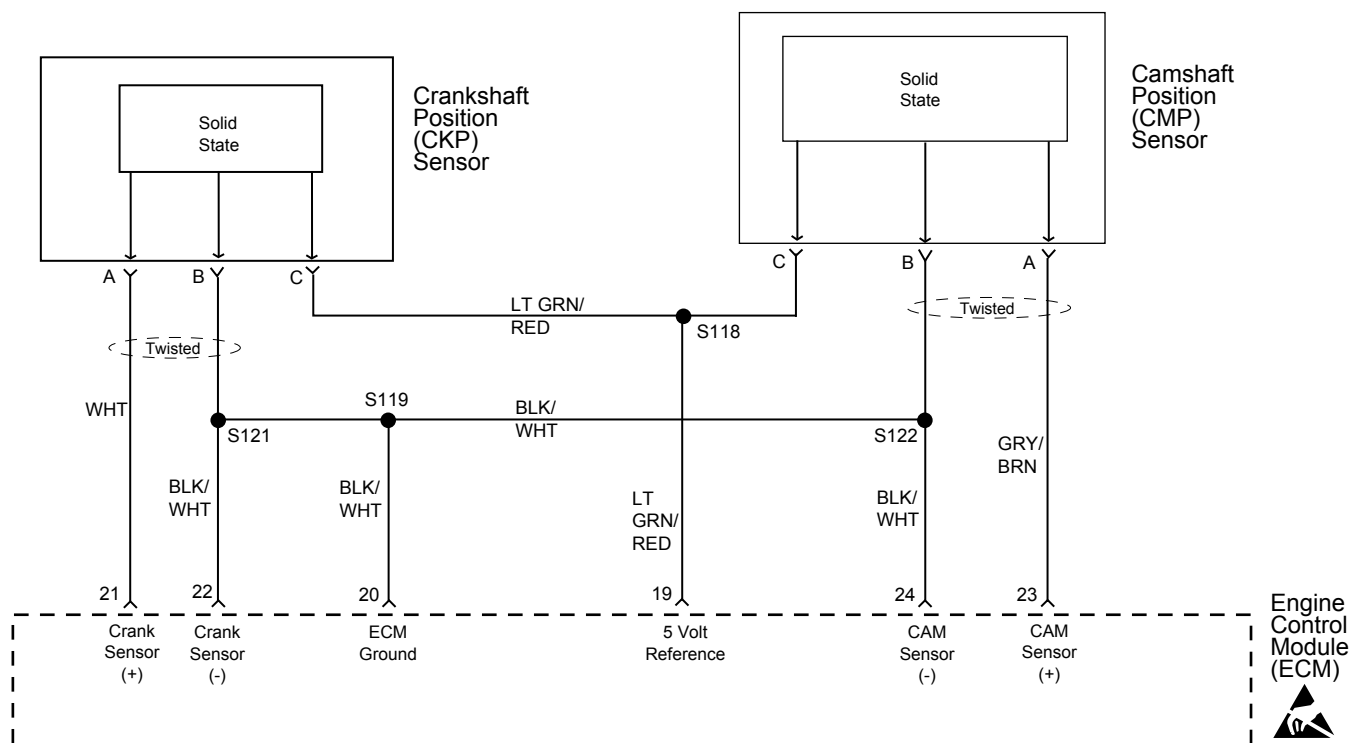

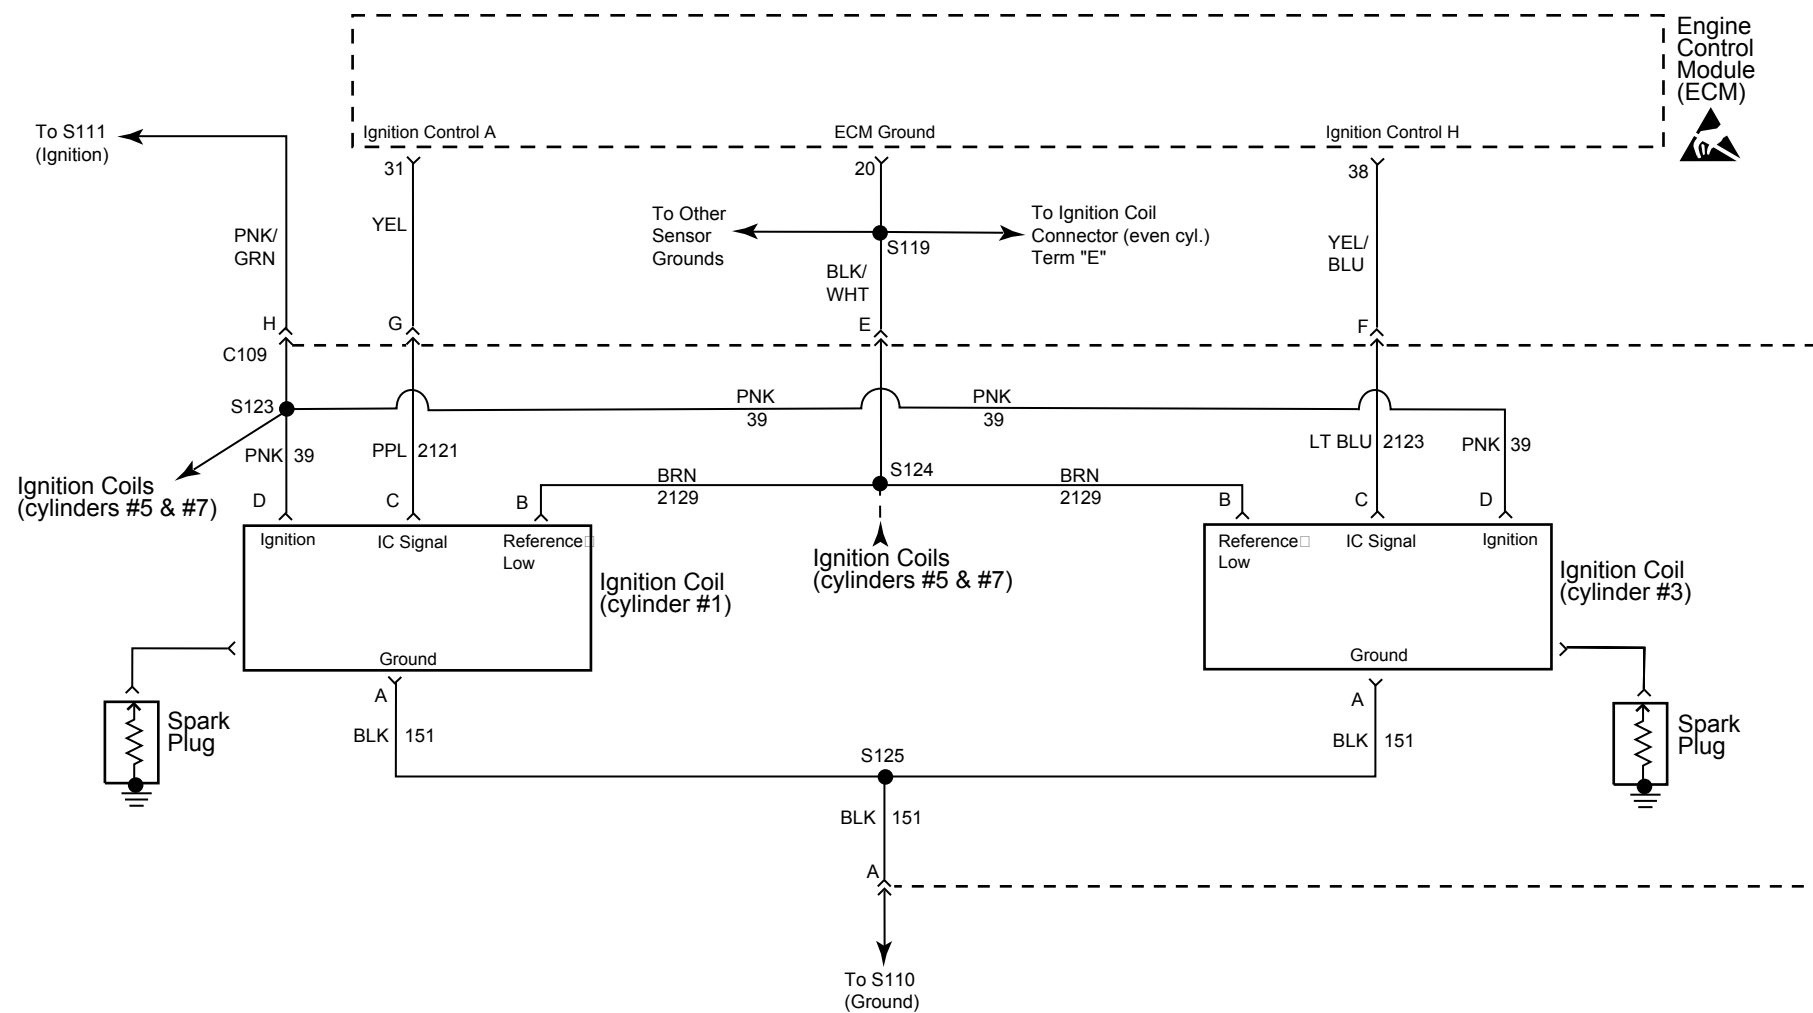


Firing Order: 1 - 8 - 7 - 2 - 6 - 5 - 4 - 3

Ignition Control: A - B - C - D - E - F - G - H

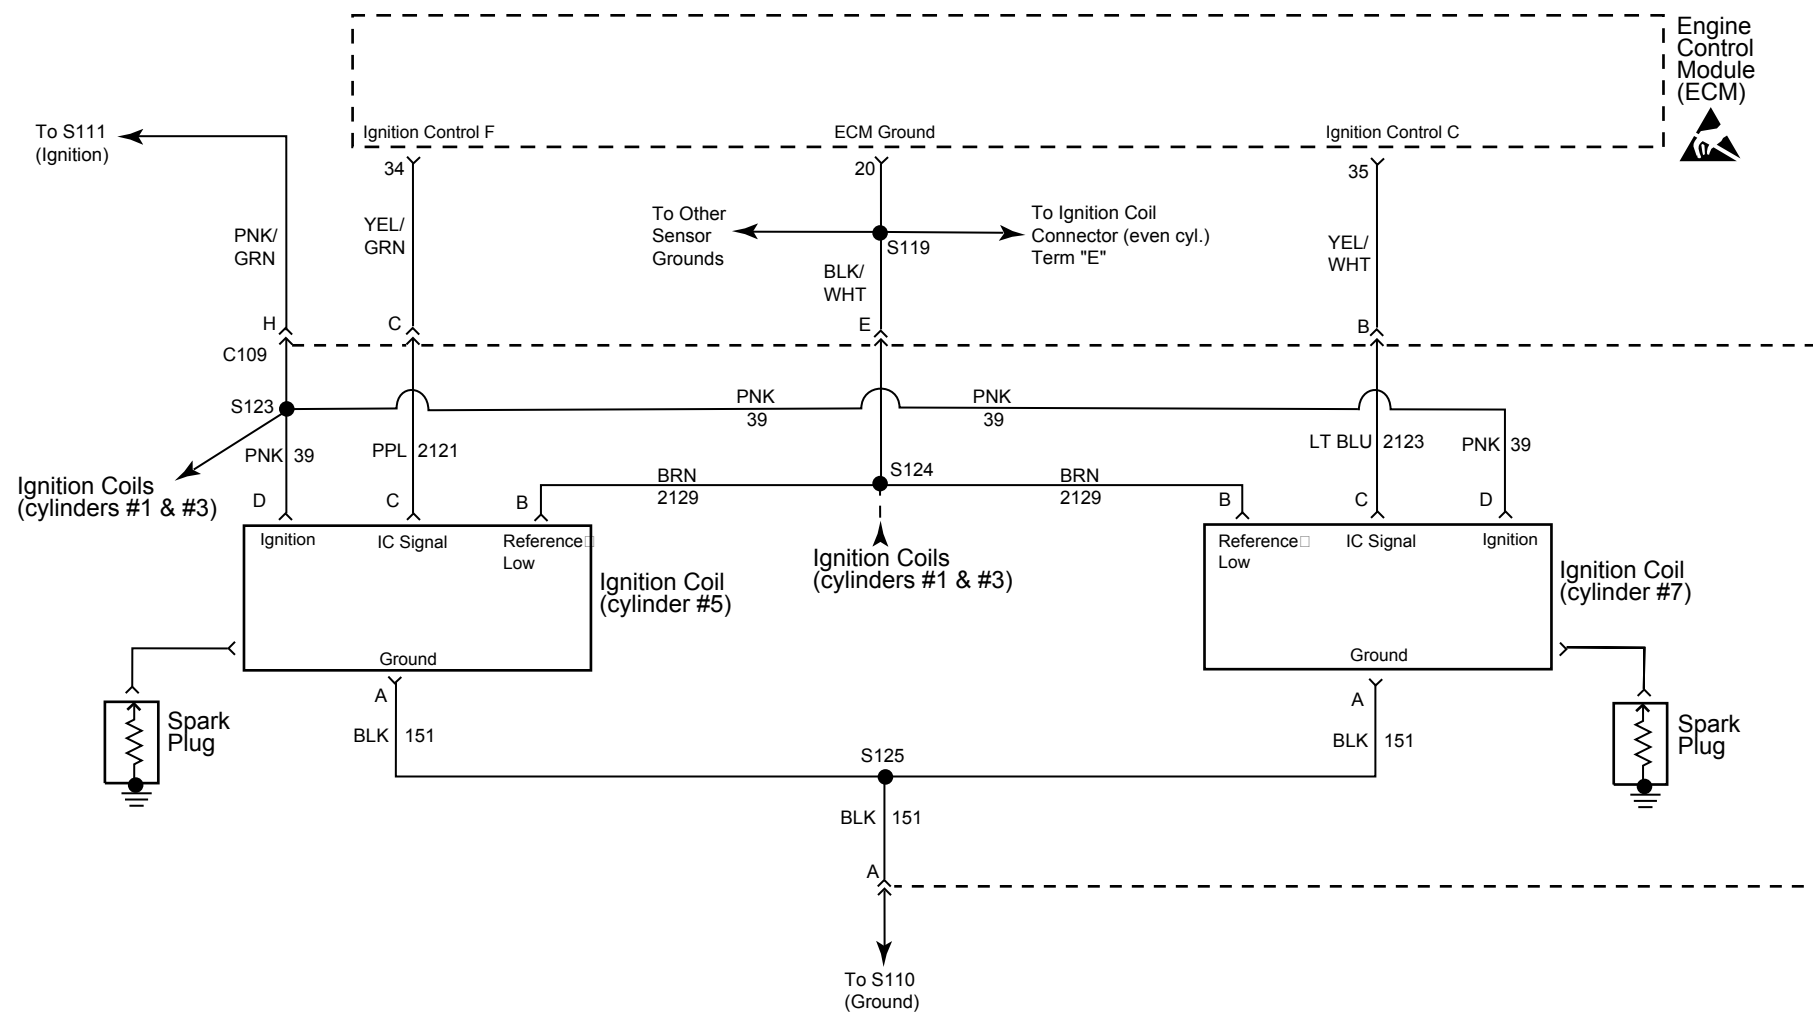


Firing Order: 1 - 8 - 7 - 2 - 6 - 5 - 4 - 3

Ignition Control: A - B - C - D - E - F - G - H

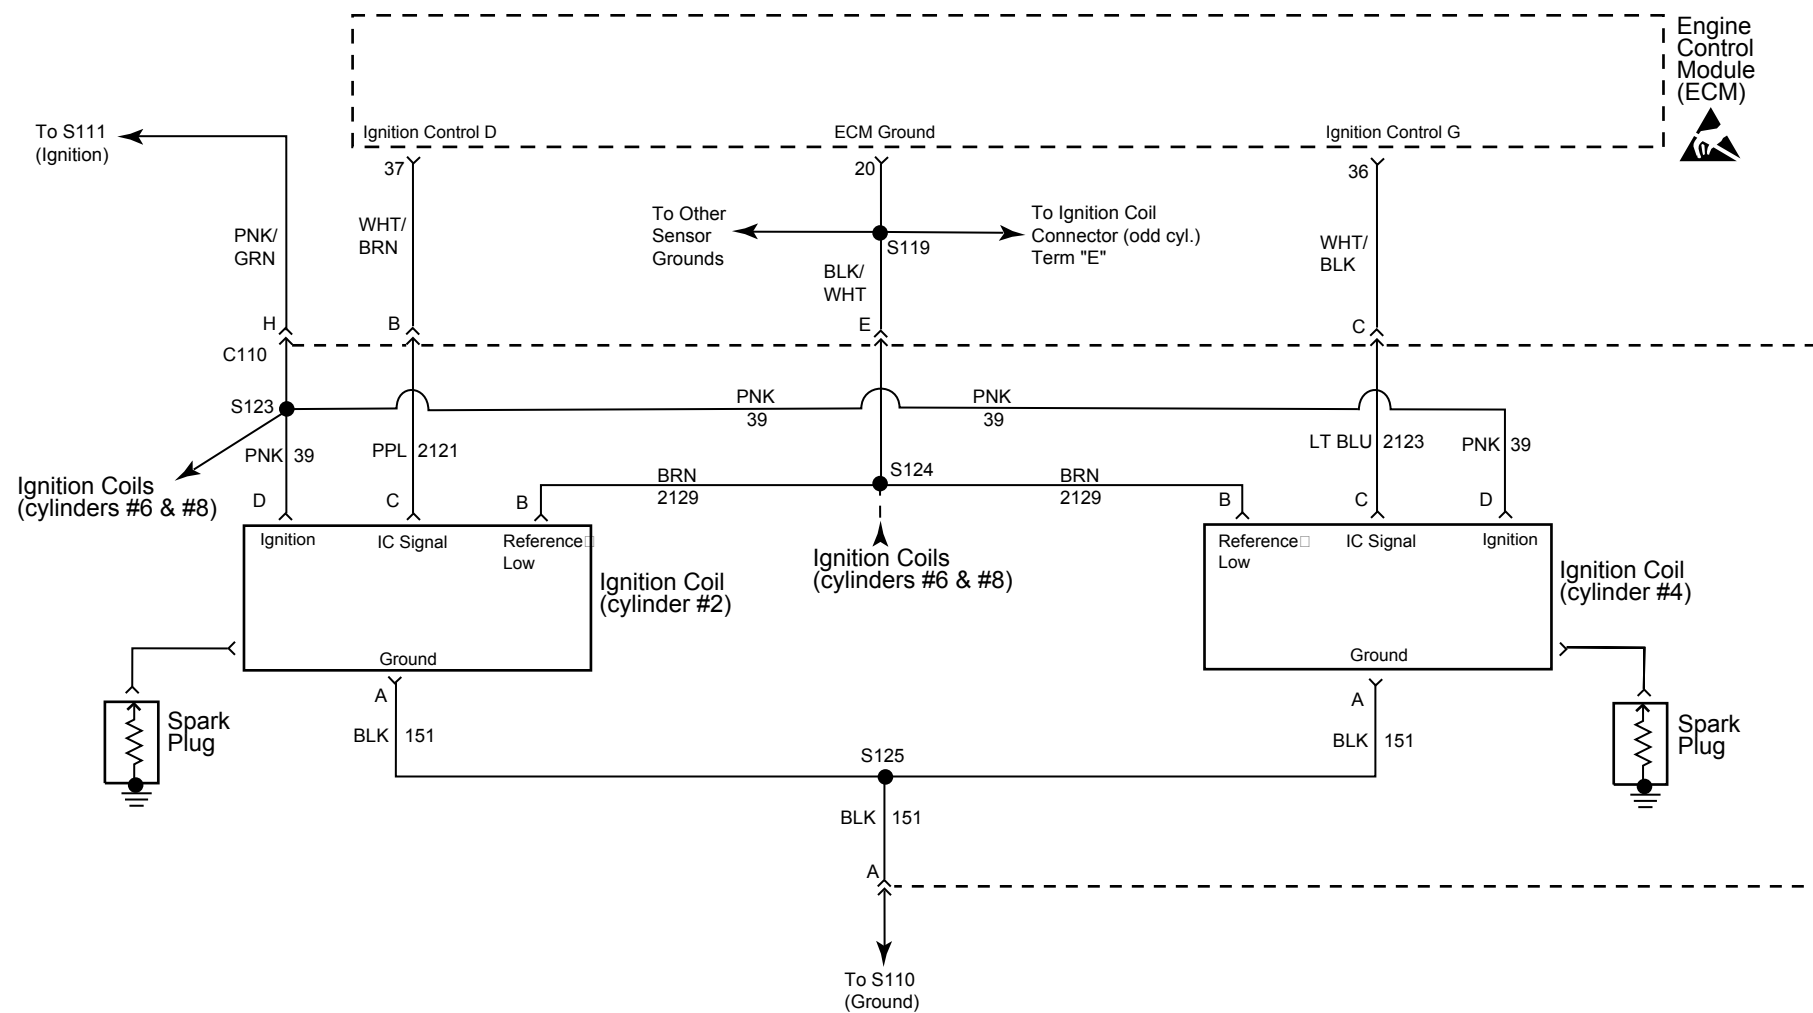

Firing Order: 1 - 8 - 7 - 2 - 6 - 5 - 4 - 3

Ignition Control: A - B - C - D - E - F - G - H

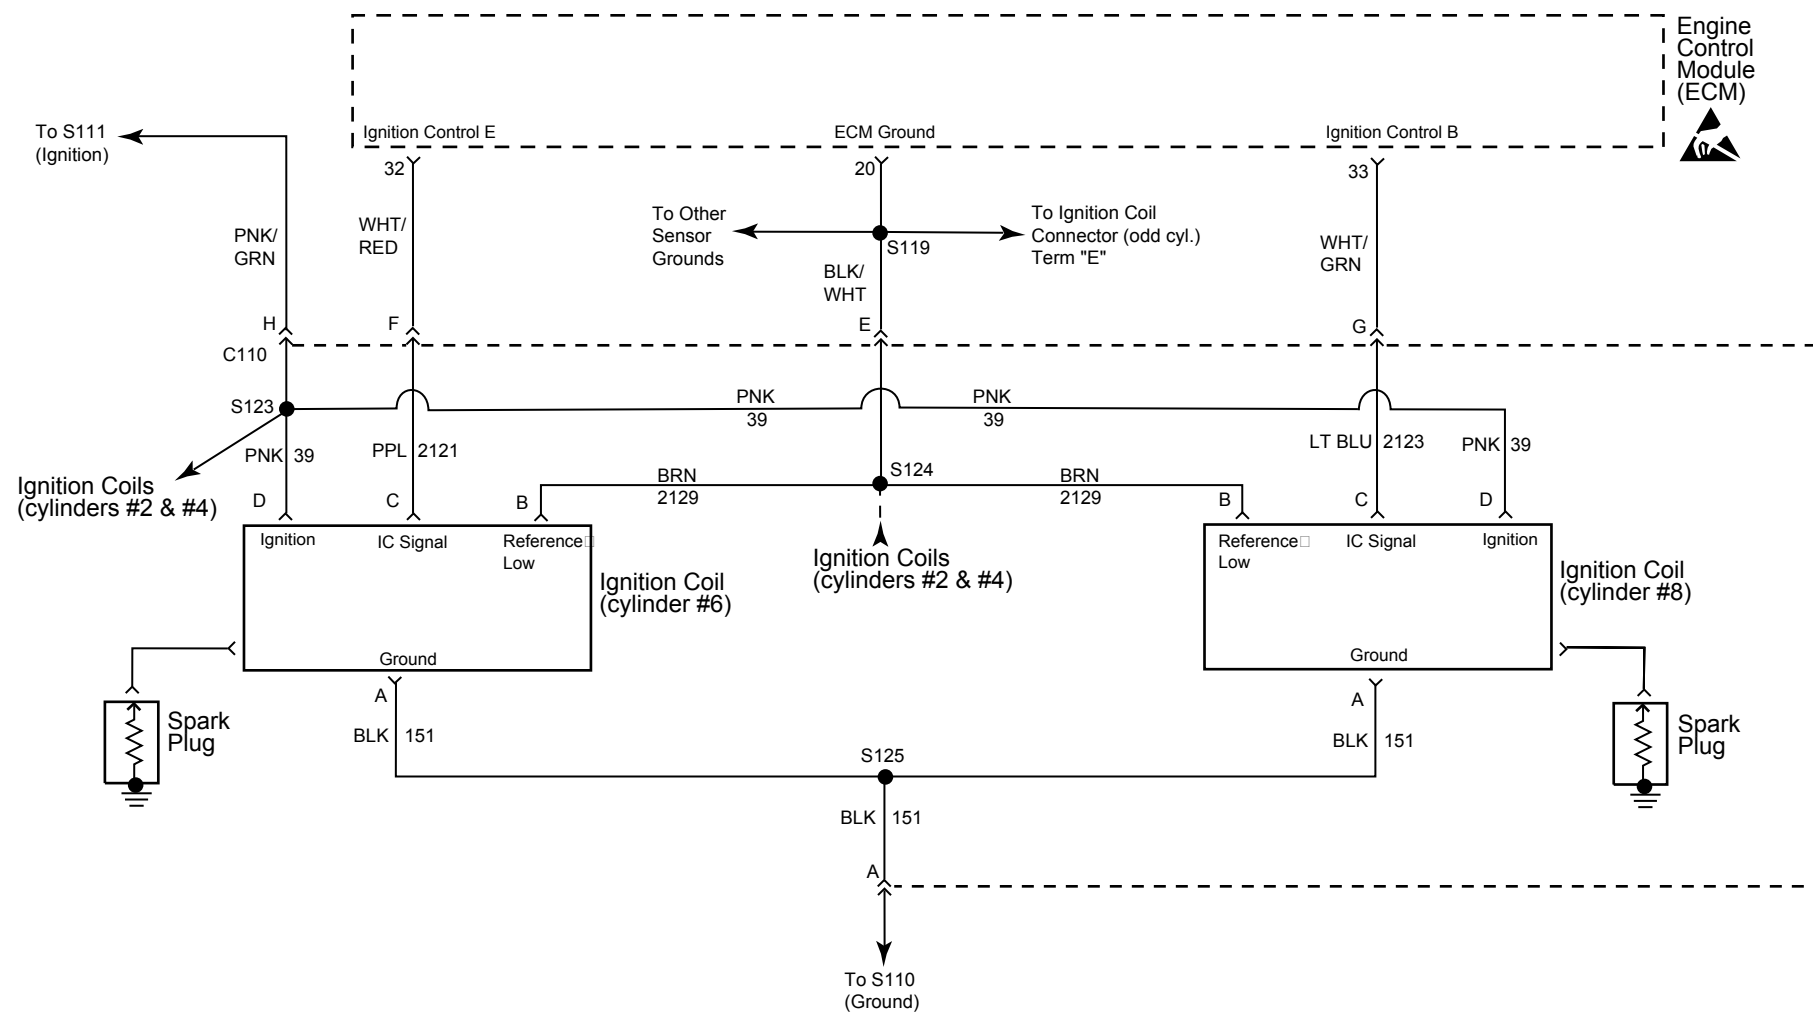

Firing Order: 1 - 8 - 7 - 2 - 6 - 5 - 4 - 3

Ignition Control: A - B - C - D - E - F - G - H

