


What to do if...

What to do if...

A tire punctures	P. 408	If you have a flat tire
The engine does not start	P. 422	If the engine will not start
	P. 68	Engine immobilizer system
	P. 425	If the battery is discharged
The shift lever cannot be moved out	P. 423	If the shift lever cannot be shifted from P
The engine coolant temperature gauge enters the red zone	P. 430	If your vehicle overheats
Steam can be seen coming from under the hood		
The key is lost	P. 424	If you lose your keys
The battery runs out	P. 425	If the battery is discharged
The doors cannot be locked	P. 31	Doors
The vehicle is stuck in mud or sand	P. 433	If the vehicle becomes stuck
A warning light or indicator light comes on	P. 397	If a warning light turns on or a warning buzzer sounds...

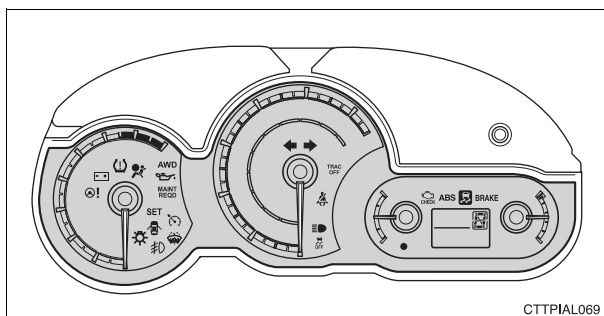

■ Warning lights

BRAKE	Brake system warning light	AWD	Active Torque Control 4WD system warning light P. 398
or			
	P. 397	MAINT REQD	Maintenance required reminder light P. 400
	Charging system warning light P. 398		Tire pressure warning light P. 400
	Low engine oil pressure warning light P. 398		Low windshield washer fluid level warning light P. 400
	Malfunction indicator lamp		Slip indicator light P. 398
or			Cruise control indicator light* P. 398
	SRS warning light P. 398		Open door warning light P. 400
ABS	ABS warning light		Low fuel level warning light P. 400
or			Driver's seat belt reminder light P. 400
	P. 398		Front passenger's seat belt reminder light P. 400
	Electric power steering system warning light P. 398		

*: The light flashes to indicate a malfunction.