


TEC Unit Conditioner Controller

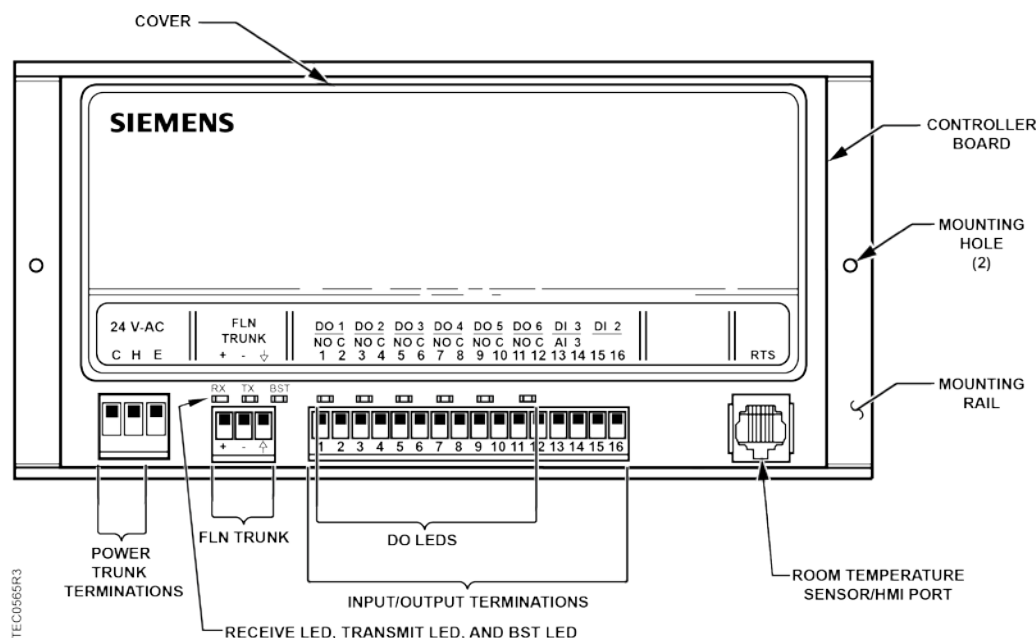

Generic Controller I/O Layout. See *Wiring Diagram* for application specific details.

Control Applications

2040 and 2041

2050 through 2054

Product Description

These instructions explain how to field install or replace a Siemens TEC Unit Conditioner Controller.

Product Numbers

Siemens TEC Unit Conditioner Controller 540-110N

Shipping carton includes a controller assembly, a mounting rail, and two self-tapping/drilling screws.



CAUTION

Keep the unit in its static-proof bag until installation.



Otherwise, you run the risk of damage to the printed circuit board from electrostatic discharge.

Accessories

Low cost temporary temperature sensor, 10K thermistor with RJ11 (1" long), that enables space control if the permanent room or duct sensor is not installed (pack of 25). 540-658P25

Duct Temperature Sensor, NTC 100K Ω Type 2, 3" Probe for Commissioning only QAM1035.008P50

Warning/Caution Notation

	WARNING Personal injury/loss of life may occur if you do not follow the procedures as specified.
	CAUTION Equipment damage or loss of data may occur if you do not follow the procedures as specified.

Expected Installation Time

New controller installation	10 Minutes
Replacement (old controller has removable terminal blocks)	6 Minutes
Replacement (old controller does not have removable terminal blocks)	16 Minutes



NOTE:
You may require additional time for database work at the field panel.

Required Tools and Equipment

- Small flat-blade screwdriver (1/8-inch blade width)
- Cabling and connectors
- Cordless drill/driver set
- ESD wrist strap

Prerequisites

- Wiring conforms to NEC and local codes and regulations. For further information see the *Wiring Guidelines Manual* (125-3002).
- Room temperature sensor installed (optional).
- 24 Vac Class II power available.
- Supply power to the unit is OFF.
- Any application specific hardware or devices installed.



NOTE:
If the controller is being installed on a box with 1 or more stages of electric heat, the 550-809 MOV with pre-terminated spade connectors must be installed across the manufacturer-supplied airflow switch. MOVs can be installed at the time the controller is factory mounted; coordinate with the box manufacturer prior to order placement. For field installation, see *Metal Oxide Varistor Kit Installation Instructions* (540-986).



NOTE:
A low-cost temporary RTS (540-658P25) is available that plugs into the RTS port on the controller, providing temperature input and actual space control until a permanent RTS is installed.


Installation Instructions



NOTE:
All wiring must conform to national and local codes and regulations (NEC, CE, etc.).


1. Secure the mounting rail in the controller's desired location.
2. Place the ESD wrist strap on your wrist and attach it to a good earth ground.
3. Remove the controller from the static proof bag and snap it into place on the mounting rail.
4. Connect the FLN.

3-WIRE FLN TRUNK

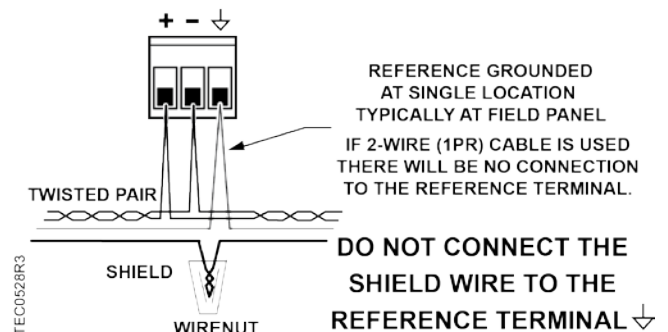

5. Connect the point wiring (see *Wiring Diagrams*).

6. Plug the room temperature sensor cable into the RTS port.
7. Connect the power trunk. DO NOT apply power to the controller without first consulting the specialist. This TEC is designed to work with 2-wire AC power (Neutral and Phase (hot) at 24Vac +/-20%. Use of the earth terminal is optional and if used it should be connected to the nearest earth ground (building steel, conduit or duct work (if earthed)).)

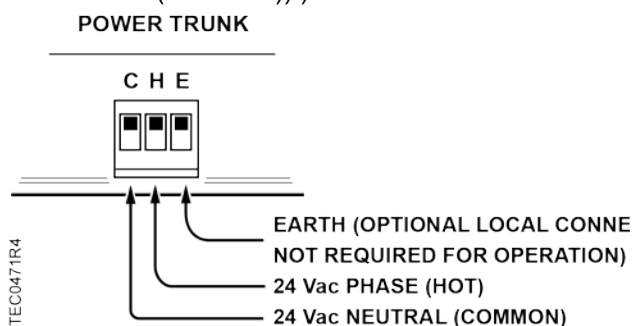


CAUTION

It is very important that the neutral that supplies the TEC be earth grounded at the source of the 24 Vac power.

Possible erratic equipment operation or damage if neutral is left floating.


The installation is complete.

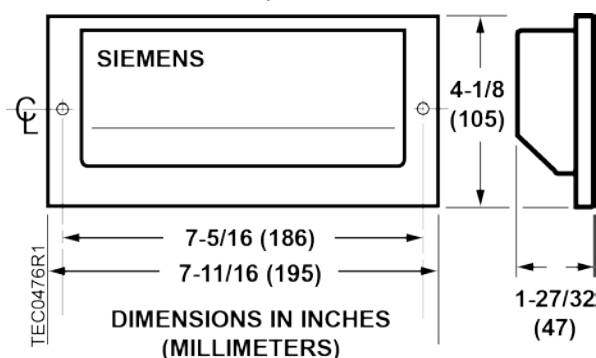

CAUTION


The controller's DOs control 24 Vac loads only. The maximum rating is 12 VA for each DO. An external interposing relay is required for any of the following:

- VA requirements higher than the maximum
- 110 or 220 Vac requirements
- DC power requirements
- Separate transformers used to power the load (for example part number 540-147, Terminal Equipment Controller Relay Module)

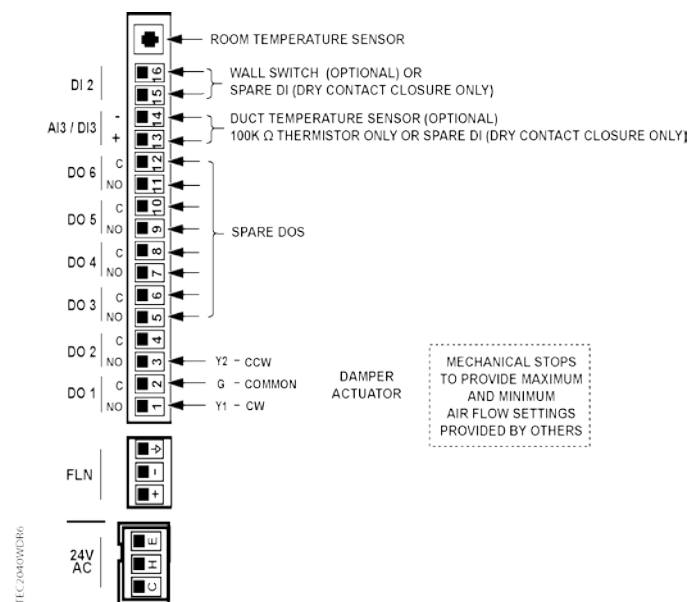


Application 2040 - Variable Air Volume Pressure Dependent Cooling or Heating.


Wiring Diagram

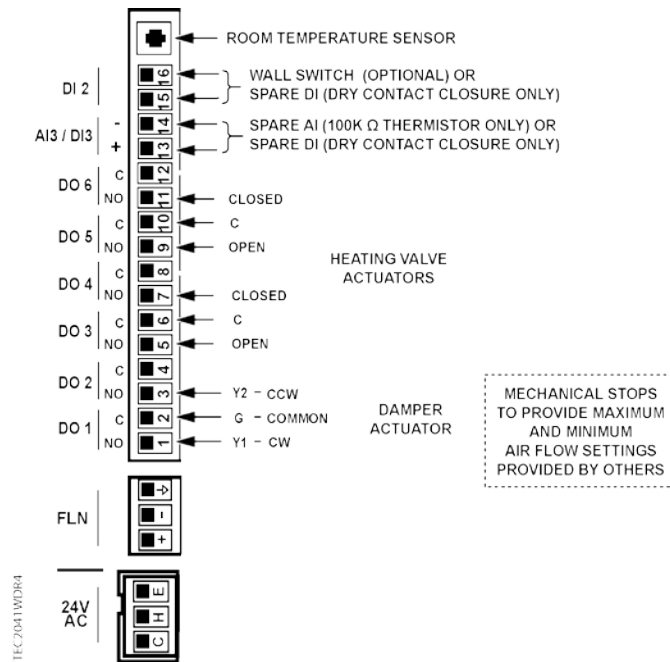


Application 2041 – Variable Air Volume Pressure Dependent with Hot Water Reheat.

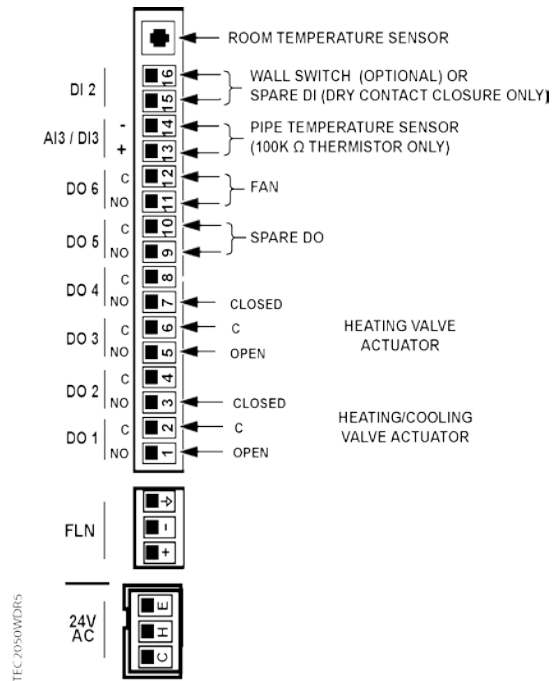


Application 2050 – Two-Pipe Fan Coil Unit Cooling or Heating.

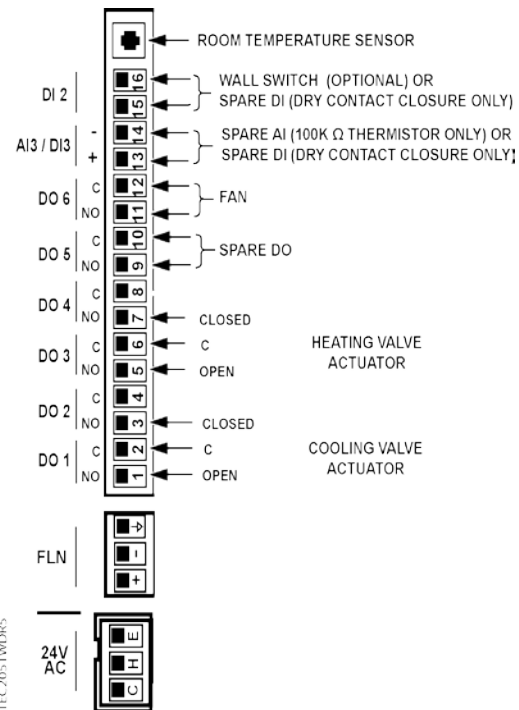


Application 2051 – Fan Coil Unit Cooling and Heating.

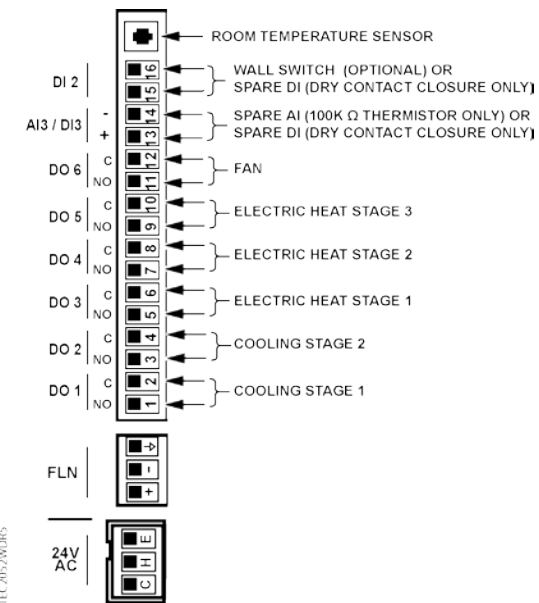

Application 2052 – Fan Coil Unit Two-Stage Cooling and Electric Heat.

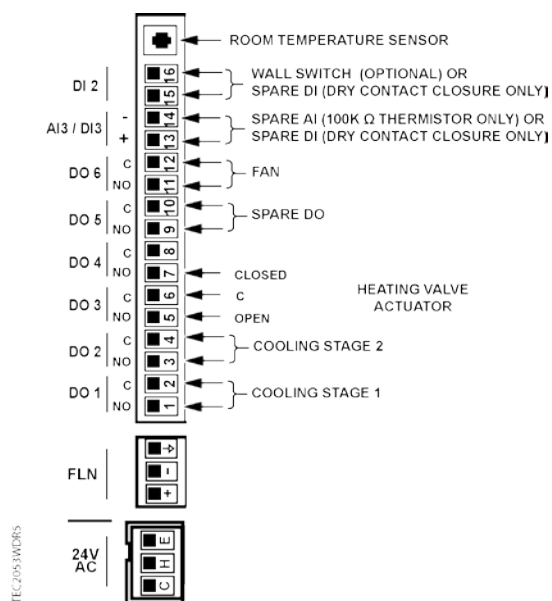

Application 2053 – Fan Coil Unit Two-Stage Cooling and Hot Water Heating.

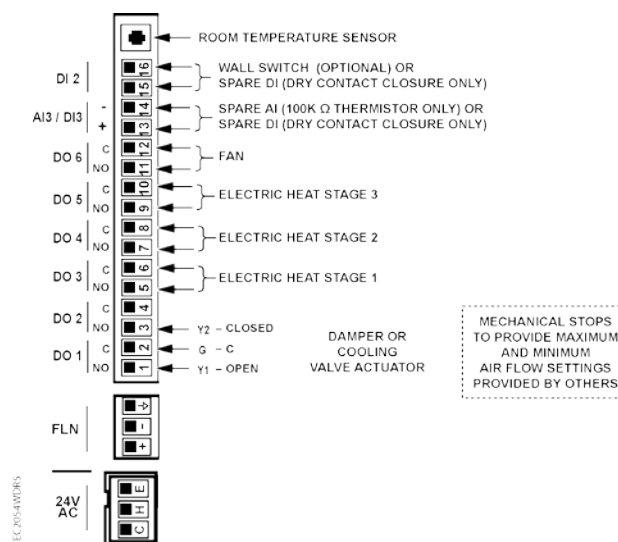

Application 2054 – Fan Coil Unit Cooling and Electric Heating or VAV Pressure Dependent with Electric Heating.

Information in this document is based on specifications believed correct at the time of publication. The right is reserved to make changes as design improvements are introduced. Product or company names mentioned herein may be the trademarks of their respective owners.

© 2014 Siemens Industry, Inc.

Siemens Industry, Inc.
Building Technologies Division
1000 Deerfield Parkway
Buffalo Grove, IL 60089-4513
U.S.A

Your feedback is important to us. If you have comments about this document, please send them to SBT_technical.editor.us.sbt@siemens.com.

Document No.540-1026

Printed in the USA

Page 5 of 5