

Autozero Module

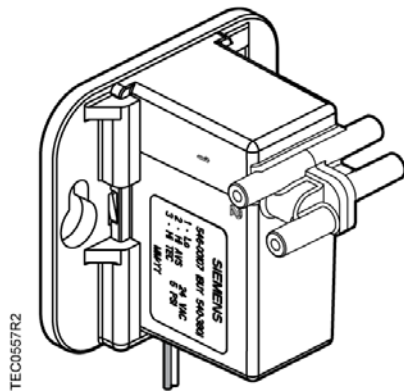


Figure 1.

Product Description

These instructions explain how to field install and/or replace an Autozero module.

Product Numbers

540-380 Autozero Module

Expected Installation Times

4 minutes

Required Tools and Materials

Cordless drill/driver set (1/4 hex)

Item Number: 540-199, Rev. EA

Installation

1. Using Autozero module as a template, mark the mounting location for the screws. (Screws do not require starter holes.)
2. Install the screws in the marked location. Leave screws protruding 5/32-inch.
3. Place Autozero module over screws and slide into position.
4. Tighten screws until Autozero module is secure.
5. Connect air tubes and terminate wires. See the appropriate controller instructions for wiring and piping information.

NOTE: The AZM is not orientation sensitive.

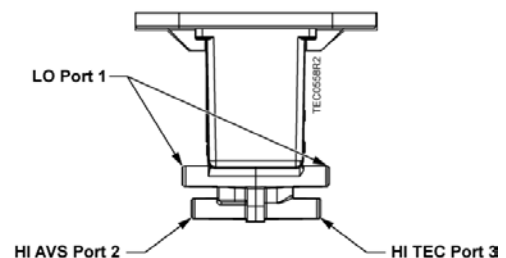
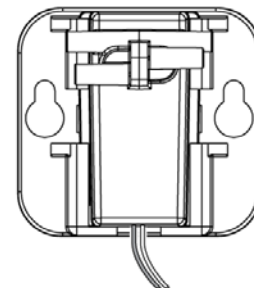


Figure 1. Air Tube Connections.

The installation is now complete.

Information in this publication is based on current specifications. The company reserves the right to make changes in specifications and models as design improvements are introduced. Product or company names mentioned herein may be the trademarks of their respective owners. © 2015 Siemens Industry, Inc.