


BIGTREETECH


SKR MINI E3 V1.1

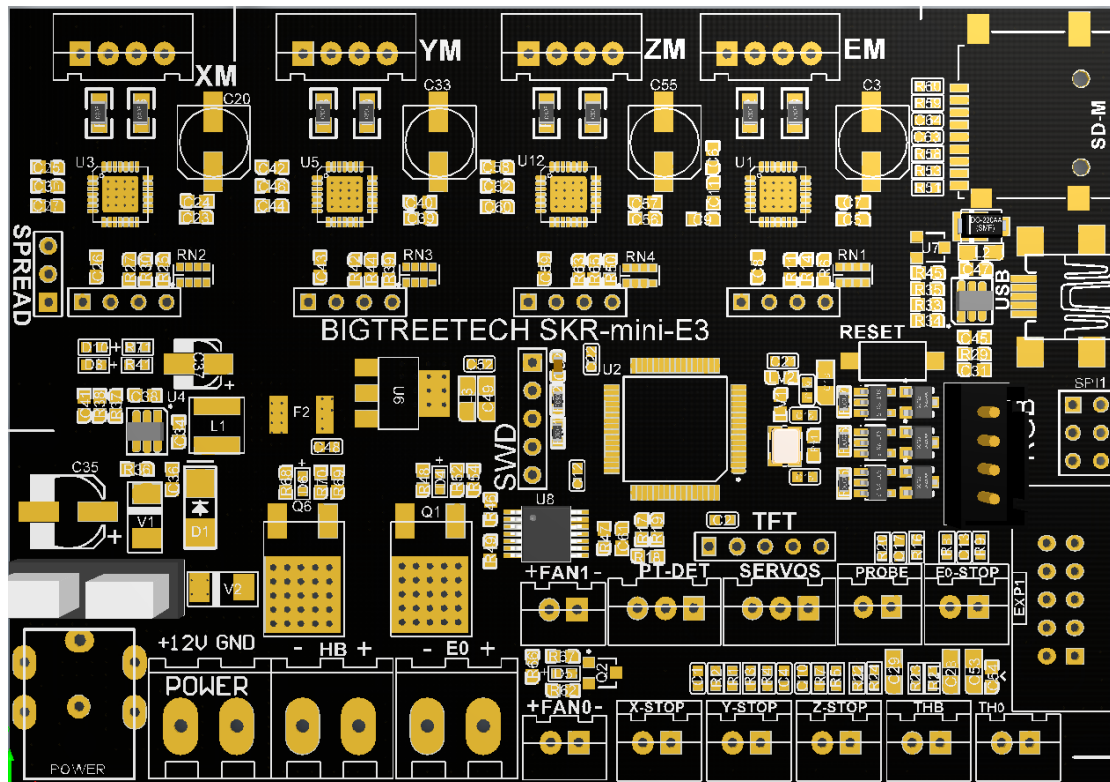

1. Instructions on the use of BLtouch

If you still have problems using the BLtouch after following our instructions to change the firmware, you can do the following:

Remove the capacitor at the **C17** position and the resistor at the **R16** position, and weld a **0603 1Kohm** resistor to the R16 position.

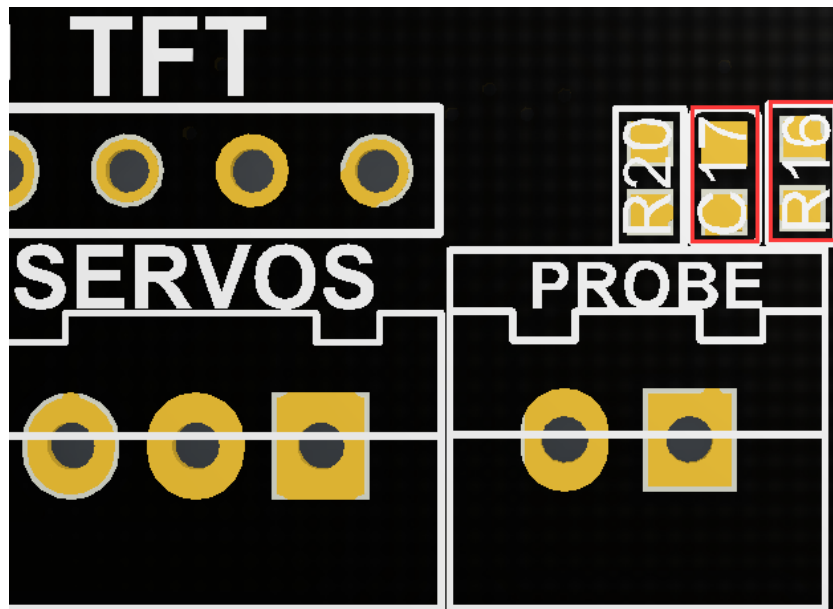

2. Description of the power supply stops supplying power

The output load power of switching power supply should not be greater than its own power; When the output load is greater than the power of the power supply(overload), the switching power supply will automatically enter the protection state, so there

will be no voltage output; When it detects that the load power is lower than its own power, it starts to provide output again. (The state is similar to reset and restart, which is essentially power on after the power failure of the switching power supply.)

If you encounter other problems while using, please contact us, we will answer you scrupulous; if you have any good comments or suggestions for our products, pls feel free to inform us, we will carefully consider your comments or suggestions, thank you for choosing BIGTREETECH products, thank you!