


17. EMERGENCY STOP 紧急停止

When the Emergency 'Stop' button is pressed, STOP is displayed.


当按下紧急停止按钮时，显示“STOP”。

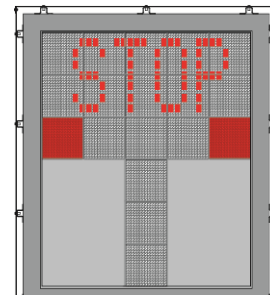

18. CHOCKS ON 上轮机挡

'CHOCK ON' will be displayed, when the ground staff has put the chocks in front of the nose wheel and pressed the 'Chocks On' button on the Operator Panel.


当地面人员在前轮放上挡物并在操作员面板按“Chocks On”时，将显示“CHOCK ON”。

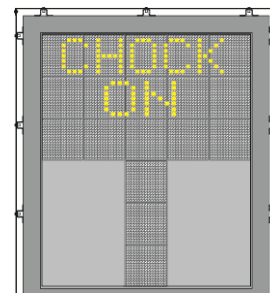

19. ERROR 错误

If a system error occurs, the message 'ERROR' is displayed with an error code. The code is used for maintenance purposes.

如果系统发生错误，将显示“ERROR”及错误代码，该代码用于维护目的。

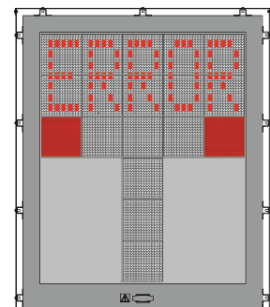

20. SYSTEM BREAKDOWN 系统崩溃

In case of a severe system failure, the display will go black, except for a red stop indicator. A manual backup procedure must be used for docking guidance.

如果遇到严重的系统故障，显示器将变黑，并显示红色的停止信息。这时必须提供人工引导。

