


AIRCRAFT PARKING
CHART-ICAO

D-ATIS 127.45(ARR) 128.65(DEP)
TWR(N) 124.3(118.15) TWR(S) 130.45(118.15)
GND(N) 121.8(124.3) GND(S) 121.65(130.45)
Delivery 121.6 (DCL AVBL)

ZLXY XI'AN/Xianyang

Bearing strength (PCN)		Usage of pushed-back holding position.								PBs in column 1 and 2 are forbidden to use simultaneously		
Stands Nr.305-307,316-318,324-330,405-412		86/R/B/W/T	NR.	PB1	PB2	PB3	PB4	PB5	PB6	PB7	Column 1	Column 2
Stands Nr. 501-509,503L,503R,505L,505R,506L,601-603		78/R/B/W/T	Stands	301	302	303	304	312		310,313	PB7, PB9	PB8
Stands Nr. 201-225, 301-304, 308-315, 319-322, 401-404		71/R/B/W/T	NR.	PB8	PB9	PB10	PB11	PB12	PB13	PB14	PB8	PB5, PB6, PB7, PB9
Stands Nr.331-341,345-348,345L,347L,701-711		70/R/B/W/T	Stands	309,314	308,315	322	321	320	319	145,147A	PB1, PB3	PB2, PB4
Stands Nr.101-145,147,147A,148,126A, 128A		60/R/B/W/T	NR.	PB15							PB10, PB12	PB11, PB13
			Stands	144,145							Note: 1. All the stands with PBs shall push to the corresponding push-back points. 2. Aircraft parking on stand Nr.311 shall push to PB6, then tow to PB7 to start up; aircraft parking on stand Nr.312 shall push to PB5, then tow to PB7 to start up; 3. Aircraft shall taxi to TWY T8 with idle power from PB.	

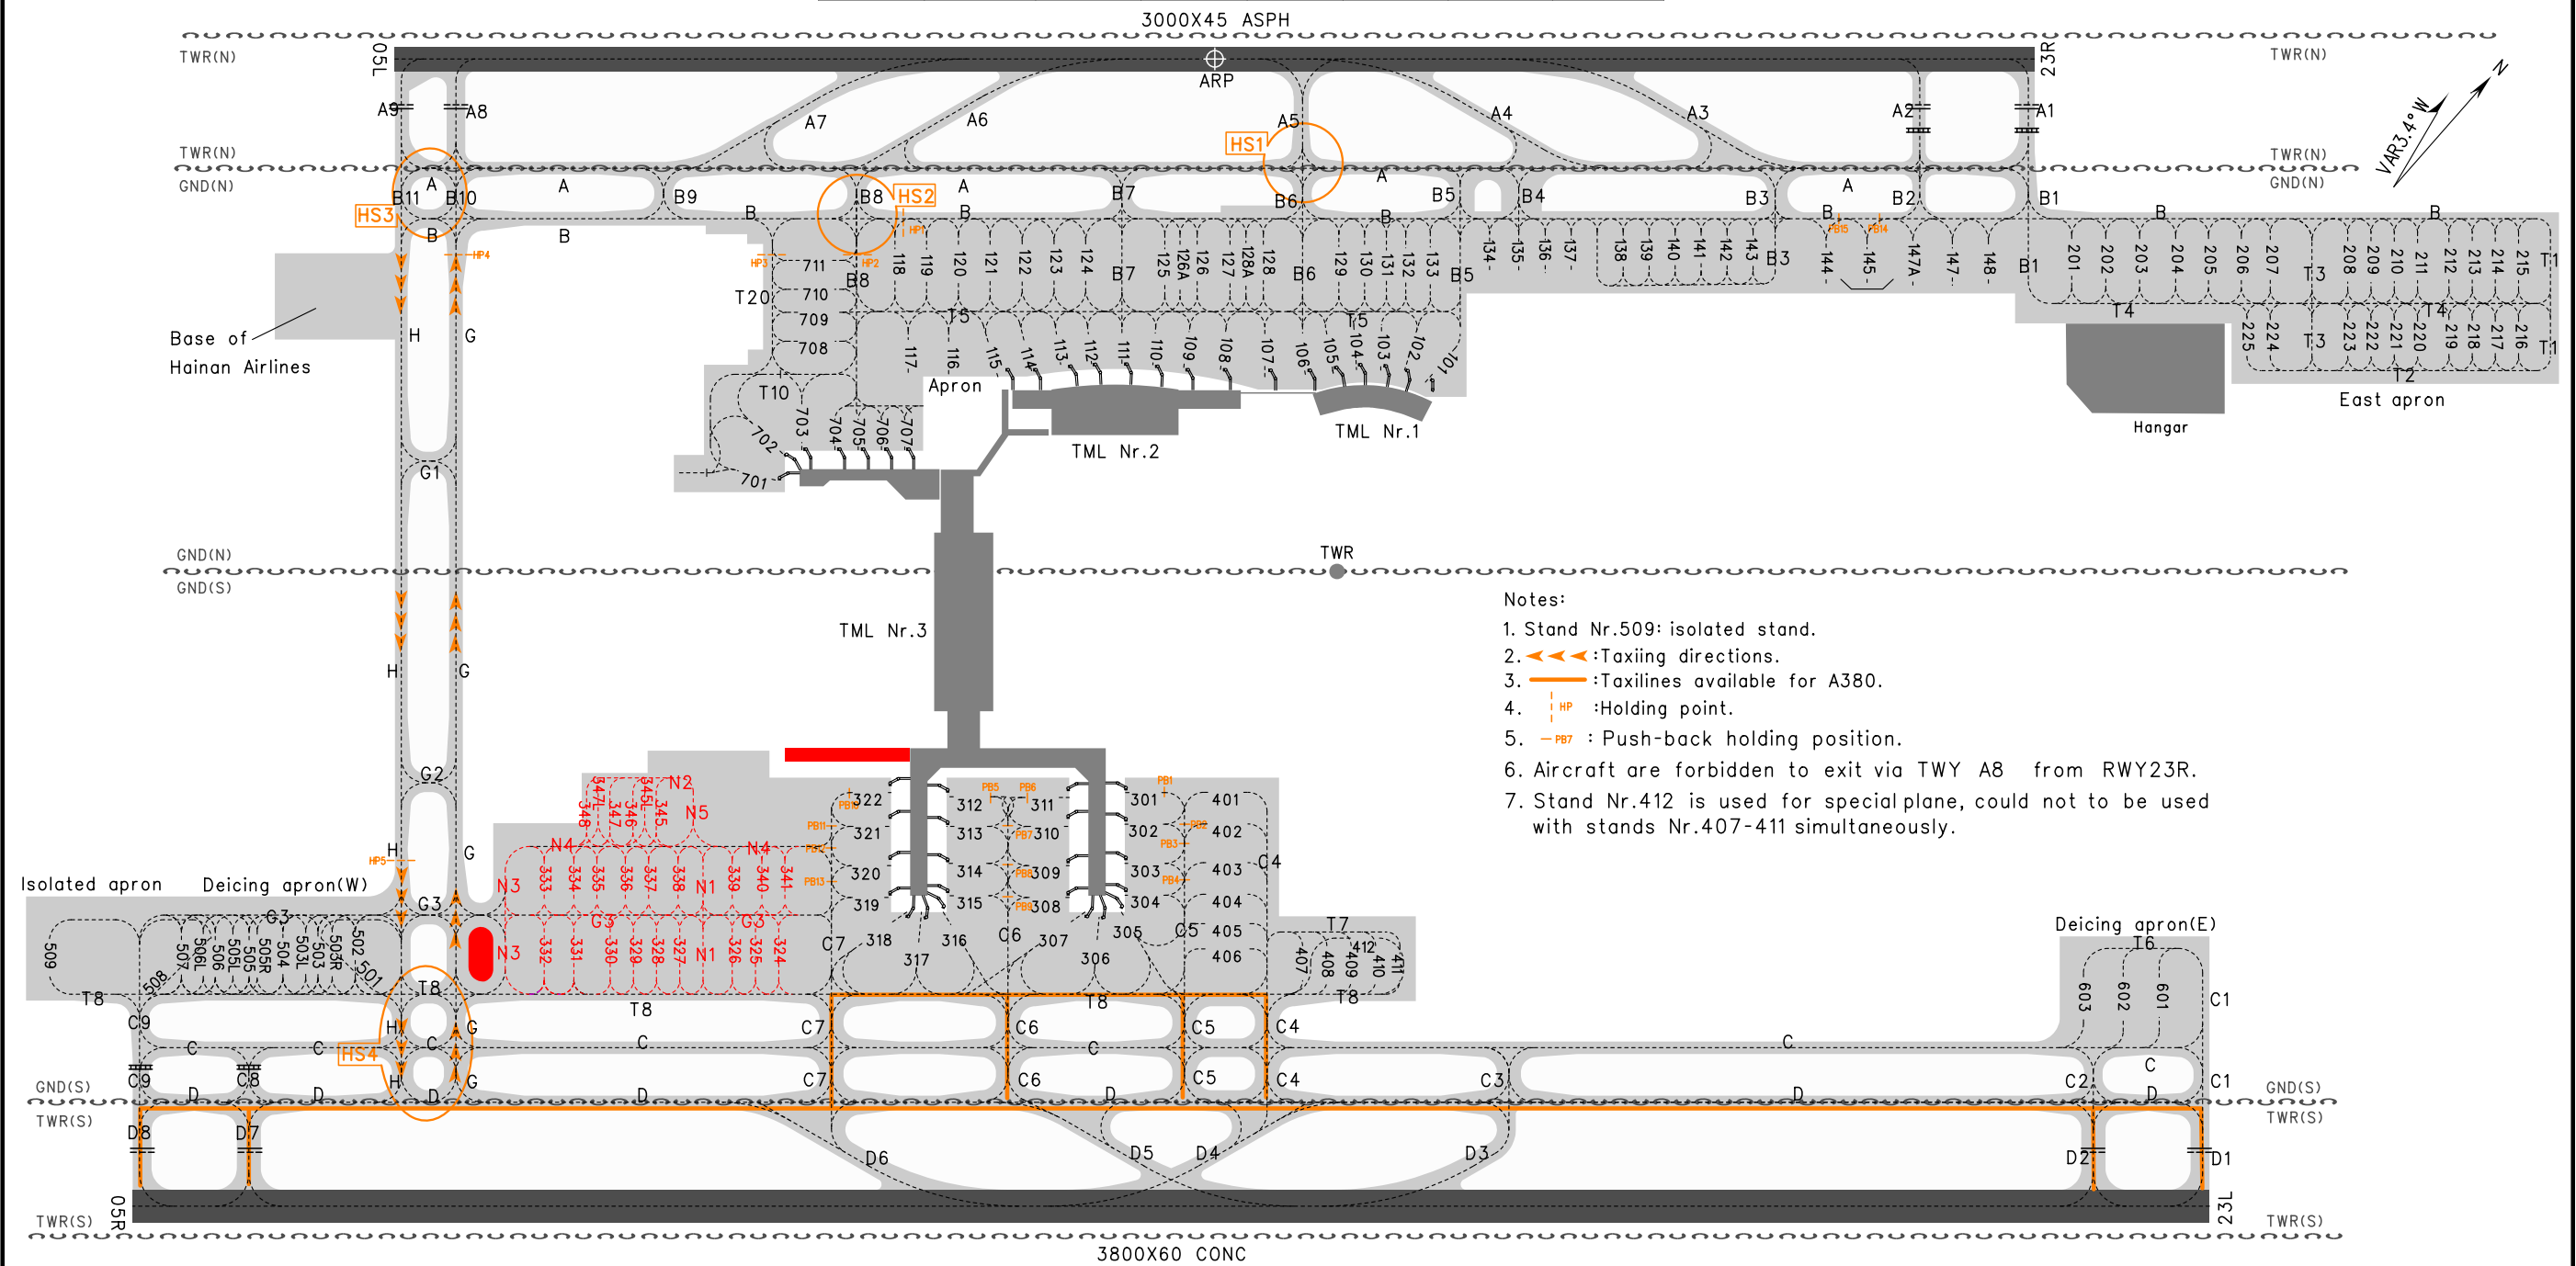

- Notes:
- Stand Nr.509: isolated stand.
 - ←→:Taxiing directions.
 - :Taxilines available for A380.
 - HP :Holding point.
 - PB7 : Push-back holding position.
 - Aircraft are forbidden to exit via TWY A8 from RWY23R.
 - Stand Nr.412 is used for specialplane, could not to be used with stands Nr.407-411 simultaneously.

Changes: New stands and TWYs, delete stands Nr.323, 327A, 329A, 509A, 509B