


## 5 ALIGNED TO CENTRE

### 对准中线

The aircraft is **10** meters from the stop position. The absence of any direction arrow indicates an aircraft on the centre line.

如图，航空器距停止位置 **10** 米时，如果不显示任何方向箭头则表明航空器处于中轴线上。

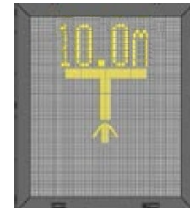


## 6 SLOW DOWN

### 减速

If the aircraft is approaching faster than the accepted speed(**2m/s**), the system will show ‘SLOW DOWN’ or ‘**SLOW**’ as a warning to the pilot.

如果航空器的速度超过系统设定的限制速度(2 米/秒)，系统将向飞行员显示“SLOW DOWN”或“**SLOW**”警告。

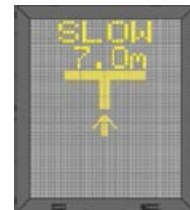


## 7 AZIMUTH GUIDANCE

### 方位引导

The aircraft is **10** meters from the stop-position. The yellow arrow indicates an aircraft to the **left** of the centre line, and the red flashing arrow indicates the direction to turn.

如图，航空器距泊位 **10** 米。黄色箭头表明航空器偏到了中轴线的**左边**，红色箭头指出了航空器应转的方向。

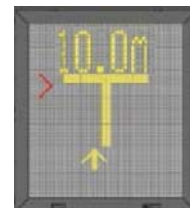


## 8 STOP POSITION REACHED

### 到达停止位

When the correct stop-position is reached, the display will show ‘STOP’ and red lights will be lit.

当航空器到达正确的泊位位置时，显示器将显示“STOP”(停止)和如图所示的红色方块图标。

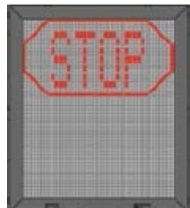

## 9 DOCKING COMPLETED

### 停泊结束

When the aircraft has parked, ‘OK’ will be displayed.

当停泊过程结束时，将显示“OK”。

