
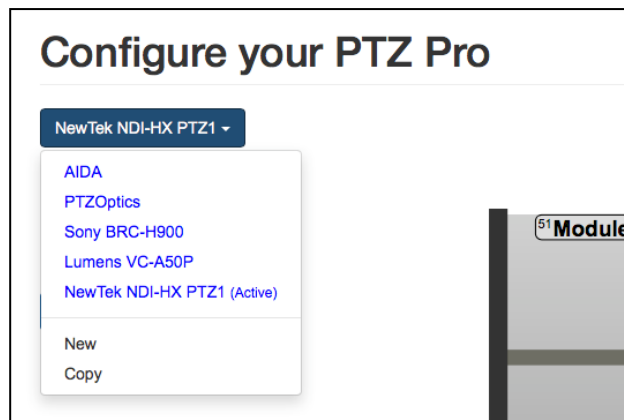
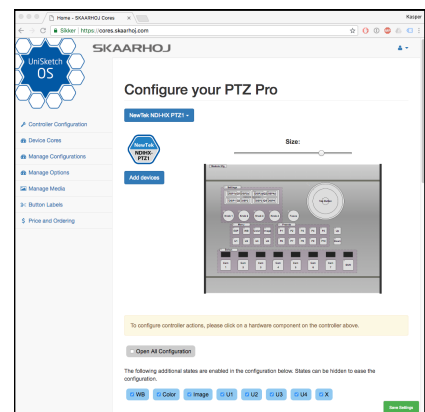


PTZ Control

Select Default Configuration

Our controllers such as the PTZ Pro and the PTZ Fly comes with a range of default configurations. In order to select the one suited for your camera brand please use the **"Online Configuration"** functionality in our Firmware Application. You must connect your device to your computer with the USB cable and have internet access as well.

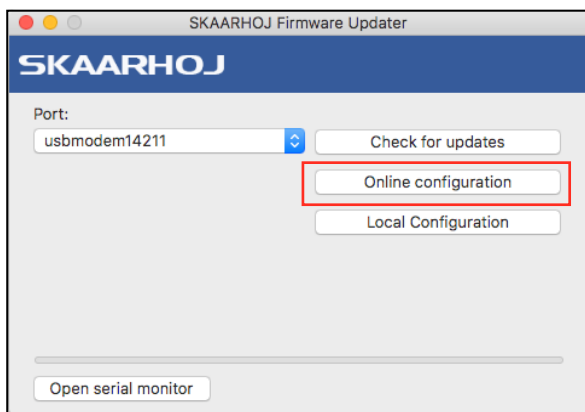

Setting IP for a Device Core / How our "Camera Selector" Works

When you have selected a default configuration you need to set IP settings as well. For PTZ Control our Device Core works by setting a "Master IP" and the IP addresses of your cameras needs to be **consecutive**.

In this case the NewTek Device Core is set to 192.168.10.213 which means the controller will connect to:

Cam 1 on 192.168.10.213

Cam 2 on 192.168.10.214

Cam 3 on 192.168.10.215

And so forth

Save Settings and Update Firmware

Have you made any changes to IP settings or functionality you need to press "**Save Settings**" on the configuration page *and* press "**Check for updates**" in the Firmware Application.

This will generate a new Firmware on our server and download it to the unit.

