


VIRTUATILT – PinballFX VR Setup

Following some basic instructions to have your VirtuaTilt up and running with PinballFX VR.

NOTE: You need an OTG adapter to directly connect your VirtuaTilt to Meta Quest (USB-A to USB-C)

Pinscape Configuration

Open Pinscape Config Tool and go to **Settings**--> **Button Inputs** :

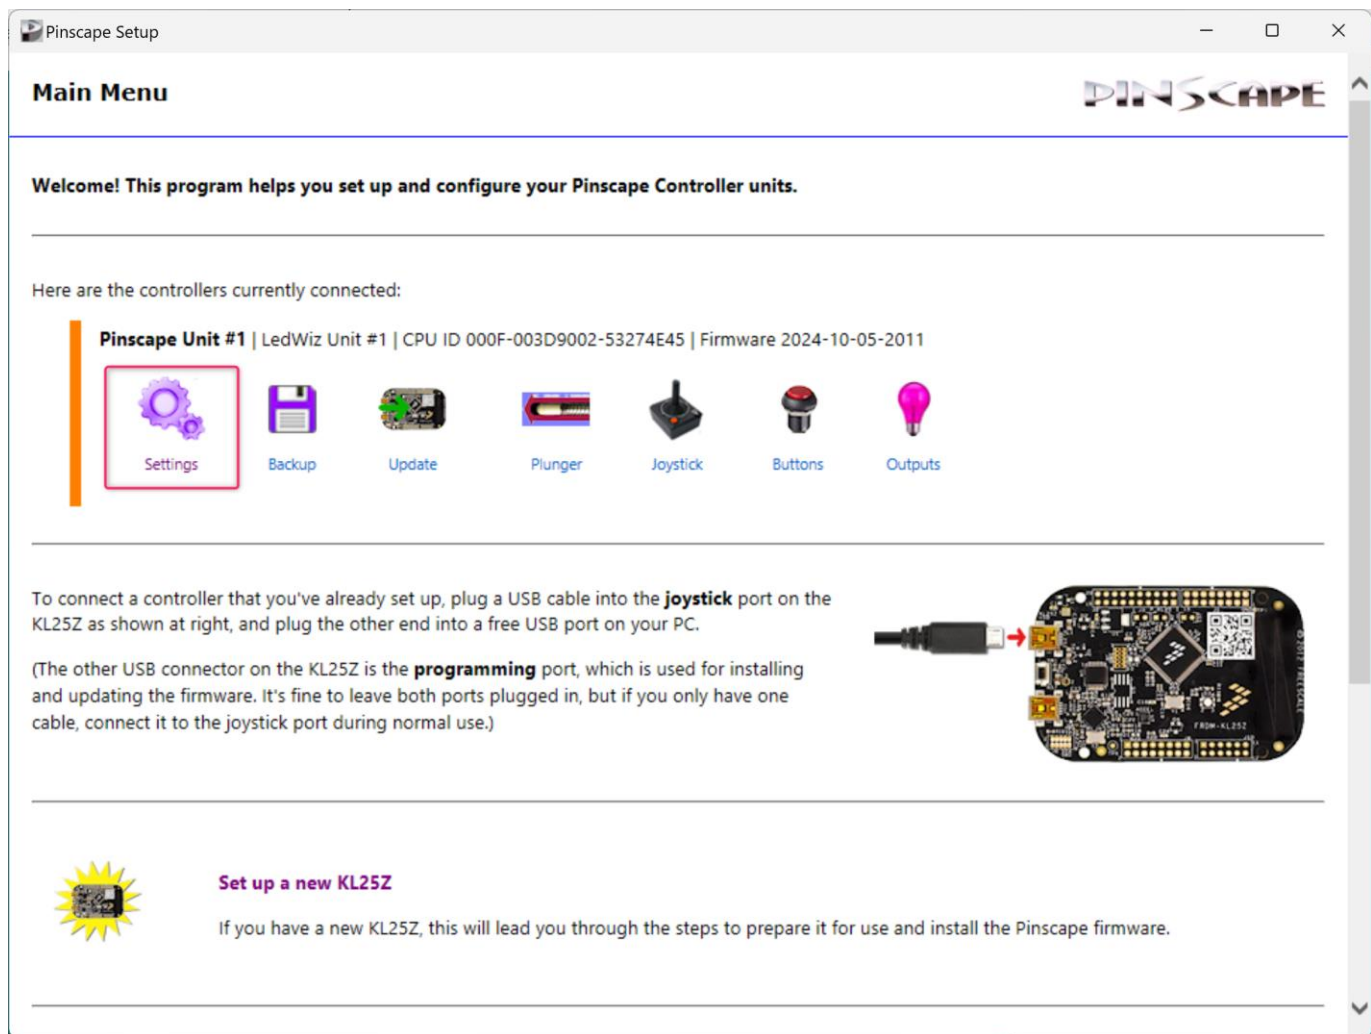

Button inputs. You can use the KL25Z as a key encoder to connect pinball-style buttons on your cabinet to assignment to change a setting.

Test Buttons

Shift button number: 0 [Help](#)







☒ Shift OR Key mode

☐ Shift AND Key mode

[Set standard joystick buttons](#) | [Set standard keyboard keys](#) | [View standard key assignments](#)

No.	Port	PC Input	Options	VP Usage
1	PTC2	U		-
2	PTB3	D		-
3	PTB2	^ 6		Coin In (fourth coin slot)
4	PTB1	* 8		Service Button "Down/-"
5	PTE30	% 5		Coin In (main/left slot)
6	PTE22	F		-
7	PTE5	7		-
8	PTE4	8		-
9	PTE3	9		-
10	PTE2	10		-
11	PTB11	11		-
12	PTB10	12		-
13	PTB9	13		-
14	PTB8	14		-

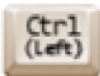Remap buttons exactly like this:



Plunger/Launch Ball







Left Flipper







Right Flipper

Left MagnaSave

Right MagnaSave

Fire Button





















Nudge Left

Nudge Right

Nudge Up

When you're done, click on **"Program KL25Z"**:

5	<input type="text" value="PTE30"/>	↑				Coin In (main/left slot)
6	<input type="text" value="PTE22"/>	↑				-
7	<input type="text" value="PTE5"/>	↑				-
8	<input type="text" value="PTE4"/>	↑				-
9	<input type="text" value="PTE3"/>	↑				-



That's it! Enjoy!