

3.6 DISPLAY BOARD and DIGITAL OUT BOARD ASSEMBLIES

A

B

C

D

B3/3
CN701

Connect to Custom board

CN601
52492-3620

D DISPLAY BOARD ASSY
(DWG1503)

ENCODER

LED ON/OFF

D FLIP-FLOP

FL HOLDER
DEB1396-2

V601
DEL1031

IC602
HD74HC175FP

S614
DSX1051

Note

DIODE

No Mark 1SS355
CAPACITOR No mark: μ F

No mark ceramic CKSQYF

RESISTOR Ω

No mark Carbon film resistor
No mark $\frac{1}{10W}$




SWITCHES:

- S601: TRACK SEARCH (4)
- S602: SEARCH (1)
- S603: PLAY/PAUSE (6)
- S604: TRACK SEARCH (4)
- S605: SEARCH (i)
- S606: CUE
- S607: DIGITAL JOG BREAK (JET)
- S608: MASTER TEMPO
- S609: DIGITAL JOG BREAK (ZIP)
- S610: DIGITAL JOG BREAK (WAH)
- S611: EJECT (0)
- S613: TIME MODE/AUTO CUE
- S615: DIGITAL JOG BREAK (HPLD)

DISC

CUE

PLAY

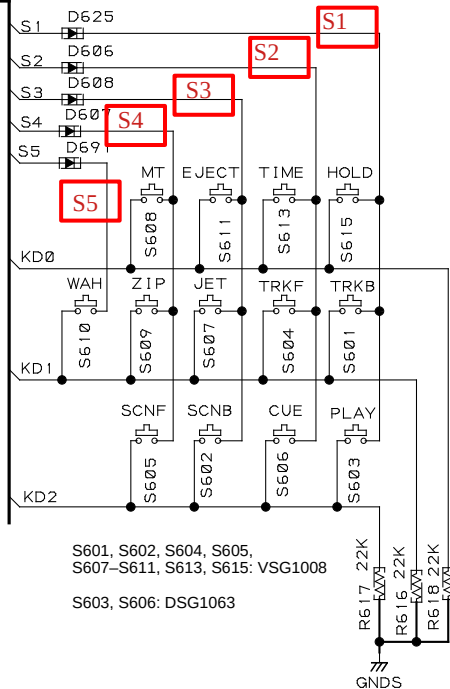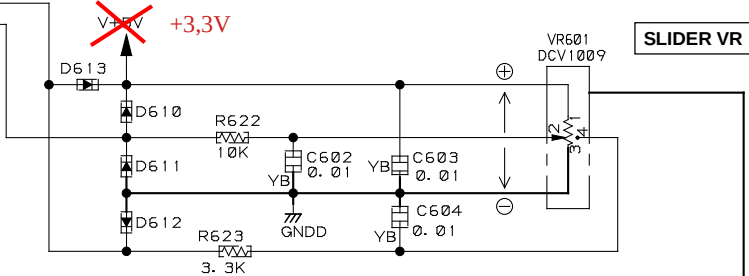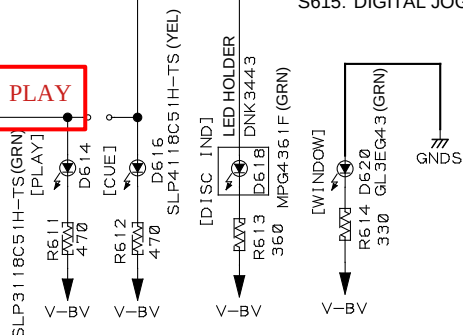

KUC type Only



DIGITAL OUT BOARD ASSY (DWZ1082)

SIGNAL ROUTE

➔: RF and Audio Signal Route

