



5G NB-IOT KIT

User Manual

Table of Contents

1. Package contents:	2
2. General Description.....	3
2.1 Overview.....	3
2.2 Key Features	3
2.3 Overview Diagrams	4
2.4 Physical Characteristics	6
2.5 Peripherals – Key Components	7
2.6 Peripherals – IO Connections.....	8
2.7 Hardware Specification	9
2.8 PIN Description	10
2.9 BG96 chipset.....	11
2.10 Interface between SAM21D and BG96.....	11
3. Using the Board with Arduino IDE	13
3.1 Installing the Software	13
3.2 Setting Up Arduino IDE	13
3.3 Running Arduino Sketch.....	16
4. Using the Arduino Sketches with Serial Interface.....	18
5. Procedure for Operating the BG96 Wireless Unit.....	21
6. Running the GNSS.....	26
7. AT Commands.....	28
8. Document History	31
9. References	32
APPENDIX A – SCHEMATIC.....	33

1. Package contents:

NB-IoT Kit Package:

- Hardware board.
- Two USB cables.
- One LTE & GPS antenna

Download software:

Software can be downloaded from the following website:

<https://www.5ghub.us/download>

Software to download:

- QNavigatorV1.6 (in the folder \Tools).
- Quectel driver (in the folder \Driver).

Documentation:

- Quectel AT commands and GNSS commands manual (in the folder \Doc).



Figure 1. Hardware Board – unboxed with one LTE/GPS antenna attached

2. General Description

2.1 Overview

The NB-IoT kit is a cellular and GPS kit that can be used for the 5G wireless technology. The kit includes a hardware board, LTE&GPS antenna, and USB cables. The board is a powerful board that features a microcontroller and wireless modem. The microcontroller is an Atmel's SAMD21G18A MCU which features a 32-bit ARM Cortex® M0+ core. The wireless modem is BG96 which is an embedded IoT (LTE Cat-M1, LTE Cat-NB1 and EGPRS) wireless communication module. BG96 wireless modem provides a maximum data rate of 375Kbps downlink and 375Kbps uplink. It features ultra-low power consumption, provides data connectivity on LTE-TDD/LTE-FDD/GPRS/EDGE networks, and supports half-duplex operation in LTE networks. It also provides GNSS to meet customers' specific application demands

The board provides rich sets of Internet protocols, industry-standard interfaces (USB/UART/I2C/Status Indicator) and abundant functionalities. The board offer a high integration level and enables integrators and developers to easily design their applications and take advantage of the board low power consumption, many functionalities, and USB drivers for Windows 7/8/8.1/10, Linux and Android.

The kit board is a rich hardware board that can be used for the latest 5G wireless technology and enables a variety of smart and 5G applications for devices, and acts as a great educational tool for learning about 5G and 32-bit application development. It enables large number of applications such as wireless POS, smart metering, tracking, smart transportation, smart buildings, smart city, and smart homes.

The board is also compatible with Arduino and Arduino software (IDE). Arduino sketches and examples are provided with the kit and additional sketches can be developed and uploaded to the board.

2.2 Key Features

- Atmel ATSAMD21G18 MCU
- Quectel BG96 NB-IoT module
- External GPS antenna Connector
- External LTE antenna connector
- Supports LTE NB-IoT and Machine Type Communications (MTC)
- Supports EGPRS
- Global Frequency Band B1/B2/B3/B4/B5/B8/B12/B13/B18/B19/B20/B26/B28/B39 (B39 for Cat.M1 only) for LTE and 850/900/1800/1900MHz for EGPRS
- Supports the protocols TCP/UDP/PPP/ SSL/ TLS/ FTP(S)/ HTTP(S)/ NITZ/ PING/ MQTT
- Supports SMS
- Supports GNSS technology (GPS, GLONASS, BeiDou/Compass, Galileo, QZSS)
- Compact board size of 58mm x 42mm
- Nano USIM card
- Arduino IDE Compatible
- Works with Windows, Linux, or Android
- Ready for smart applications and development (smart home, smart city, smart transportation, smart metering, smart farming, smart waste management, asset tracking, location, navigation, mapping, and timing applications). Application such as Gas Detector, Soil PH Tester, Optical Sensor, Machinery Alarm System, Irrigation Controller, Elevator, Asset Tracking Electronics,

Person/Pet Tracking, Water/Gas Metering, Smart Parking System, Fire Hydrant, Smoke Alarm, Trash Bin, Street Lighting

- The board can operate on an external power supply of 3V to 5V. The recommended voltage is 5V.
- The board can be powered via the USB connector or with an external DC power supply. The power source is selected automatically.
- External DC Power supply (non-USB) can be provided from an AC-to-DC adapter (such as a wall-wart) or battery, and can be connected using a 2.1mm center-positive plug connected to the board's power jack, or directly to the GND and VIN pins.
- Each of the 12 general purpose I/O pins on the board can be used for digital input or digital output using **pinMode()**, **digitalWrite()**, and **digitalRead()** functions. Pins used for PWM can be using **analogWrite()** function. All pins operate at 3.3 volts. Each pin can source or sink a maximum of 7 mA and has an internal pull-up resistor (disconnected by default) of 20-50 K ohm.

2.3 Overview Diagrams

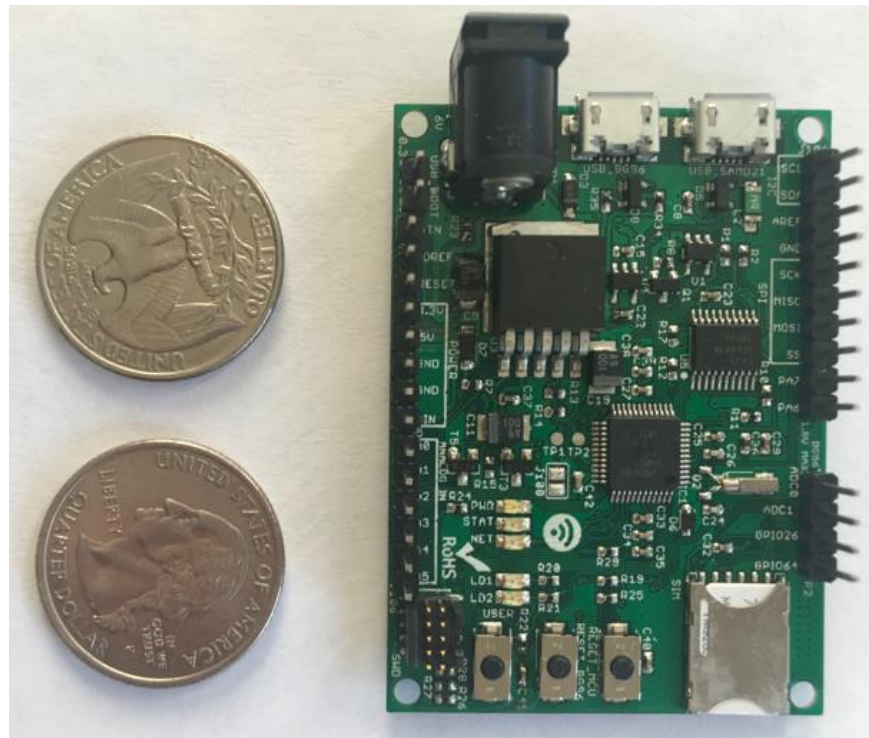


Figure 2. Hardware Board Overview Diagram – Top View



Figure 3. Hardware Board Overview Diagram – Bottom View

2.4 Physical Characteristics

The width and length of the board is 48mm (width) by 52 mm (length). The board have four screw holes in each corner that allows the board to be attached to a surface or case.

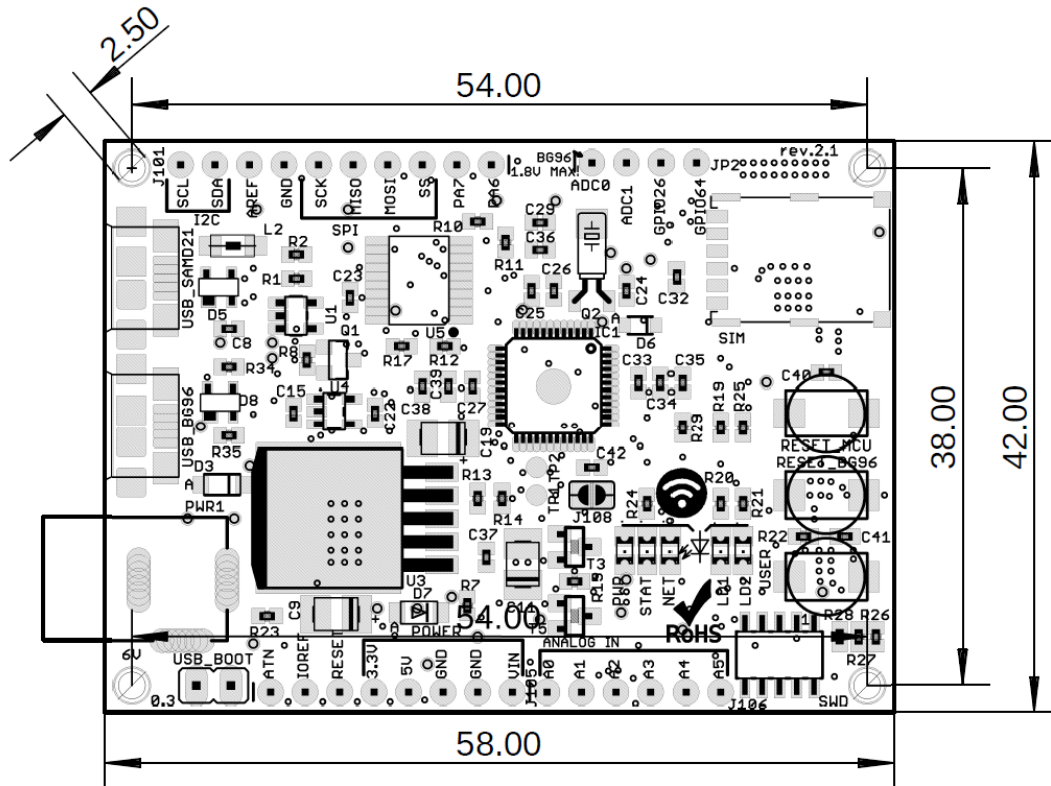


Figure 4. Hardware Board Top View – External Dimensions

2.5 Peripherals – Key Components

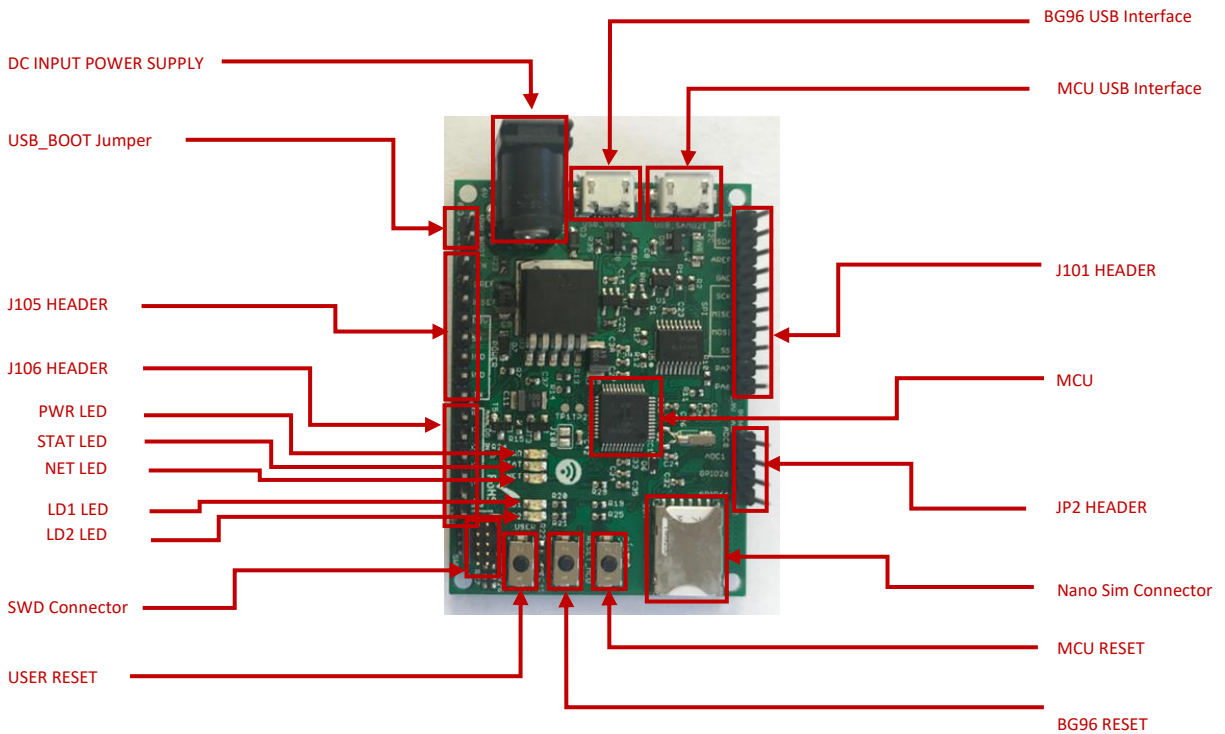


Figure 5. Board Top Side – Key Components

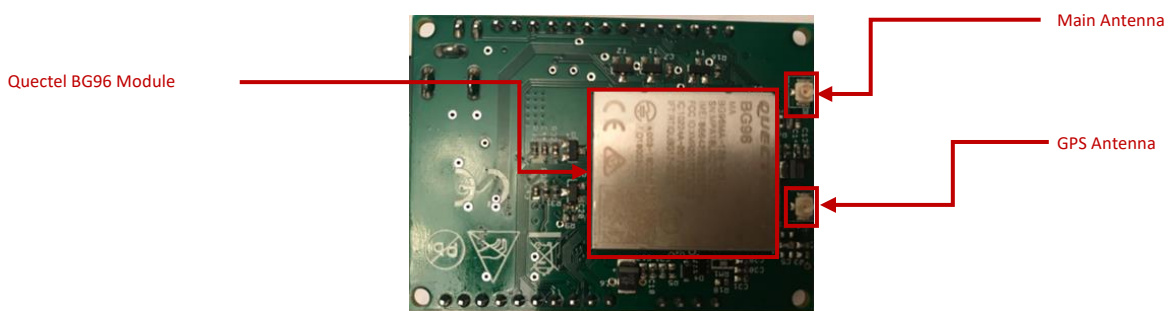


Figure 6. Board Bottom Side – Key Components

2.6 Peripherals – IO Connections

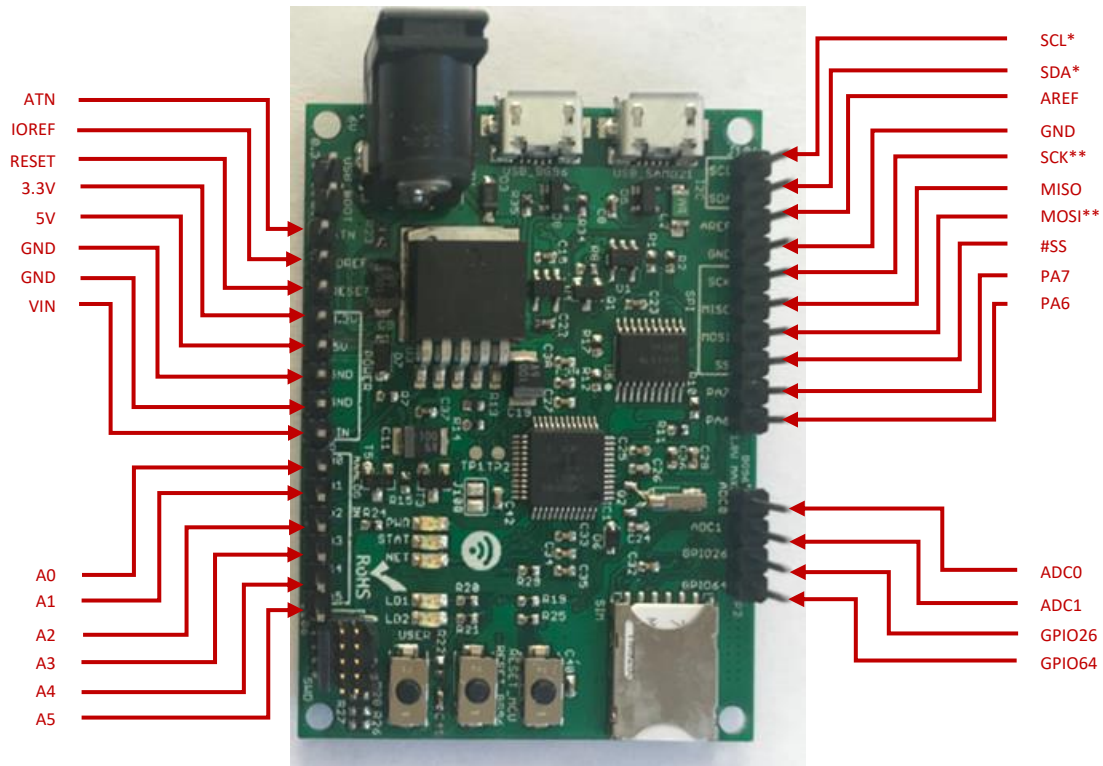


Figure 7. Board Extension Connectors

* I2C interface lines might be configured as USART interface SDA line can work then as USART TXD and SCL line can work as USART RXD)

** MOSI and SCK lines might be configured as USART interface (MOSI line can work then as USART TXD and SCK line can work as USART RXD)

2.7 Hardware Specification

Technical Specification	
Microcontroller (MCU)	Atmel ATSAM21G18, 32-Bit ARM Cortex M0+
Clock Speed	48 MHz
Flash Memory	256 KB
SRAM	32 KB
NB-IoT Module	Quectel BG96
Dimension	48mm (width) by 52 mm (length)
Weight	18 gram
Power Supply	DC Power Supply, USB, VIN, or Battery External supply can range from 3V to 5 V
LED	LED1, LED2, Power LED, Status LED, Netlight LED
Interfacing Logic Voltage Level (Operating Voltage)	3.3V
Voltage output	5V, 3.3V
RESET buttons	Two; one for MCU and one for BG96
User-defined Button	1 connected to MCU
General-purpose digital I/O Pins	12 (A0-A5, DGI_GPIO2, DGI_GPIO3, SS, MOSI, MISO, SCK)
GPIO	2 connected to BG96
ADC	2 connected to BG96
USB	2
I2C(hardware) port	1
SPI	1
UART	1
ADC pins	6 (8/10/12-bit ADC channels)
DAC pin	1 (10-bit DAC)
External interrupts	12 (All general-purpose PINs)
PWM pin	6
DC Current per I/O Pin	7 mA
JTAG Debug	Cortex Debug Connector (Single Wire Debug)
USIM	Nano
GNSS	GPS, GLONASS, BeiDou/Compass, Galileo, QZSS
Antenna	1 main antenna and 1 GPS antenna
Band	LTE-FDD, B1/B2/B3/B4/B5/B8/B12/ B13/B18/B19/B20/B26/B28 LTE-TDD: B39 (for Cat M1 only)
Certification	FCC, CE
Mobile Operator Certification	Verizon and currently for AT&T

Notes:

- UART can be programmed through any of general-purpose pins.
- SPI can be programmed through any of general-purpose pins.

2.8 PIN Description

PIN	DIRECTION	Description
DC Power Jack	I	The board can be supplied with power either from the DC power jack (3V-5V), the USB connector (5V), or the VIN pin of the board (3V-5V). Supplying voltage via the 5V or 3.3V pins bypasses the regulator and can damage the board if it is not sufficiently regulated (This is not recommended)
LED (PWR)	O	LED is lighted on when the board is power on.
LED0 (USER)	O	LED which can be controlled from microcontroller PB3 (PIN 49). When the pin is HIGH value, the LED is on, when the pin is LOW, it's off
LED1 (USER)	O	LED which can be controlled from microcontroller PA27 (PIN 39). When the pin is HIGH value, the LED is on, when the pin is LOW, it's off
LED (NET)	O	Indicate the BG96 operation status
LED (STAT)	O	Indicate the BG96 network activity status
SAM21 RESET button	I	Reset the microcontroller
BG96 RESET button	I	Reset the BG96 module
User Button	I	Connected to PA11 (pin 16) of microcontroller and can be used for any software sketch purposes
ATN		
IOREF	O	Provides the voltage reference with which the microcontroller operates. A device can read the IOREF pin voltage and select the appropriate power source or enable voltage translators on the outputs for working with the 5V or 3.3V
TARGET_RESET	I	Reset the microcontroller. Bring this line LOW to reset the microcontroller. The microcontroller can also reset through the RESET button
3.3V	O	3.3V generated by the on-board regulator. Maximum current draw is 800 mA. The regulator also provides power to the SAMD21 microcontroller and BG96
5V	O	Regulated 5V from the regulator on the board. The board can be supplied with power either from the DC power jack (3V - 5V), the USB connector (5V), or the VIN pin of the board (3-5V). Supplying voltage via the 5V or 3.3V pins bypasses the regulator and can damage the board if it is not sufficiently regulated (This is not recommended)
GND		Ground
GND		Ground
VIN	I	Input voltage to the board when it's using an external power source (as opposed to 5 volts from the USB connection or other regulated power source). You can supply voltage through this pin.
A0	I	Six analog inputs which can provide up to 12 bits of resolution (i.e. 4096 different values). By default, each input measures
A1	I	

A2	I	from ground to 3.3 volts, though is it possible to change the upper end of their range using the AREF pin
A3	I	
A4	I	
A5	I	A0 can also be used as a DAC and provides a 10bit voltage output with analogWrite() function
SCL		I2D/TWI communication. The SDA (data line) and SCL (clock line)
SDA		
AREFA	I	Input reference voltage for the analog inputs
GND		Ground
SCK	O	Six PWM pins. Provide 8-bit PWM output with the analogWrite() function
MISO	I	
MOSI	O	
SS	I	
PA7 (DGI_GPIO3)	IO	
PA6 (DGI_GPIO2)	IO	
Cortex Debug Connector	IO	Using Single Wire Debug to burn bootloader and debug the board
ADC0	I	Connected to BG96. General purpose analogue to digital converter
ADC1	I	Connected to BG96. General purpose analogue to digital converter
GPIO0	IO	Connected to BG96. General purpose IO
GPIO1	IO	Connected to BG96. General purpose IO
USIM	I	Used to insert a Nano USIM. Connected to BG96
USB Boot	I	Connected to BG96. Force the BG96 to enter into emergency download mode
USB	IO	Connected to Microcontroller
USB	IO	Connected to BG96

Precaution

The board runs at 3.3V. The maximum voltage that the I/O pins can tolerate is 3.3V. Applying voltages higher than 3.3V to any I/O pin could damage the board

2.9 BG96 chipset

All functionality of the BG96 chipset shall be implemented excluding the following features. That is, the following features are not supported [1][2].

- Audio, Earphone, and Codes are not supported.
- PCM and I2C are not supported
- PSM_IND and AP_READY are not supported

2.10 Interface between SAM21D and BG96

The Microcontroller communicates with the BG96 through UART interfaces:

- **UART1:** (PA12/PA13/PA14/PA15). Used for data transmission and AT command communication 115200bps by default. The default frame format is 8N1 (8 data bits, no parity, 1 stop bit) Support RTS and CTS hardware flow control.
- **UART3:** (PB23/PB22). Used for outputting GNSS data or NEMA sentences 115200bps baud rate.

3. Using the Board with Arduino IDE

3.1 Installing the Software

To use the board with Arduino IDE and starts running Arduino projects and sketches, install the following software:


- 1- Install Arduino IDE for Windows from the following web site
<https://www.arduino.cc/en/Main/Software>
- 2- Download and Install Quectel Driver here:
This will install Quectel driver on Windows.
<https://github.com/5ghub/5G-NB-IoT/tree/master/Driver>
- 3- Download and Install QNavigator tool for Quectel BG96 here:
<https://github.com/5ghub/5G-NB-IoT/tree/master/Tools>
- 4- Download and save the file **5G-NB-IoT_Arduino.zip** here:
<https://github.com/5ghub/5G-NB-IoT>

All the following software can be installed from the GitHub location here:


<https://github.com/5ghub/5G-NB-IoT>

3.2 Setting Up Arduino IDE


- 1- Connect a USB cable from the **computer USB** to the **USB_SAMD21 port** to power on the board.
- 2- Connect a USB cable from the **computer USB** to the **USB_BG96 port** to connect to the BG96.
- 3- Launch Arduino IDE and choose **File->Preferences**. In the Additional Boards Manager URLs, insert the following URL:
https://raw.githubusercontent.com/5ghub/5G-NB-IoT/master/package_5G-NB-IoT_index.json

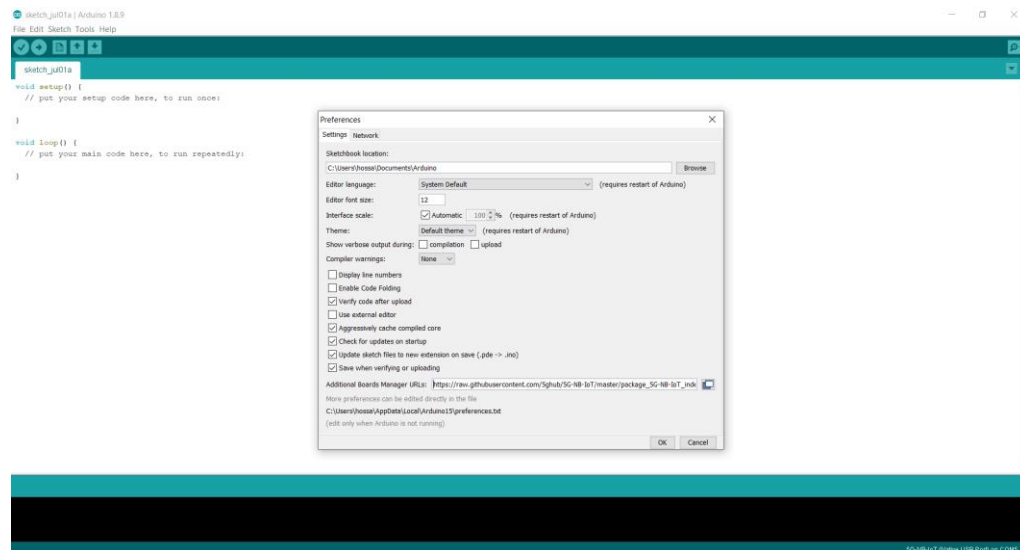


- 4- In Arduino IDE, choose **Tools->Boards Manager**, select and install **“5G-NB-IoT SAMD Boards”**.

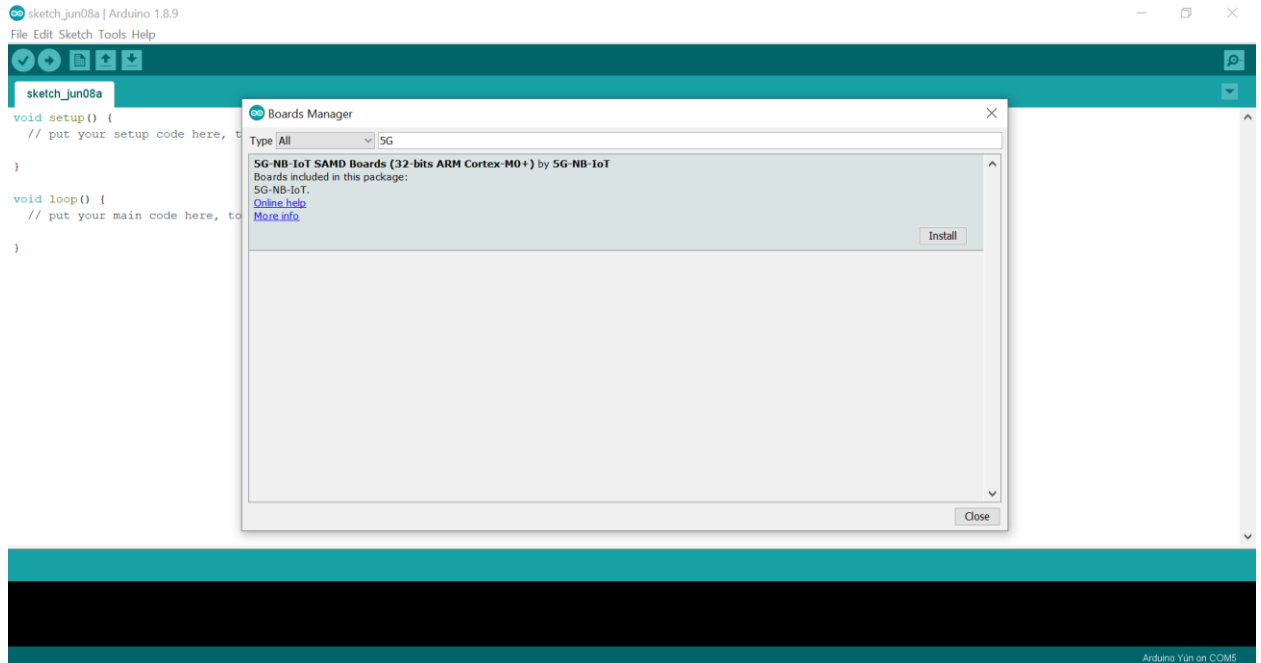

5- Choose “5G NB-IoT (Native USB Port)”

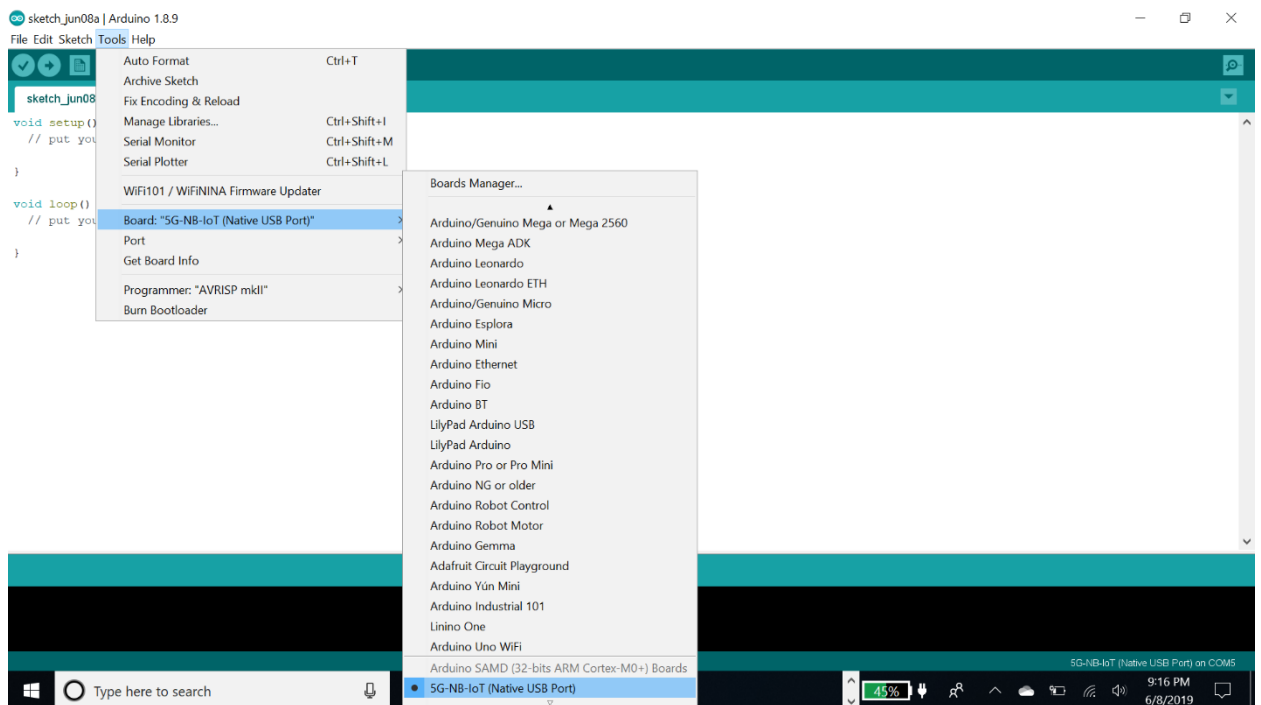


6- In the Arduino IDE, Choose **Port** and select the serial port where the board appears.

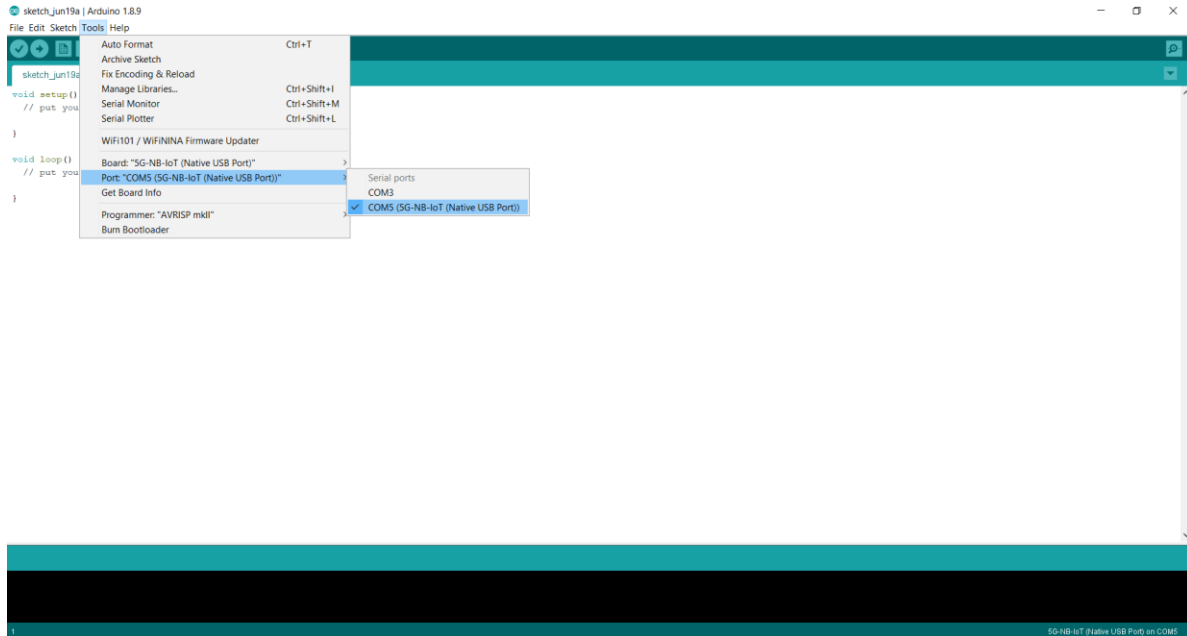


7- In the Arduino IDE, Choose **Sketch->Include Library->Add .Zip Library** and select the file **5G-NB-IoT_Arduino.zip**

You are now ready to start running Arduino sketches and projects.

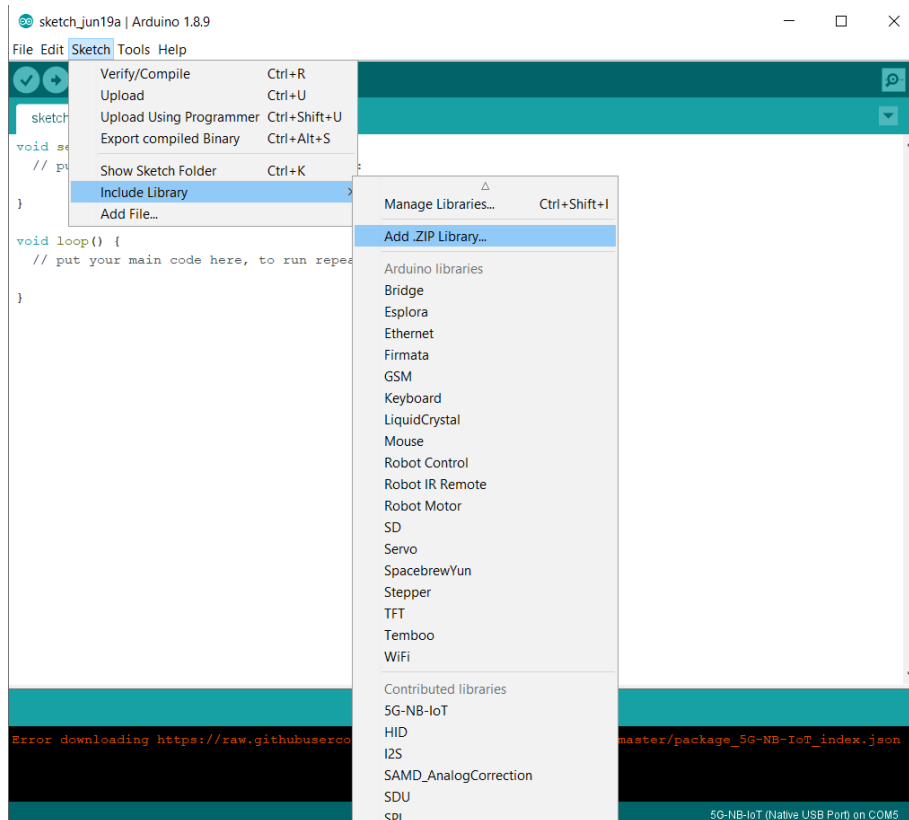


3.3 Running Arduino Sketch


- 1- Using Arduino IDE, open the Arduino sample **Test_All_PIN.ino**, choose **Sketch->Upload**.

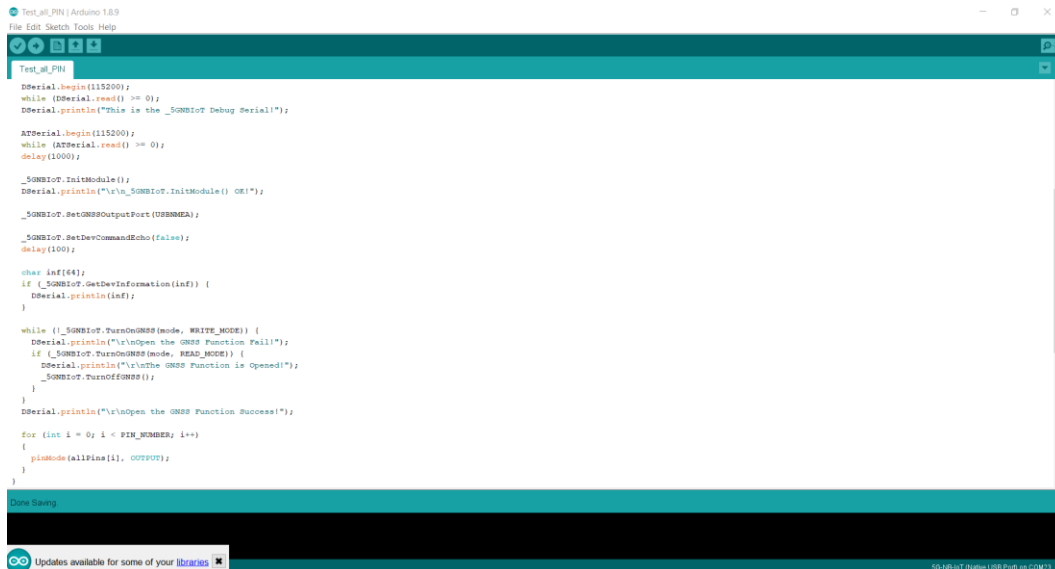

- 2- In the Device manager, the Arduino and Quectel USB Modem and ports shall show up as in this screen shoot:

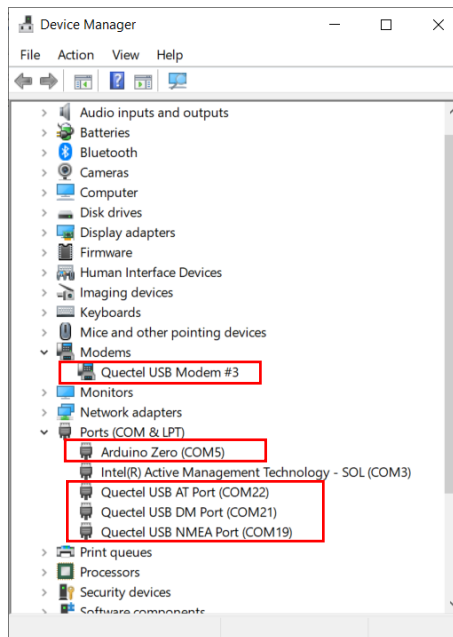

After compiling and uploading the Arduino sketch, the LEDs will blink and the BG96 is enabled as in the following picture:

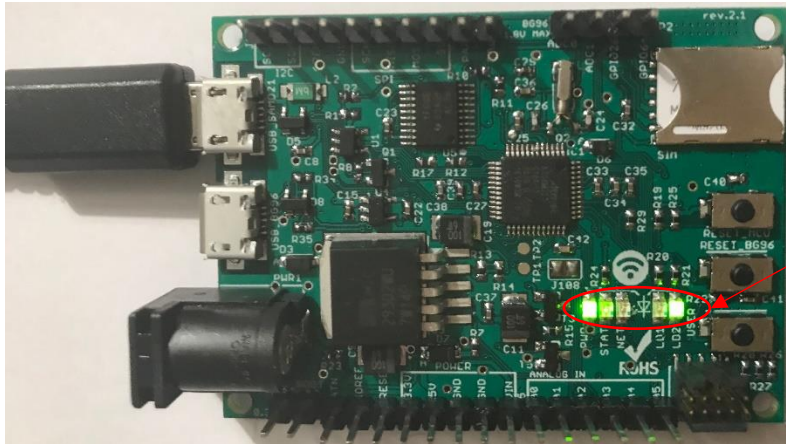

PWR, STAT LEDs are ON
LD1, LD2 LED are blinking

The following table show different five LEDs status after uploading this sketch


LED	Behavior	Description
PWR	ON	Indicates the MCU is powered on
STATE	ON	Indicates the BG96 is powered on
NET	Flicker slowly (200ms High/1800ms Low)	Network Searching
	Flicker slowly (1800ms High/200ms Low)	Idle
	Flicker slowly (125ms High/125ms Low)	Data transfer is ongoing
LD1	Blinking	User controlled LED
LD2	Blinking	User controlled LED

4. Using the Arduino Sketches with Serial Interface


The board has a serial interface where output can be sent via the serial interface to the computer. Use USB-to-Serial cable such as the Prolific USB-to-Serial cable.




Connect the USB-to-Serial cable to the PC, and the device manager shall display a new COM port.

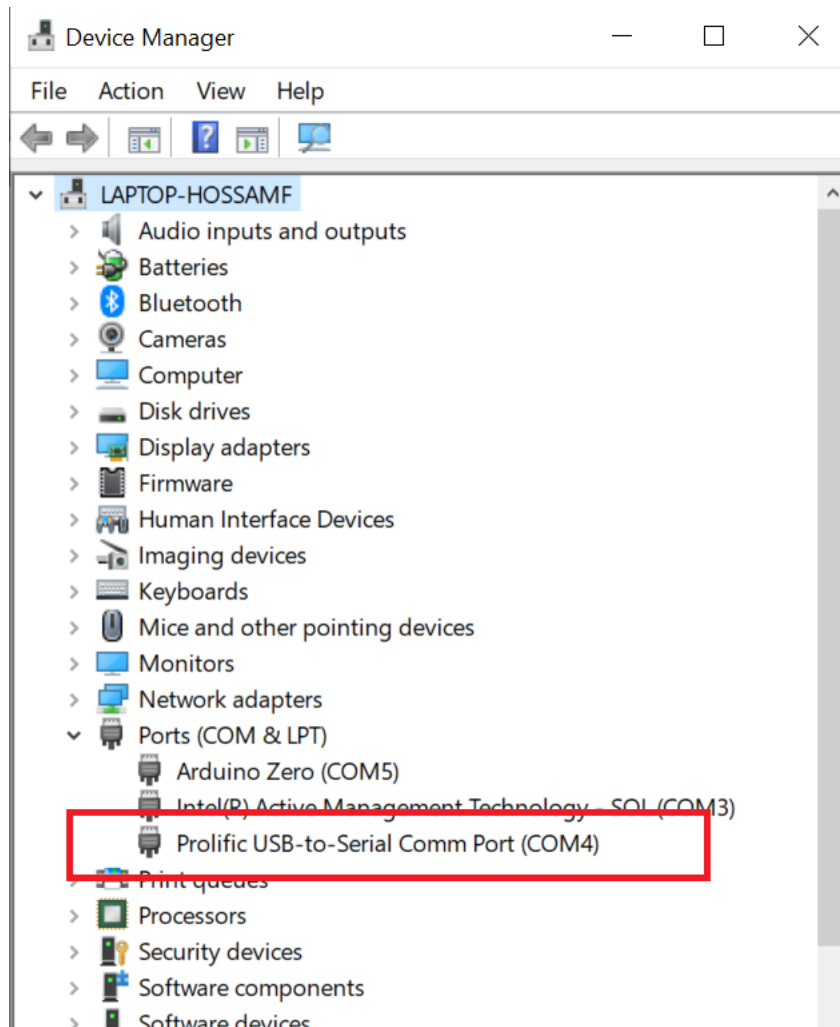


The board has the serial interface on the J101 as in the following figure.

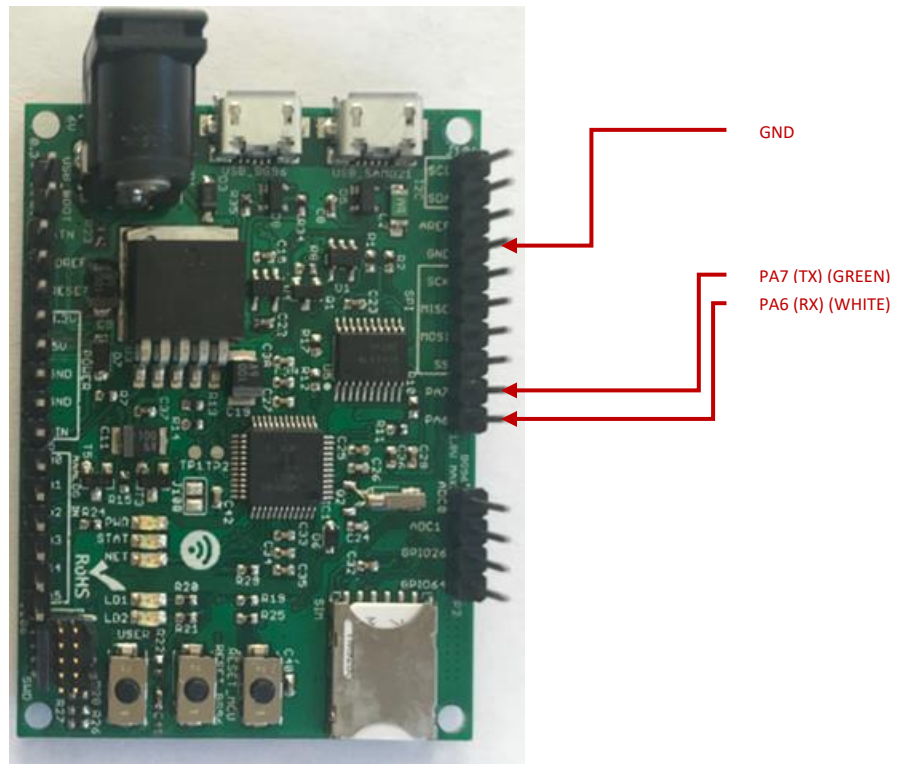


Connect the USB-to-Serial cable from the PC to the board as shown.

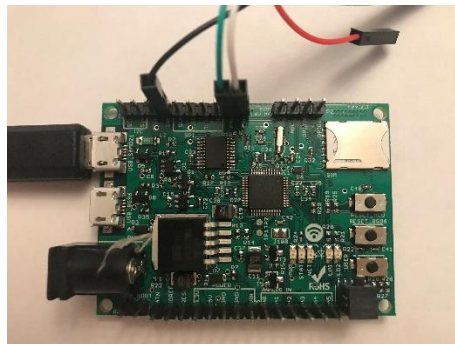

Launch any serial port software to connect to the board serial board. Set the COM speed to 115200.

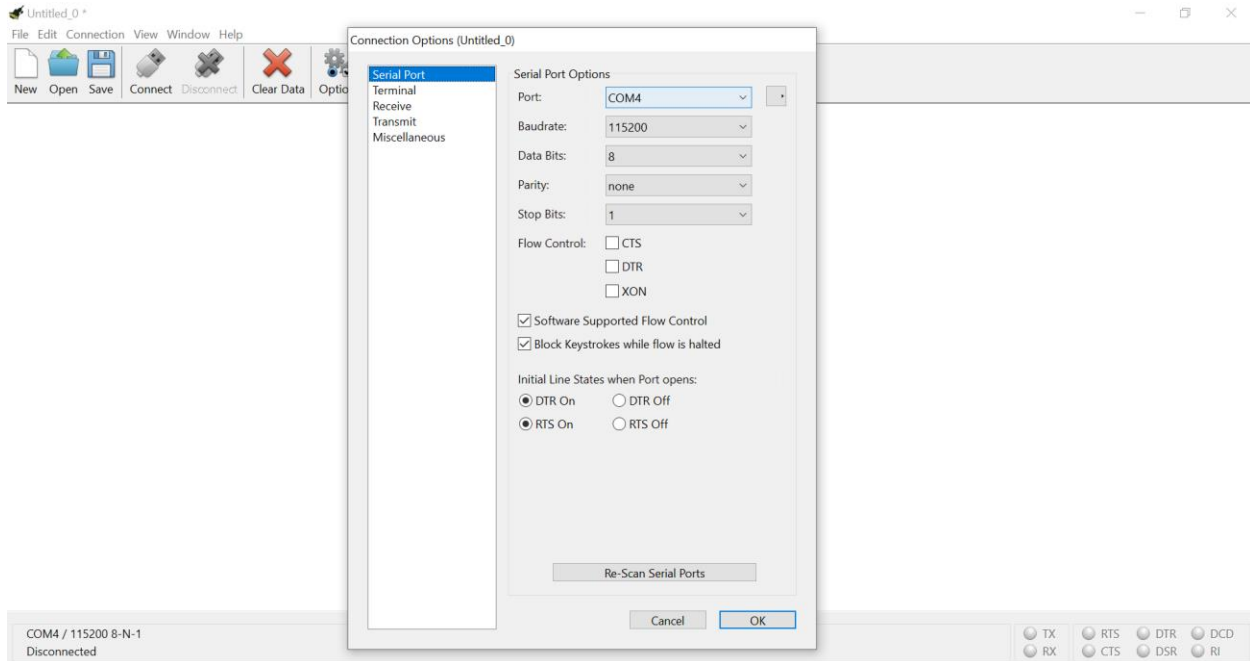


Click connect and the Arduino sketch output shall be displayed on the terminal software

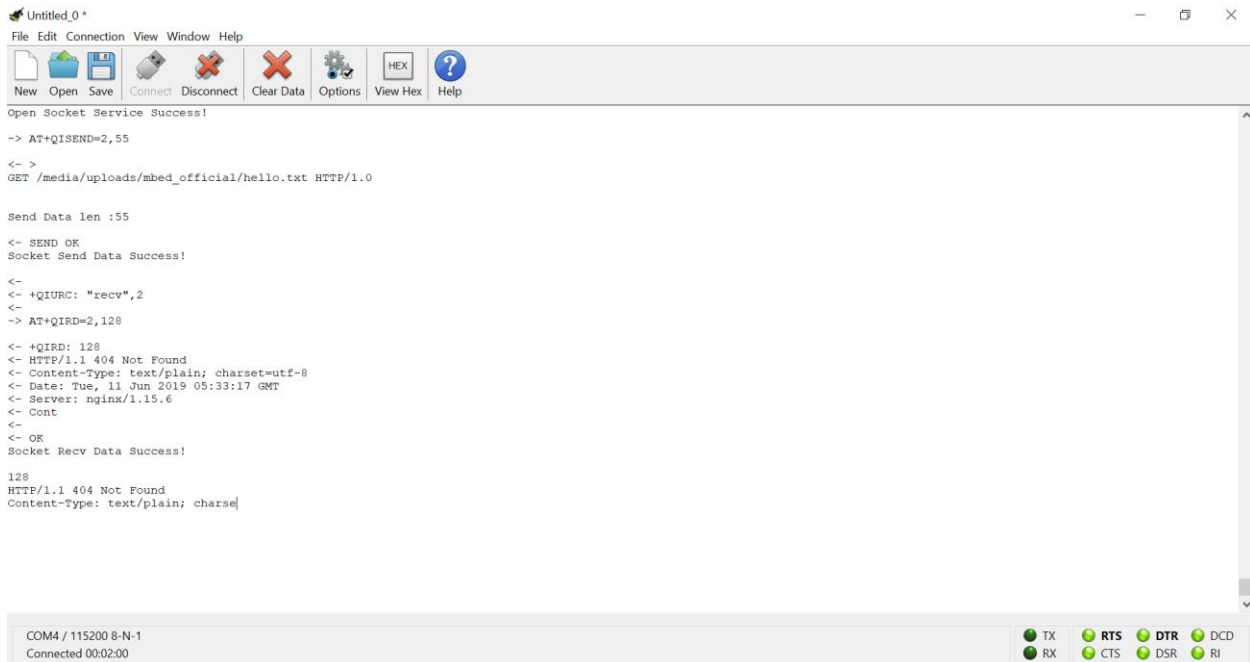


5. Procedure for Operating the BG96 Wireless Unit


1. Insert a USIM (or a test USIM) into the USIM slot on the hardware board.
2. Connect the LTE/GPS Antenna to the MAIN and GNSS antenna ports respectively on the board.
3. Connect the two USB cables to the board and to the PC (Windows 10 PC).
4. In the Device manager, the Quectel USB Modem and ports are shown up.

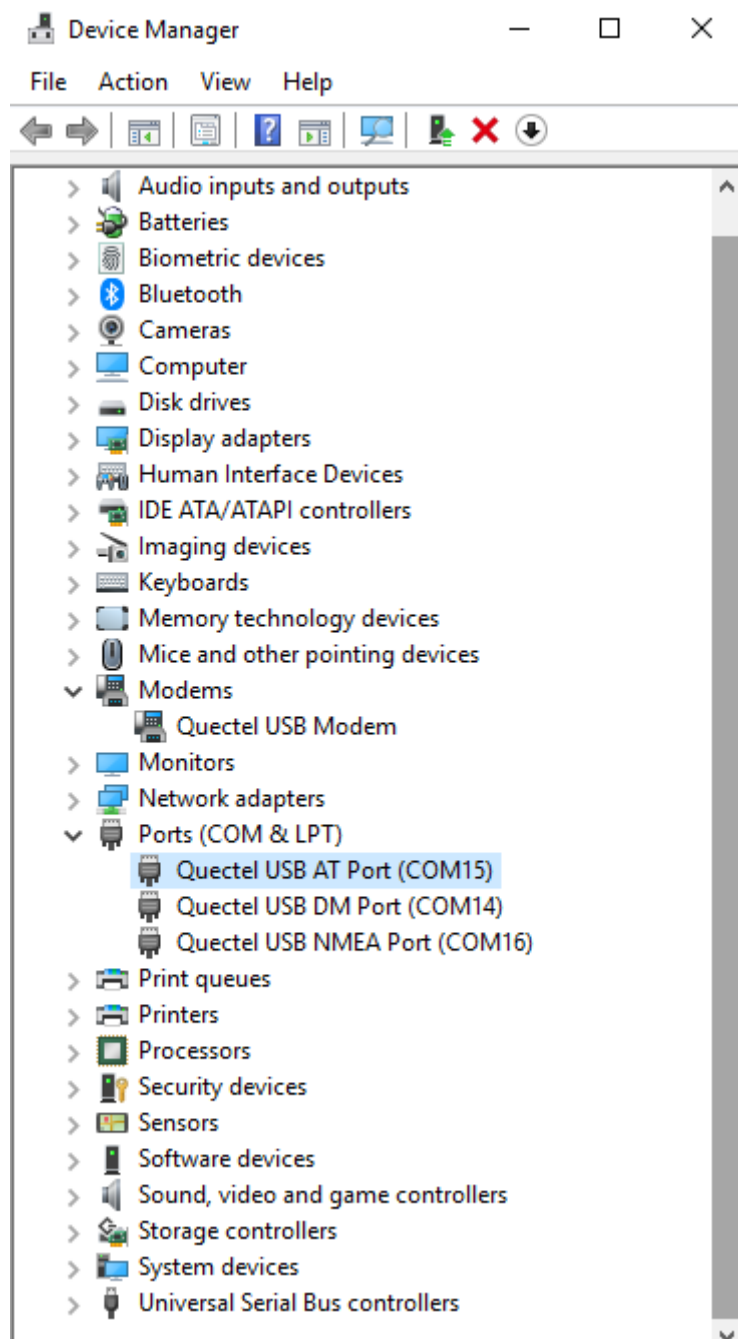


- Launch QNavigator. Choose the correct Quectel USB AT port in Settings->Serial Port Parameter Set.

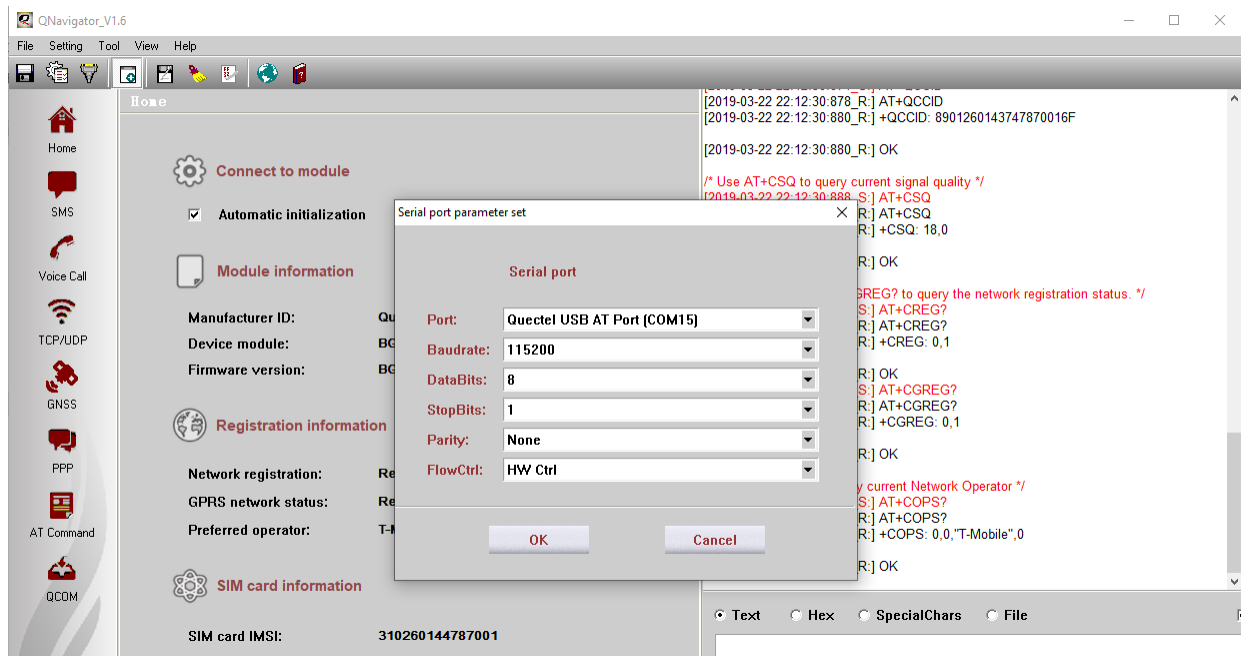

6. Click “Connect”. The board will connect to Mobile operator. Screen shot below shows it connects to T-Mobile network.

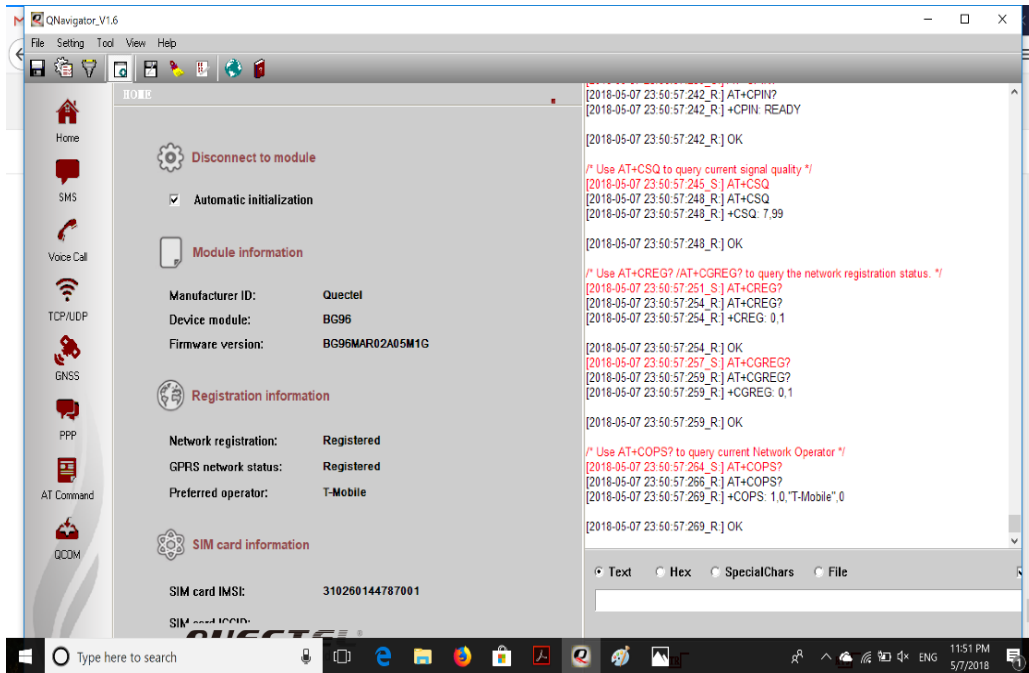

- On the Windows PC, disable all network connections (WiFi or Ethernet) except the Quectel cellular Modem. You can, for example, do a “Ping” to any IP address and this illustrates transmitting and receiving from the T-Mobile cellular network. This is illustrated as in this screen shot:

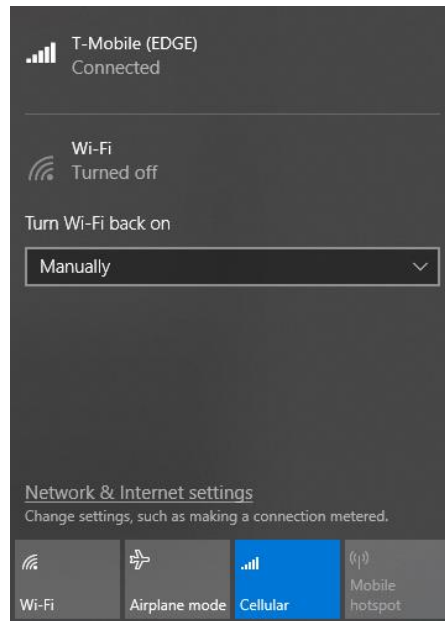

```
Command Prompt
Wireless LAN adapter Local Area Connection* 4:
    Media State . . . . . : Media disconnected
    Connection-specific DNS Suffix  . :
Wireless LAN adapter Wi-Fi:
    Media State . . . . . : Media disconnected
    Connection-specific DNS Suffix  . : frontierlocal.net
Ethernet adapter Bluetooth Network Connection 2:
    Media State . . . . . : Media disconnected
    Connection-specific DNS Suffix  . :
Tunnel adapter Teredo Tunneling Pseudo-Interface:
    Connection-specific DNS Suffix  . :
    IPv6 Address. . . . . : 2001:0:d40:2491:28c1:9f97:53c5:a3e5
    Link-local IPv6 Address . . . . : fe80::28c1:9f97:53c5:a3e5%21
    Default Gateway . . . . . : ::
Mobile Broadband adapter Cellular 3:
    Connection-specific DNS Suffix  . :
    IPv4 Address. . . . . : 22.117.153.33
    Subnet Mask . . . . . : 255.255.255.252
    Default Gateway . . . . . : 22.117.153.34
C:\>
```


```
Command Prompt - ping yahoo.com -4 -n 1000

Pinging yahoo.com [98.137.246.8] with 32 bytes of data:
Reply from 98.137.246.8: bytes=32 time=166ms TTL=52
Reply from 98.137.246.8: bytes=32 time=198ms TTL=52
Reply from 98.137.246.8: bytes=32 time=203ms TTL=52
Reply from 98.137.246.8: bytes=32 time=250ms TTL=52
Reply from 98.137.246.8: bytes=32 time=547ms TTL=52
Reply from 98.137.246.8: bytes=32 time=580ms TTL=52
Reply from 98.137.246.8: bytes=32 time=174ms TTL=52
Reply from 98.137.246.8: bytes=32 time=603ms TTL=52
Reply from 98.137.246.8: bytes=32 time=608ms TTL=52
Reply from 98.137.246.8: bytes=32 time=634ms TTL=52
Reply from 98.137.246.8: bytes=32 time=185ms TTL=52
Reply from 98.137.246.8: bytes=32 time=730ms TTL=52
Reply from 98.137.246.8: bytes=32 time=163ms TTL=52
Reply from 98.137.246.8: bytes=32 time=769ms TTL=52
Reply from 98.137.246.8: bytes=32 time=1522ms TTL=52
Reply from 98.137.246.8: bytes=32 time=3267ms TTL=52
Reply from 98.137.246.8: bytes=32 time=569ms TTL=52
Reply from 98.137.246.8: bytes=32 time=1436ms TTL=52
Reply from 98.137.246.8: bytes=32 time=841ms TTL=52
Reply from 98.137.246.8: bytes=32 time=653ms TTL=52
Reply from 98.137.246.8: bytes=32 time=202ms TTL=52
Reply from 98.137.246.8: bytes=32 time=523ms TTL=52
Reply from 98.137.246.8: bytes=32 time=215ms TTL=52
Reply from 98.137.246.8: bytes=32 time=242ms TTL=52
Reply from 98.137.246.8: bytes=32 time=428ms TTL=52
Reply from 98.137.246.8: bytes=32 time=882ms TTL=52
Reply from 98.137.246.8: bytes=32 time=554ms TTL=52
Reply from 98.137.246.8: bytes=32 time=1723ms TTL=52
Reply from 98.137.246.8: bytes=32 time=979ms TTL=52
Reply from 98.137.246.8: bytes=32 time=183ms TTL=52
Reply from 98.137.246.8: bytes=32 time=923ms TTL=52
Reply from 98.137.246.8: bytes=32 time=1848ms TTL=52
Request timed out.
Reply from 98.137.246.8: bytes=32 time=961ms TTL=52
Reply from 98.137.246.8: bytes=32 time=1732ms TTL=52
Reply from 98.137.246.8: bytes=32 time=910ms TTL=52
```

6. Running the GNSS

You can use the GNSS module to get location and position information:

1. Connect the second Antenna to the GNSS antenna port on the board. In the QNavaigator, click “GNSS” and then “Connect”. You will get location and positioning information. Sample screen shots as below:

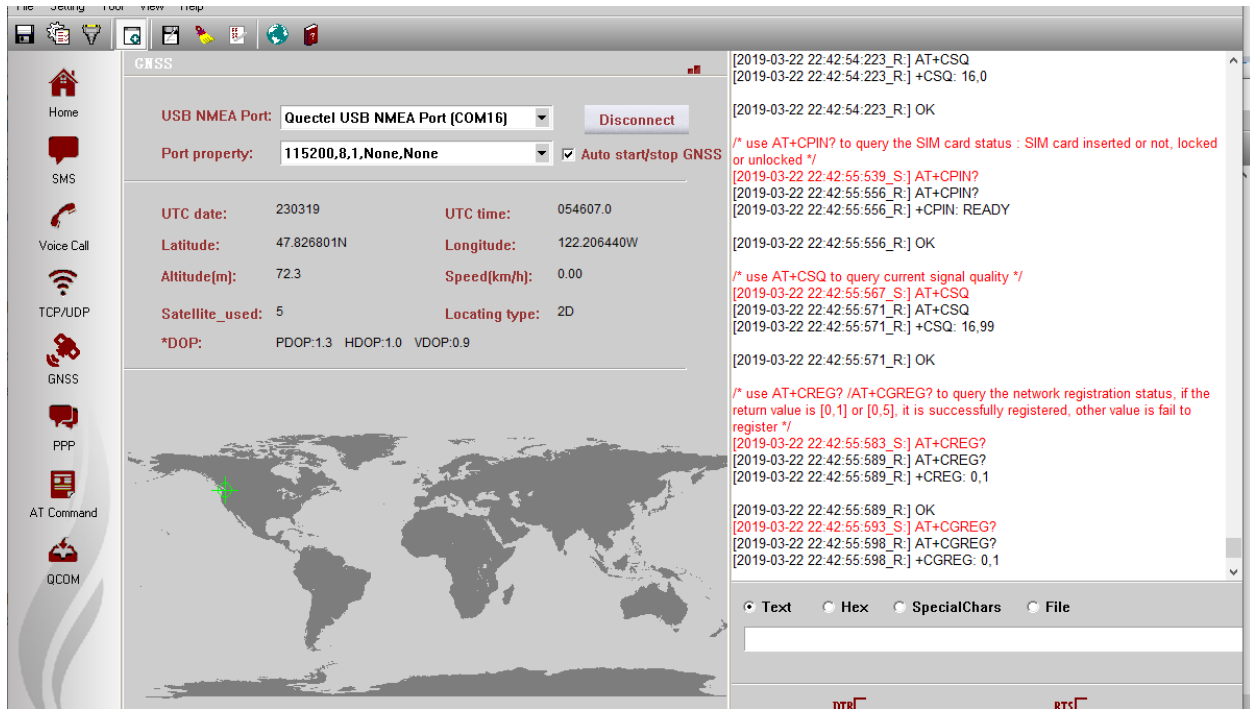

Home

SMS

Voice Call

TCP/UDP

GNSS

PPP

AT Command

QCOM

GNSS

USB NMEA Port: Quectel USB NMEA Port (COM16)

Disconnect

Port property: 115200,8,1,None,None

Auto start/stop GNSS

UTC date: 230319

UTC time: 054936.0

Latitude: 47.826800N

Longitude: 122.206375W

Altitude(m): 72.1

Speed(km/h): 0.00

Satellite_used: 6

Locating type: 2D

*DOP: PDOP:1.2 HDOP:0.8 VDOP:0.9

[2019-03-22 22:42:54.223_R_] AT+CSQ

[2019-03-22 22:42:54.223_R_] +CSQ: 16,0

[2019-03-22 22:42:54.223_R_] OK

/* use AT+CPIN? to query the SIM card status : SIM card inserted or not, locked or unlocked */

[2019-03-22 22:42:55.539_S_] AT+CPIN?

[2019-03-22 22:42:55.556_R_] AT+CPIN?

[2019-03-22 22:42:55.556_R_] +CPIN: READY

[2019-03-22 22:42:55.556_R_] OK

/* use AT+CSQ to query current signal quality */

[2019-03-22 22:42:55.567_S_] AT+CSQ

[2019-03-22 22:42:55.571_R_] AT+CSQ

[2019-03-22 22:42:55.571_R_] +CSQ: 16,99

[2019-03-22 22:42:55.571_R_] OK

/* use AT+CREG? /AT+CGREG? to query the network registration status, if the return value is [0,1] or [0,5], it is successfully registered, other value is fail to register */

[2019-03-22 22:42:55.583_S_] AT+CREG?

[2019-03-22 22:42:55.589_R_] AT+CREG?

[2019-03-22 22:42:55.589_R_] +CREG: 0,1

[2019-03-22 22:42:55.589_R_] OK

[2019-03-22 22:42:55.593_S_] AT+CGREG?

[2019-03-22 22:42:55.598_R_] AT+CGREG?

[2019-03-22 22:42:55.598_R_] +CGREG: 0,1

Text Hex SpecialChars File

DTR

RTS

File Setting Tool View Help

Home

SMS

Voice Call

TCP/UDP

GNSS

PPP

AT Command

QCOM

GNSS

USB NMEA Port: Quectel USB NMEA Port (COM16)

Disconnect

Port property: 115200,8,1,None,None

Auto start/stop GNSS

UTC date: 230319

UTC time: 055011.0

Latitude: 47.826801N

Longitude: 122.206374W

Altitude(m): 71.9

Speed(km/h): 0.00

Satellite_used: 6

Locating type: 2D

*DOP: PDOP:1.2 HDOP:0.9 VDOP:0.9

[2019-03-22 22:42:54.223_R_] AT+CSQ

[2019-03-22 22:42:54.223_R_] +CSQ: 16,0

[2019-03-22 22:42:54.223_R_] OK

/* use AT+CPIN? to query the SIM card status : SIM card inserted or not, locked or unlocked */

[2019-03-22 22:42:55.539_S_] AT+CPIN?

[2019-03-22 22:42:55.556_R_] AT+CPIN?

[2019-03-22 22:42:55.556_R_] +CPIN: READY

[2019-03-22 22:42:55.556_R_] OK

/* use AT+CSQ to query current signal quality */

[2019-03-22 22:42:55.567_S_] AT+CSQ

[2019-03-22 22:42:55.571_R_] AT+CSQ

[2019-03-22 22:42:55.571_R_] +CSQ: 16,99

[2019-03-22 22:42:55.571_R_] OK

/* use AT+CREG? /AT+CGREG? to query the network registration status, if the return value is [0,1] or [0,5], it is successfully registered, other value is fail to register */

[2019-03-22 22:42:55.583_S_] AT+CREG?

[2019-03-22 22:42:55.589_R_] AT+CREG?

[2019-03-22 22:42:55.589_R_] +CREG: 0,1

[2019-03-22 22:42:55.589_R_] OK

[2019-03-22 22:42:55.593_S_] AT+CGREG?

[2019-03-22 22:42:55.598_R_] AT+CGREG?


[2019-03-22 22:42:55.598_R_] +CGREG: 0,1

Text Hex SpecialChars File

Board rev. 2.1

27

Copyright © 5GHUB.US

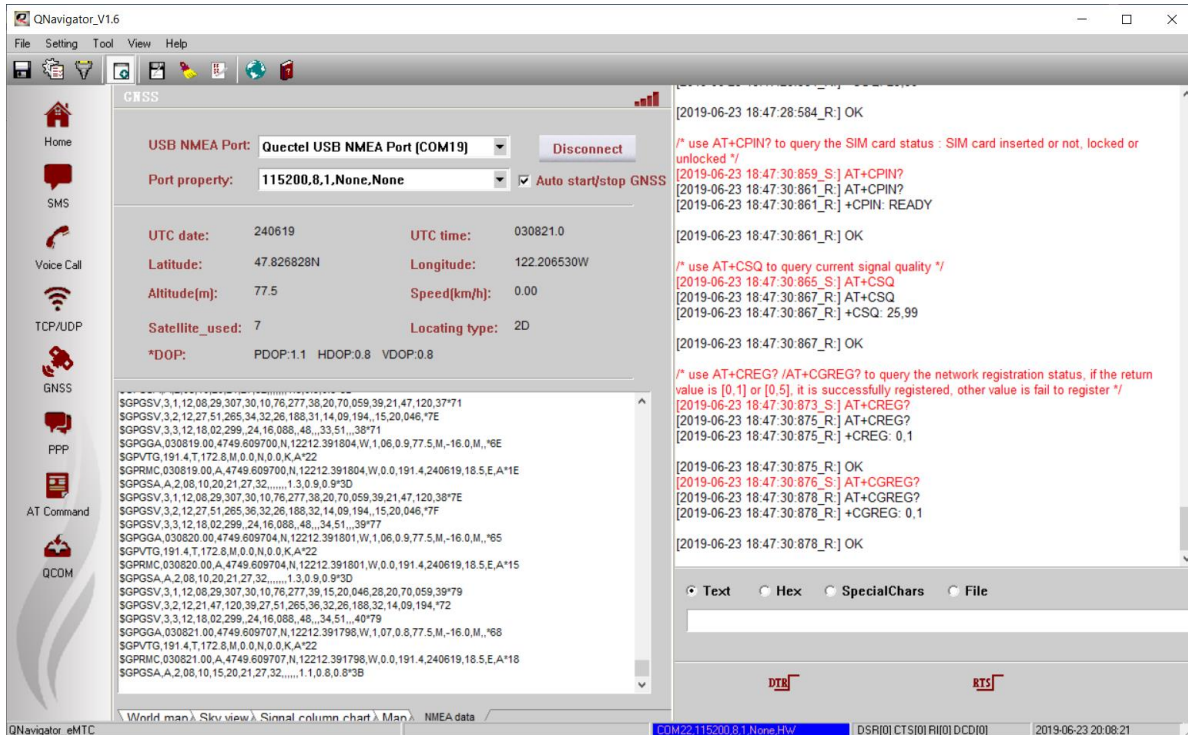

7. AT Commands

The QNavigator can be used to communicate with the transmitter and receiver. For example, you can use the following AT commands:

- ATI:** The ATI command displays the module information, such as the name and version
- AT+CFUN?:** This command sets up phone functionality in the module. In our case it is 1, because we require full functionality.
- AT+CSQ:** This command is used to get the signal strength and it makes sure that the USIM is receiving signals.
- AT+CREG?:** This command is used to enquire about the network registration status. Response 1 means registered.
- AT+CGREG?:** This command is also used to enquire the network registration status.
- AT+COPS?:** This command returns the current mode and currently selected operator. (e.g. T-Mobile).
- AT+QCFG = "BAND", f,400a0e189f,a0e189f:** In order for the USIM to get registered with the 5G NB network we set up the device to look for the above frequency band configuration.
- AT+QCFG = "NWSCANMODE",1:** This command is used to set the scan mode. We set it to 1 to scan for GSM networks to register.
- AT+QCFG = "iotopmode",1:** This command is used to specify the network category which is to be searched under the LTE network mode. We set it to 1 to search for LTE Cat.NB1.
- AT+QCFG = "NWSCANSEQ",010302:** This command configures the sequence of searching for the network. Our sequence means GSM→LTE Cat.NB1→LTE Cat.M1

- k. **AT+CGDCONT=1,"IPV4V6"**: This command sets the PDP context, we have set the PDP context to IPV4 and V6.
- l. **AT+CGPADDR**: This command returns a list of PDP addresses.
- m. **AT+QNWINFO**: This command queries the network information such as access technology, operator's numeric code, the band and channel ID.
- n. **AT&W0**: Use this command to stores the current AT command settings to a user defined profile in non-volatile memory

For GNSS to work with QNavigator, make sure the following is issued:

- o. **AT+QGPSCFG="outport","usbnmea"**: Use this command to configure various GNSS settings, including NMEA sentences output to the BG96 USB port.

The BG96 is connected to two GPIOs (GPIO26 and GPIO64) which produces a maximum of 1.8V. You can set them using the following commands:


AT+QCFG="gpio",1,26,1,0,7 //configure pin 26 as output, no pull, 17mA drive, clean last configuration

AT+QCFG="gpio",3,26,1 // write pin 26 high value, clean last configuration


AT+QCFG="gpio",1,64,1,0,7 //configure pin 64 as output, no pull, 17mA drive, clean last configuration

AT+QCFG="gpio",3,64,1 // write pin 64 high value, clean last configuration

The following are screen shots of some of these AT commands:

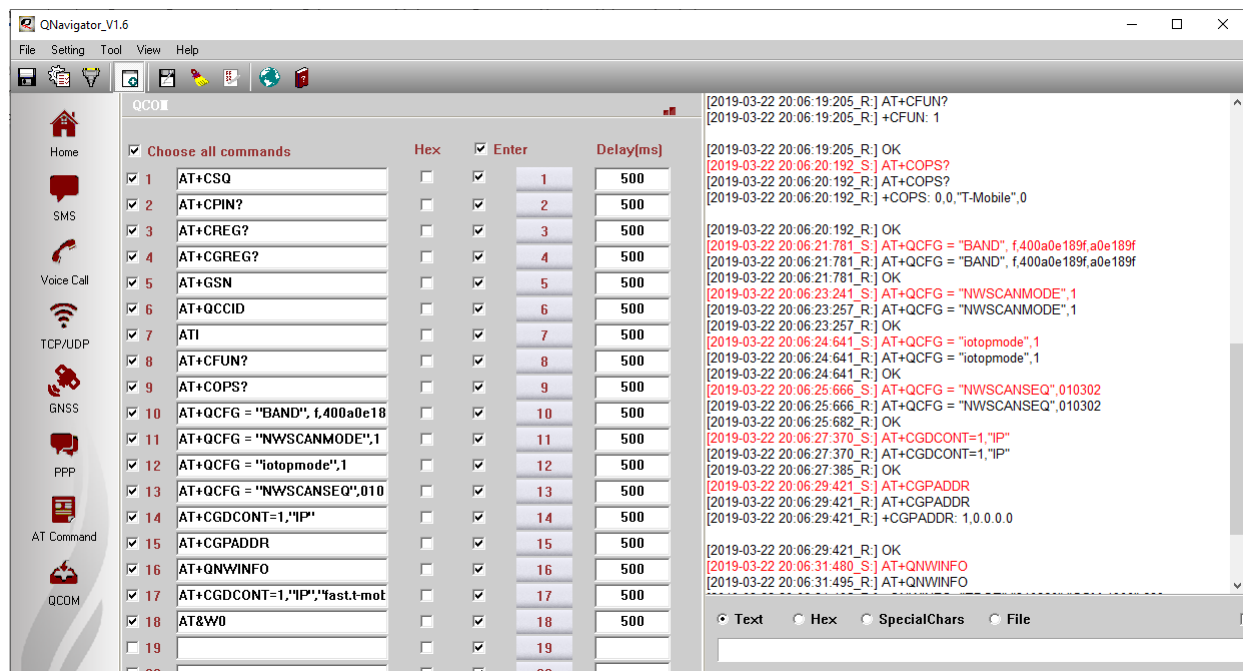

- You can send SMS from the SMS pane of the QNavigator. Screenshots below shows the SMS transmitted by the device and received on the phone.

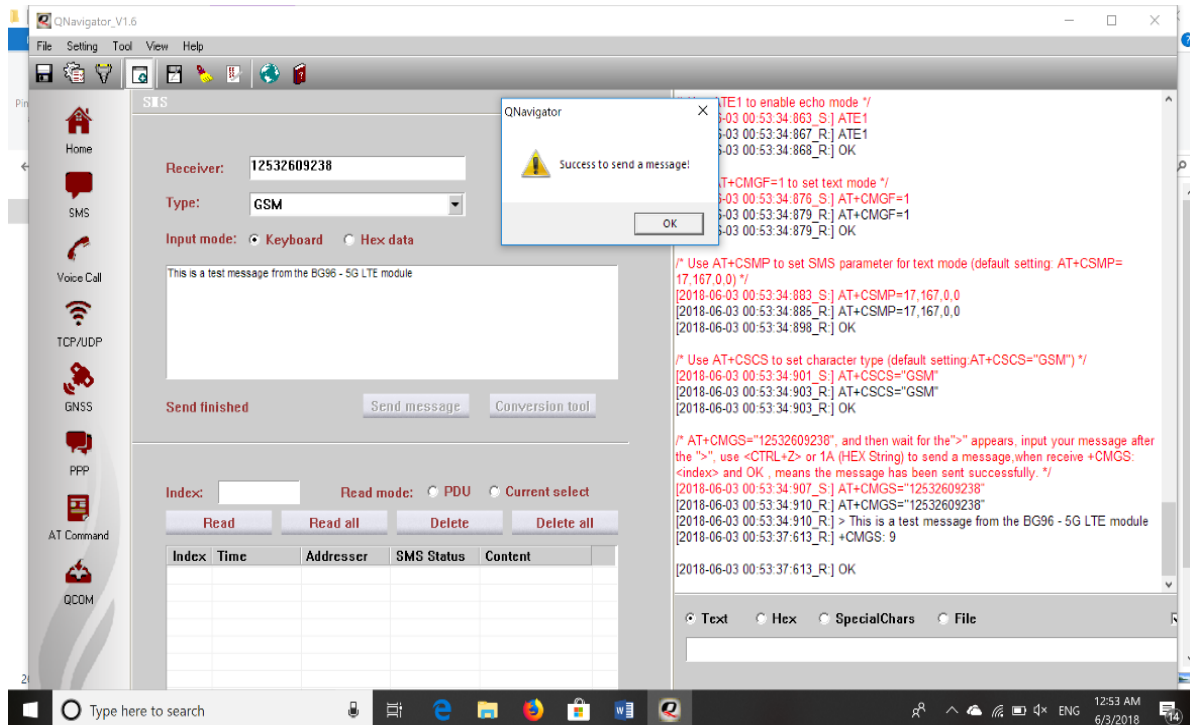

8. Document History

Version	Author	Date	Description
A	5G HUB	04.05.2019	Initial Document
B	5G HUB	06.08.2019	Add Arduino IDE instructions
C	5G HUB	06.10.2019	Add Serial Interface
D	5G HUB	09.11.2019	Add more information about Arduino IDE

9. References

- [1] Quectel_BG96_Hardware_Design_V1.2.pdf
- [2] Quectel_BG96_Reference_Design_Rev.A_20170814.pdf
- [3] Quectel_Antenna_Design_Note_V2.0.pdf
- [4] Quectel_RF_Layout_Application_Note_V2.2.pdf
- [5] Quectel_QFlash_User_Guide_V2.3
- [6] Arduino IDE, <https://www.arduino.cc/en/Main/Software>
- [7] Arduino IDE, <https://www.arduino.cc/en/Guide/ArduinoZero>
- [8] Microchip, “Low-Power, 32-bit Cortex-M0+ MCU with Advanced Analog and PWM”

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124

125

126

127

128

129

130

131

132

133

134

135

136

137

138

139

140

141

142

143

144

145

146

147

148

149

150

151

152

153

154

155

156

157

158

159

160

161

162

163

164

165

166

167

168

169

170

171

172

173

174

175

176

177

178

179

180

181

182

183

184

185

186

187

188

189

190

191

192

193

194

195

196

197

198

199

200

201

202

203

204

205

206

207

208

209

210

211

212

213

214

215

216

217

218

219

220

221

222

223

224

225

226

227

228

229

230

231

232

233

234

235

236

237

238

239

240

241

242

243

244

245

246

247

248

249

250

251

252

253

254

255

256

257

258

259

260

261

262

263

264

265

266

267

268

269

270

271

272

273

274

275

276

277

278

279

280

281

282

283

284

285

286

287

288

289

290

291

292

293

294

295

296

297

298

299

300

301

302

303

304

305

306

307

308

309

310

311

312

313

314

315

316

317

318

319

320

321

322

323

324

325

326

327

328

329

330

331

332

333

334

335

336

337

338

339

340

341

342

343

344

345

346

347

348

349

350

351

352

353

354

355

356

357

358

359

360

361

362

363

364

365

366

367

368

369

370

371

372

373

374

375

376

377

378

379

380

381

382

383

384

385

386

387

388

389

390

391

392

393

394

395

396

397

398

399

400

401

402

403

404

405

406

407

408

409

410

411

412

413

414

415

416

417

418

419

420

421

422

423

424

425

426

427

428

429

430

431

432

433

434

435

436

437

438

439

440

441

442

443

444

445

446

447

448

449

450

451

452

453

454

455

456

457

458

459

460

461

462

463

464

465

466

467

468

469

470

471

472

473

474

475

476

477

478

479

480

481

482

483

484

485

486

487

488

489

490

491

492

493

494

495

496

497

498

499

500

501

502

503

504

505

506

507

508

509

510

511

512

513

514

515

516

517

518

519

520

521

522

523

524

525

52