


Markdown - Step-by-step

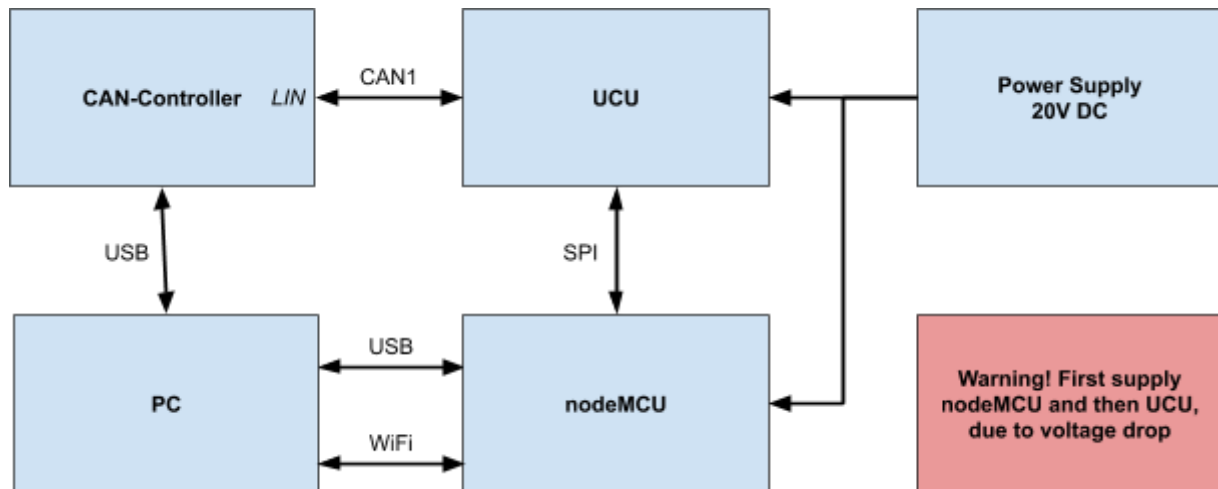

1. After you power up and connect the hardware, make sure you have installed
 - a. IAV XCP Flash-Tool (xcp-flash.exe)
2. Select your file at
UCU_AMOS\23_SW_Construction\23c_Application\output\AMOS.s19
3. Select Device at Channel 0
4. Press Start
5. When *programing device finished successfully* is displayed, everything should be fine and your device is flashed.