

Hot Water  
Cylinder Time  
Clock  
Instructions  
(24 Hr.)




# Switch with 'push-tab' programming.

## Installation and setting instructions.

### Specifications

Voltage supply:	240V ac
Mains frequency:	50Hz
Contact rating:	16A, 240V
Shortest switching time:	15 minutes
Possible settings:	96 settings per day
Manual switch:	Yes

### Wiring Terminals.

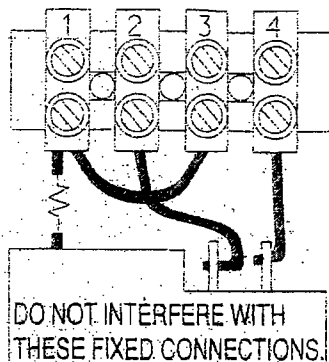


### Terminal Layout.

#### WIRING CONNECTIONS

1. Neutral from mains
2. Live from mains
3. Neutral output to appliance
4. Live output to appliance


**WARNING:** A "QUALIFIED ELECTRICIAN" MUST INSTALL THIS PRODUCT.

### How to set the timer.

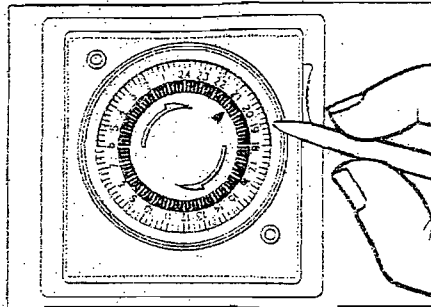


1. Switch unit to AUTO. With your finger, pen or small screwdriver, press down all segments corresponding to the required 'red' in the switched on area.

**Note:** Each segment represents 15 minutes. 4 segments equal 1 hour.

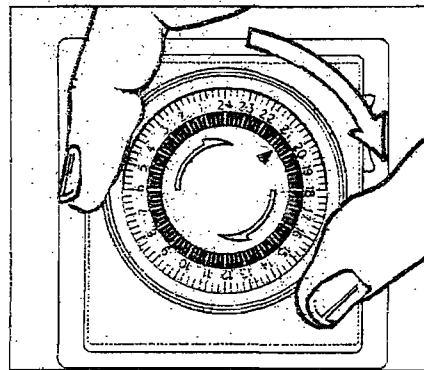

2. Turn outside dial in a clockwise direction until 'present' time aligns with pointer.
3. Check that power is available to the load (or loads) by switching to ON (override position). Return switch to AUTO.

4. **General operation**  
With the switch in AUTO the unit will operate according to the push tab settings.

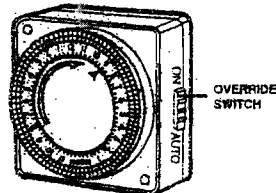

When the timer is not in its timing cycle, the load may be switched on manually by switching to ON (Override).