

a.sign RK CHIP activation information


1. Prerequisites

- Up to date a.sign Client
- A card reader
- Installation of the activation software
 - Can be downloaded at www.a-trust.at/registrierkasse/aktivierung

2. Activation


Insert the card to be activated into the card reader and start the activation software. The desired classification term can be selected via the drop-down menu. Here, the VAT identification number (UID), the Global Location Number (GLN) and the tax office or tax number are available. After selecting the desired type, the value can be entered, whereby a basic formal check is carried out.

After entering an e-mail address, the activation can be started via the "Activate" button. The e-mail address is used for contacting A-Trust. The activation process can take up to one minute.

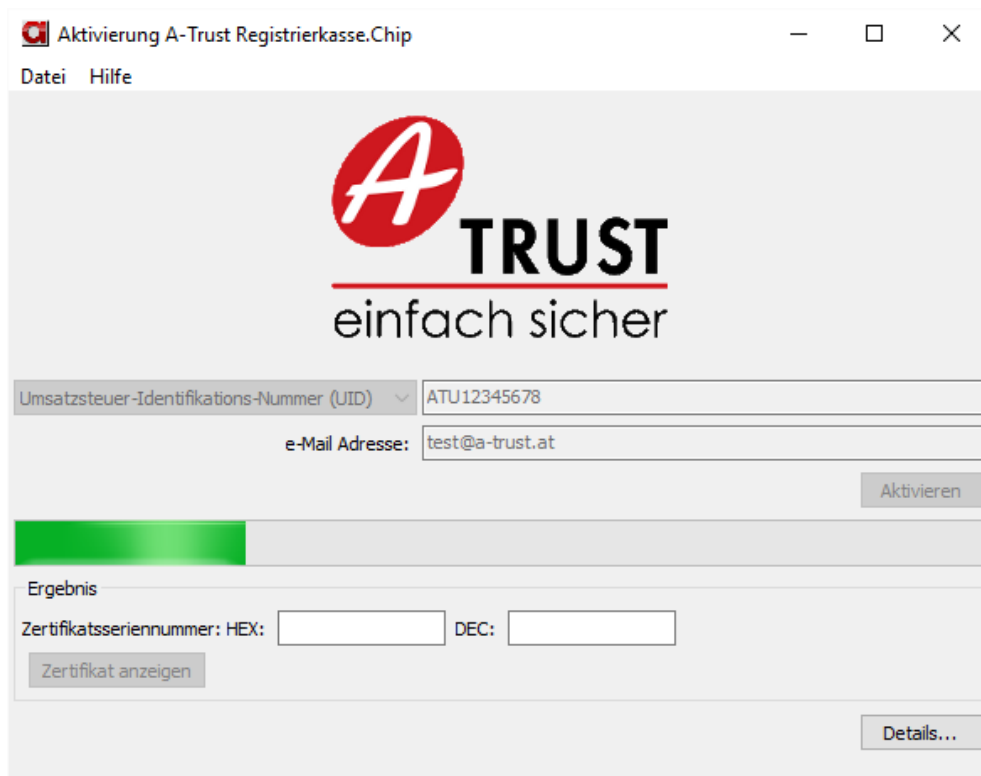

3. Completion of the activation

After successful activation, you can select the location of the activation log that summarizes the certificate content. In the program itself the certificate serial number is displayed, clicking on "View Certificate" opens the certificate itself.

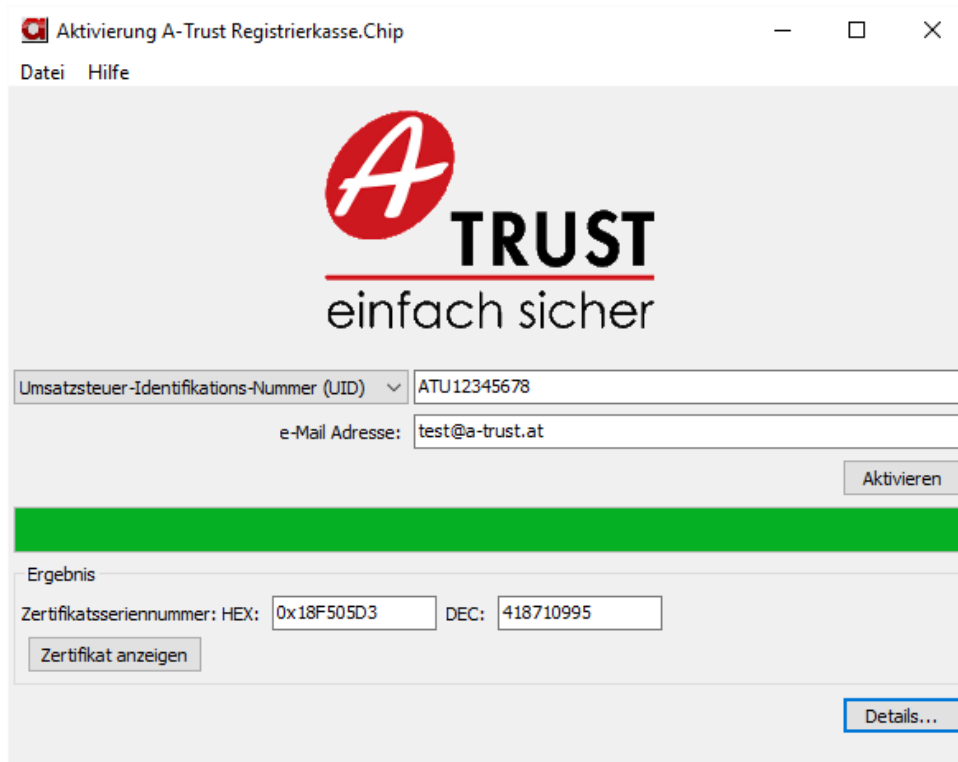

The screenshot shows a Windows application window titled "Aktivierung A-Trust Registrierkasse.Chip". The window has a menu bar with "Datei" and "Hilfe". The main area features the A-Trust logo (a red circle with a white 'A') and the text "TRUST" in bold, with "einfach sicher" below it. There are two input fields: "Umsatzsteuer-Identifikations-Nummer (UID)" with a dropdown arrow and the value "ATU12345678", and "e-Mail Adresse:" with the value "test@a-trust.at". A green bar is present below the email field. To the right of the email field is a button labeled "Aktivieren". Below the green bar, the word "Ergebnis" is displayed. Under "Ergebnis", there are two fields: "Zertifikatsseriennummer: HEX:" with the value "0x18F505D3" and "DEC:" with the value "418710995". Below these fields is a button labeled "Zertifikat anzeigen". In the bottom right corner, there is a button labeled "Details...".

This completes the activation of the card, the default PIN is 123456.