



TITLE: Horizon Sensor Heads	DATE: 16/03/09
BY: Clayton Gumbrell    REV: 1.1	PAGE: 0/2

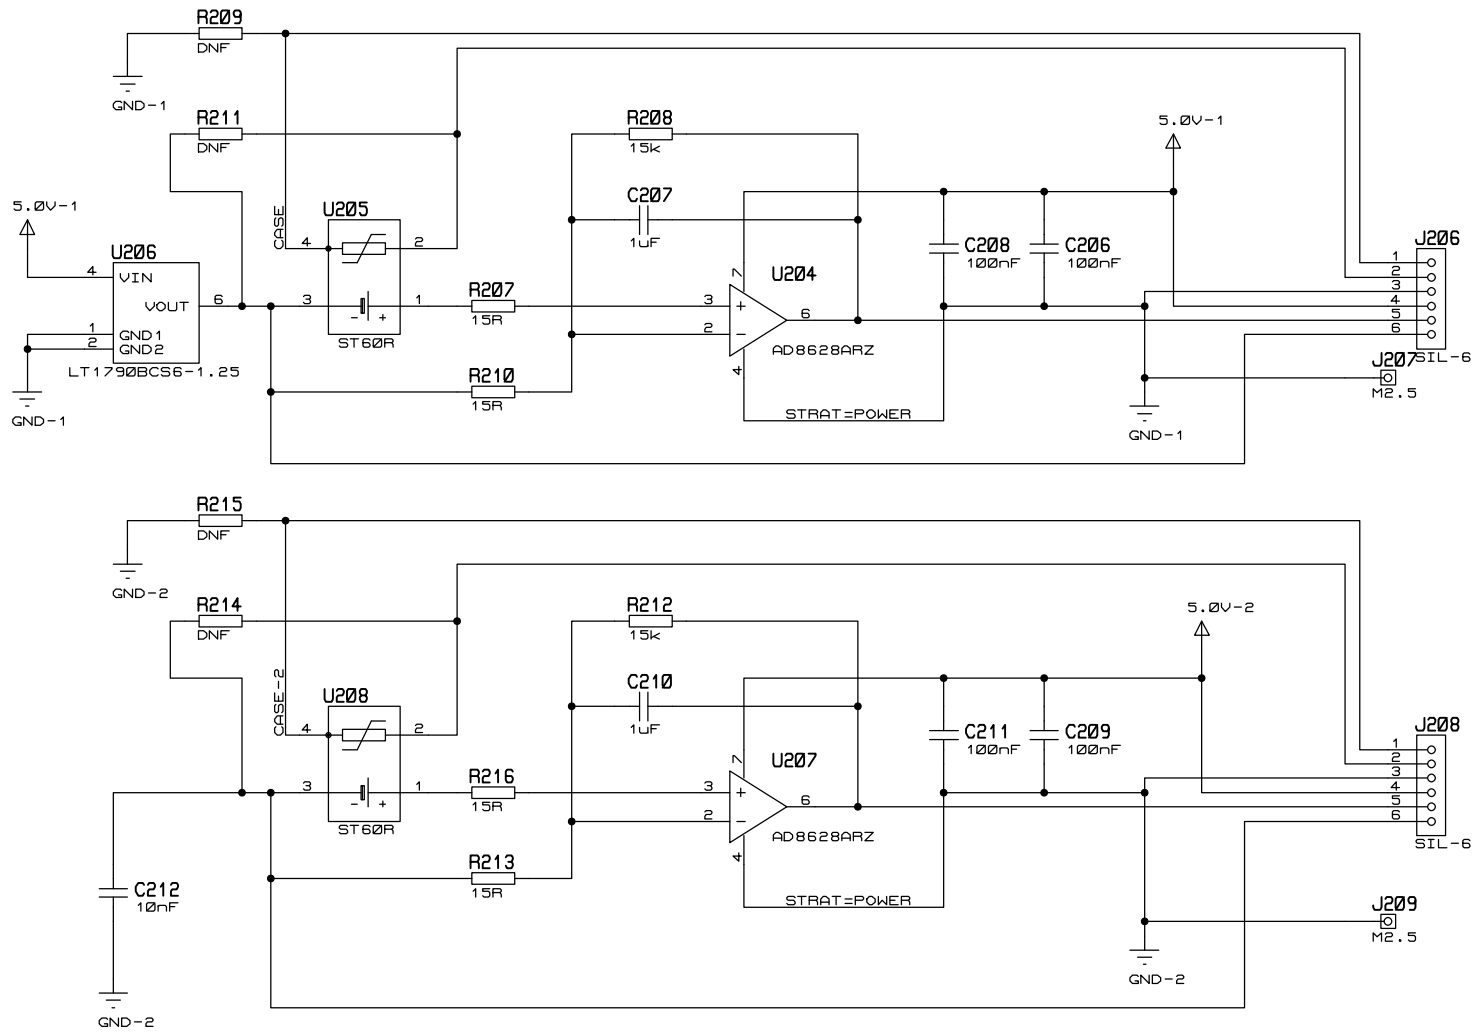

There are Left and Right side versions

- Pins 1 & 2 - used if sensor temperature is required. Fit appropriate resistors
- Pin 3 = GND (connect to both sides)
- Pin 4 = VCC 5V (connect to both sides)
- Pin 5 = output (connect separately)
- Pin 6 = reference voltage (connect to each other)

TITLE:	DATE:
Horizon Sensor Heads	16/03/09
IR sensors (two required)	PAGE:
BY: Clayton Gumbrell REV:1.1	1/2

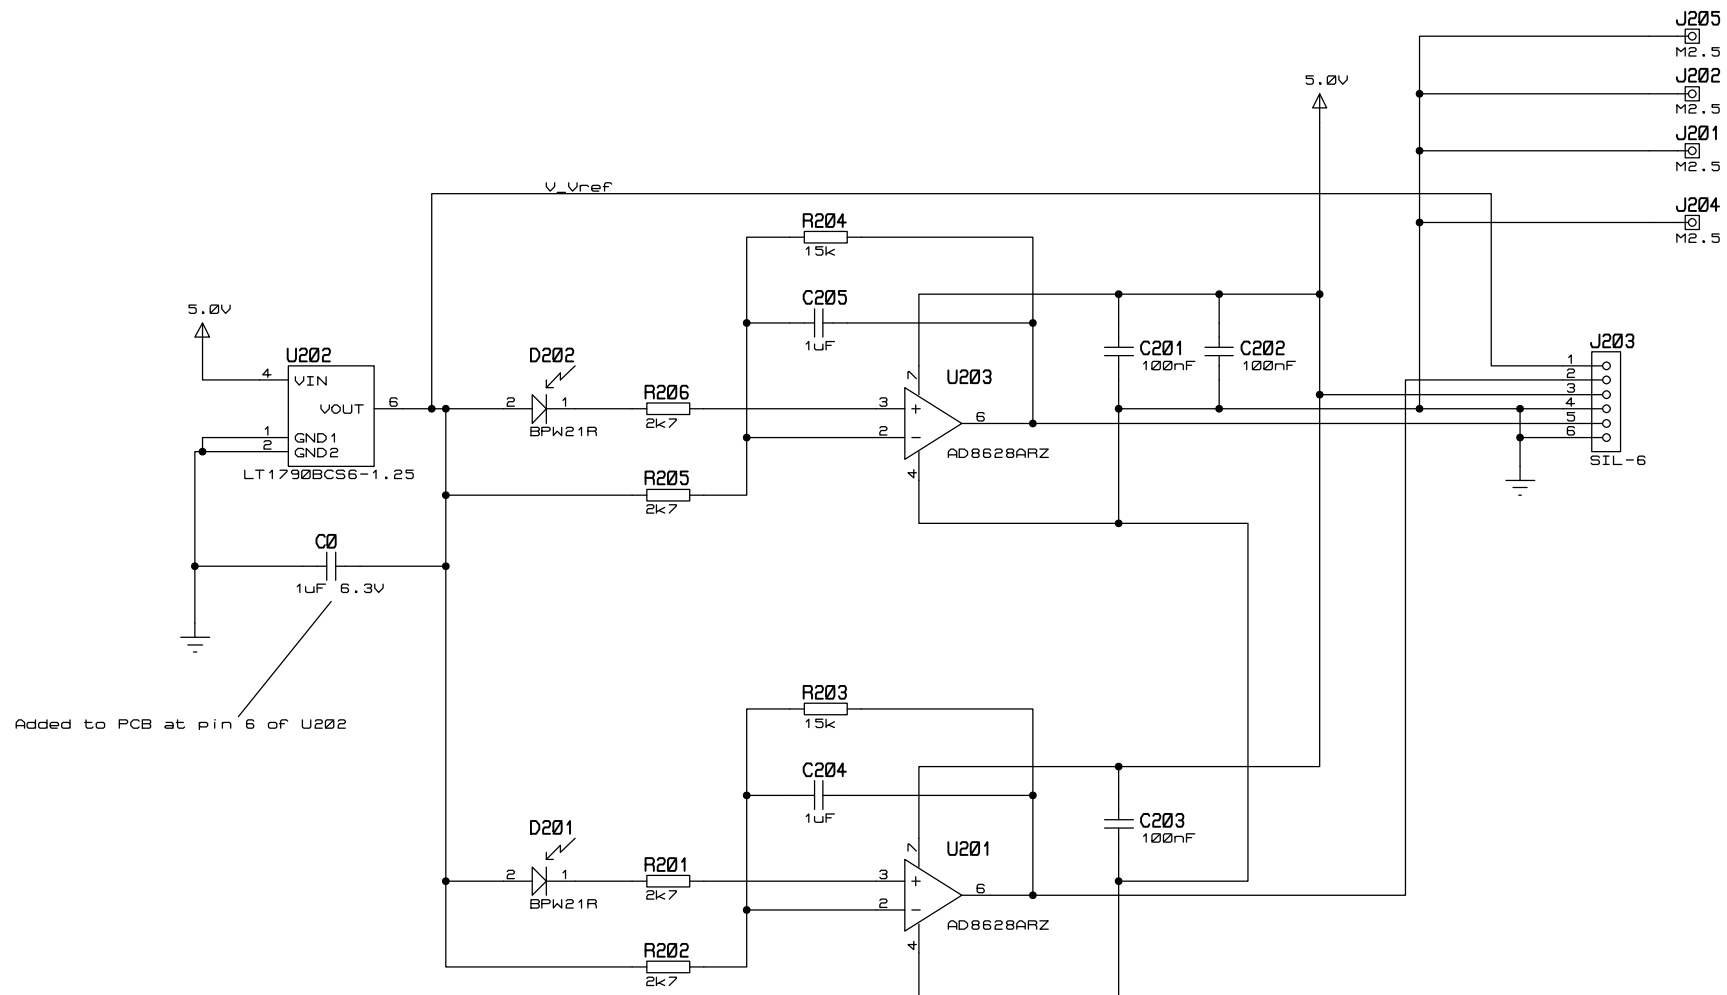

Added to PCB at pin 6 of U202