


[Dimensional Drawing of Housing A/Intermediate Flange for Model KR]



● For Model KR15


KR**	...Actuator model number
●◇	...●: Housing A ◇: Intermediate Flange

■Housing A

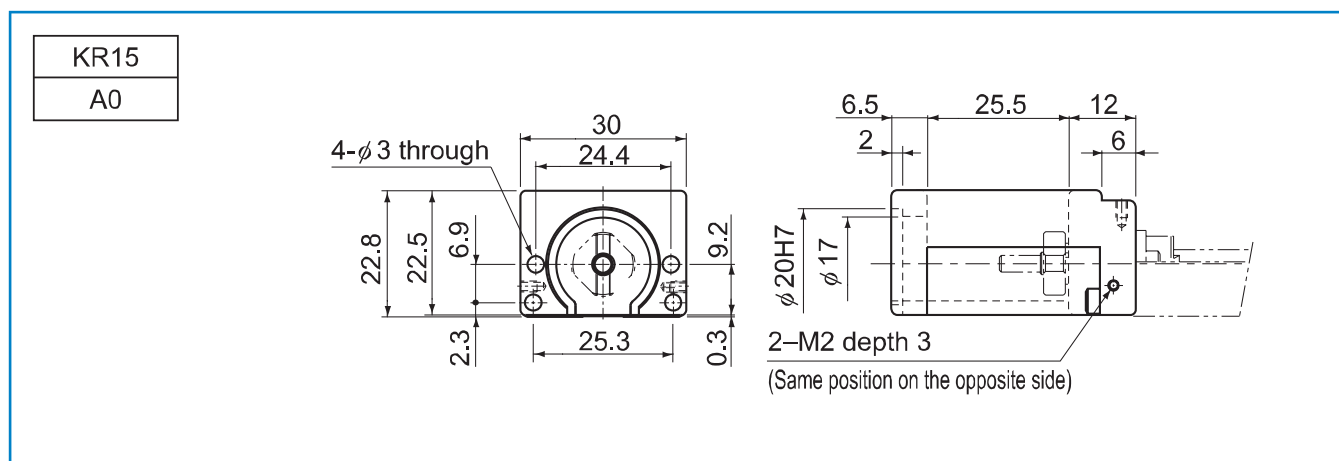

■Intermediate Flange

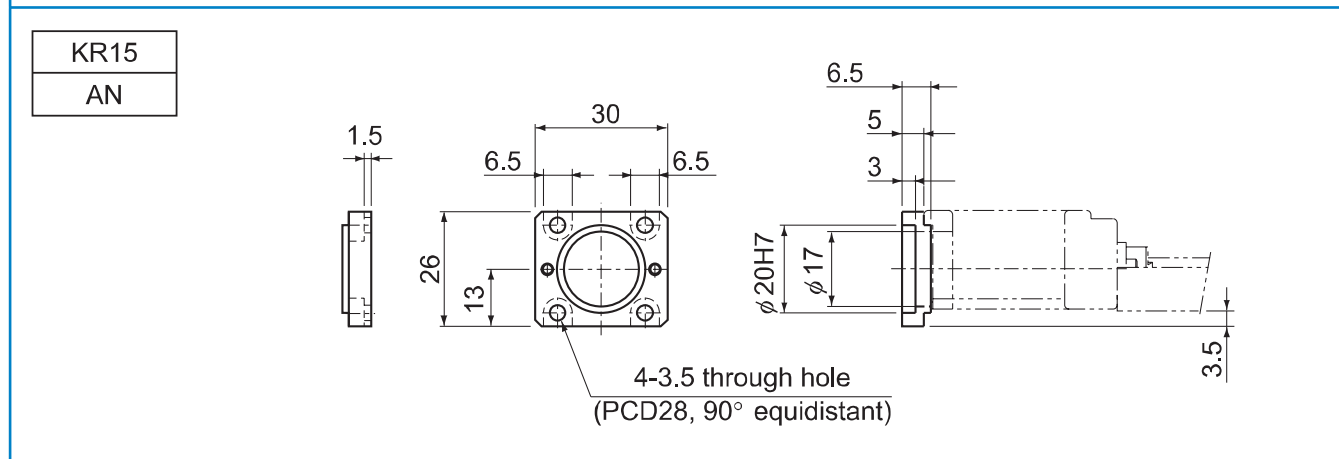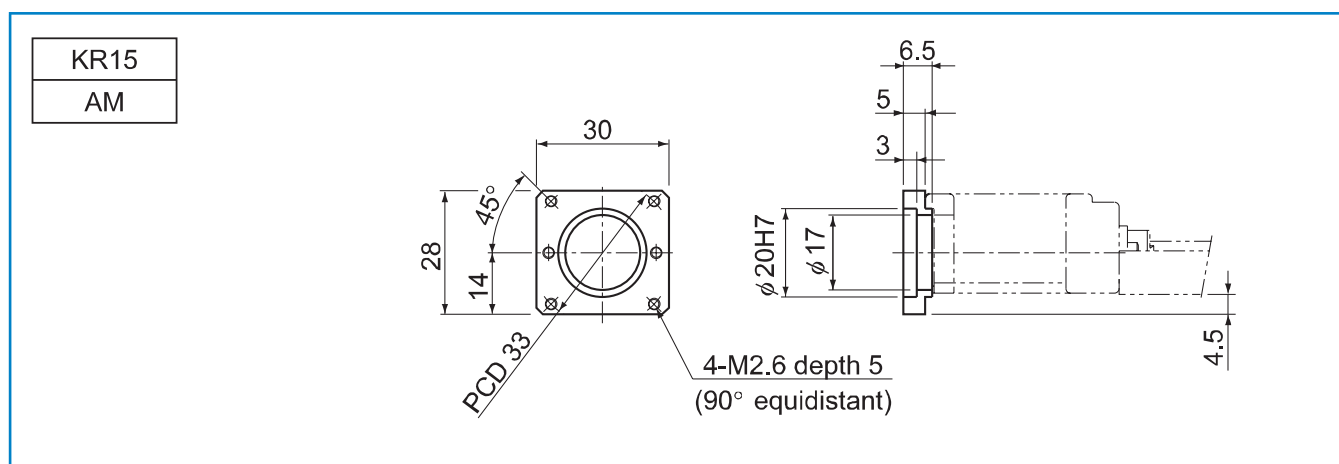

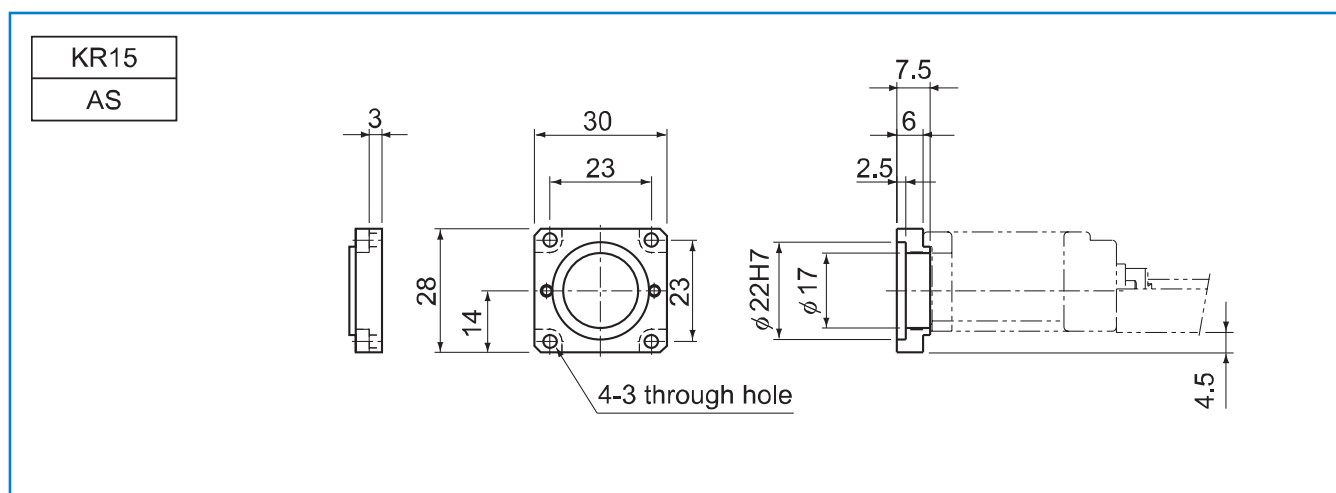


● For Model KR20

KR**	···Actuator model number
●◇	···●: Housing A ◇: Intermediate Flange


■Housing A

KR20
A0

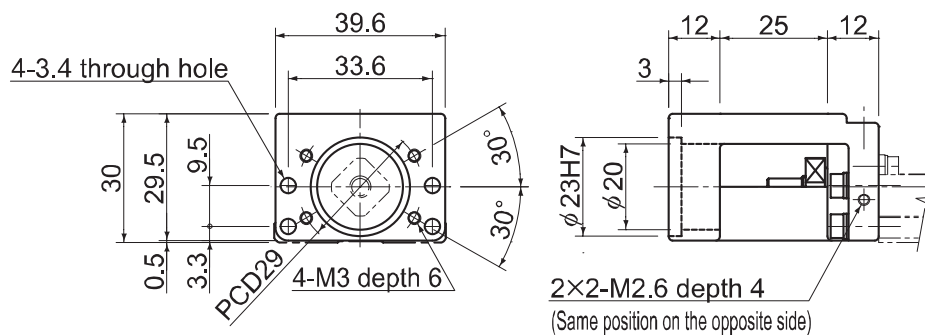


■Intermediate Flange

KR20
AP

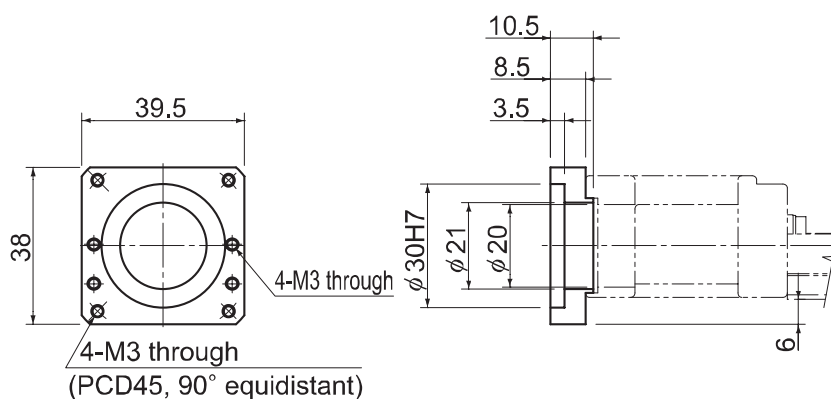


KR20
AQ

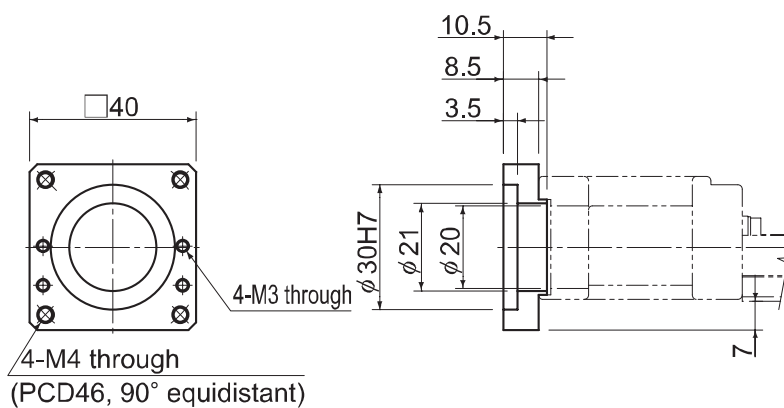


KR20

AR

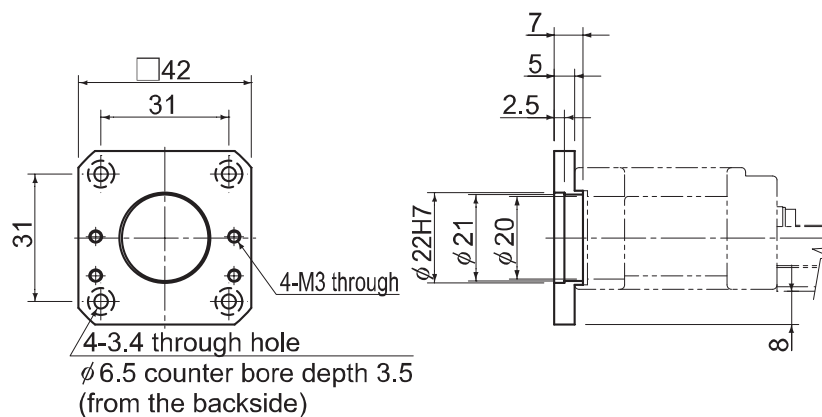


KR20

AS

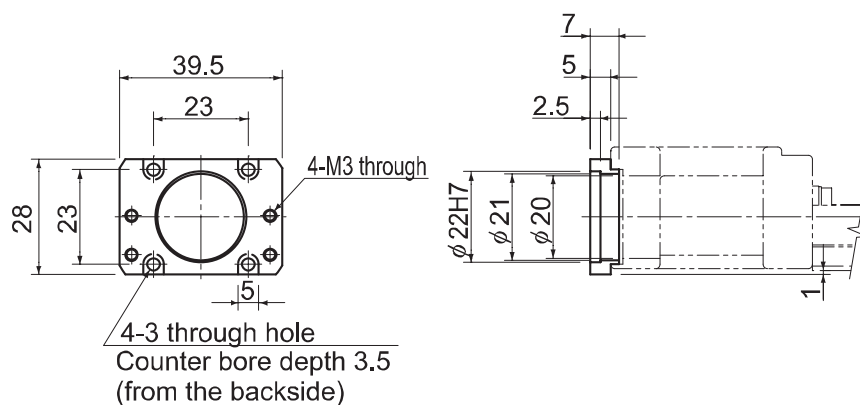


KR20

AM

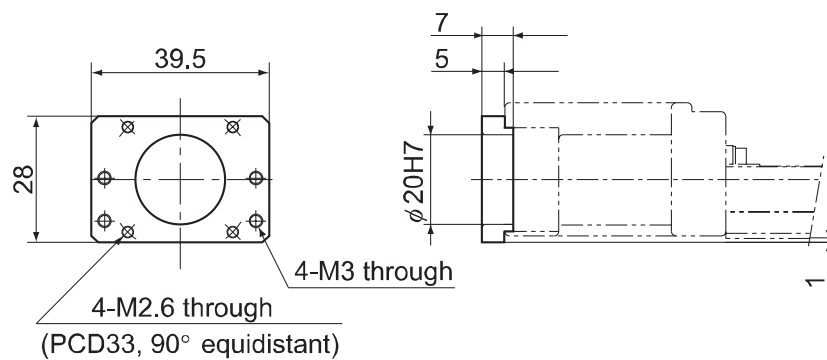


KR20

AN

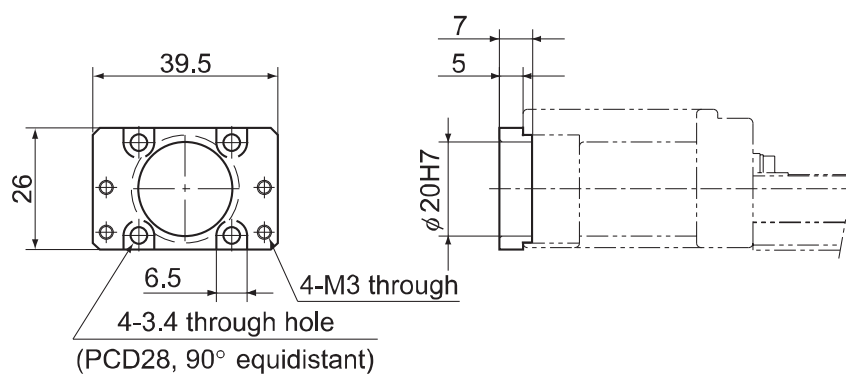


KR26

AR

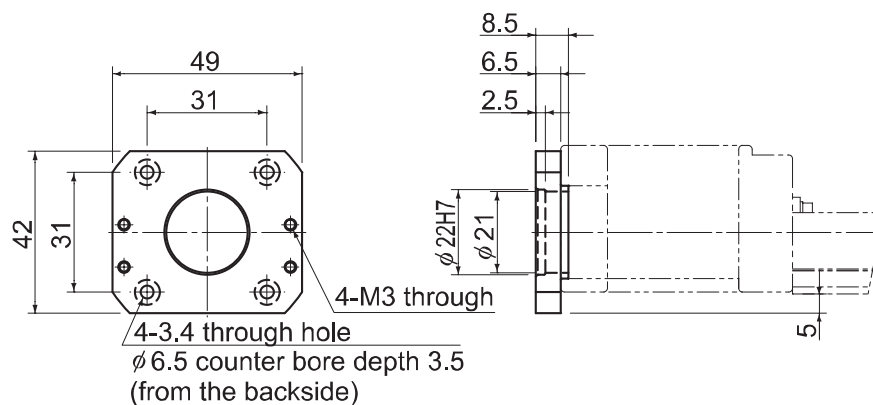


KR26

AS

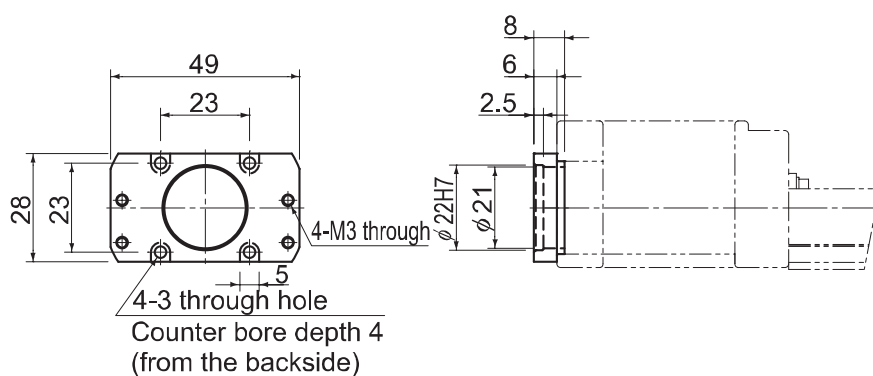


KR26

AM

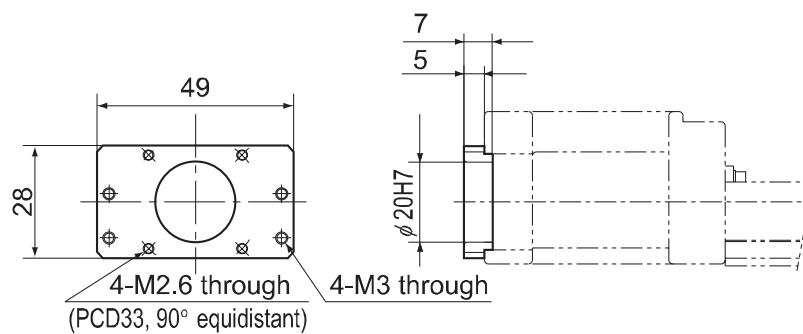

KR26


AN

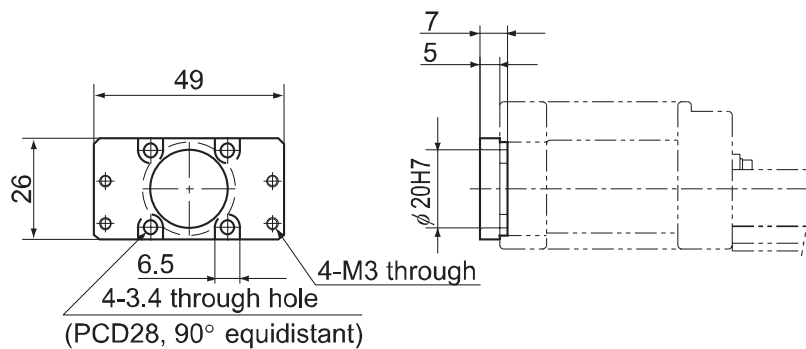



● For Model KR30H

KR**	···Actuator model number
●◇	···●: Housing A ◇: Intermediate Flange

■Housing A

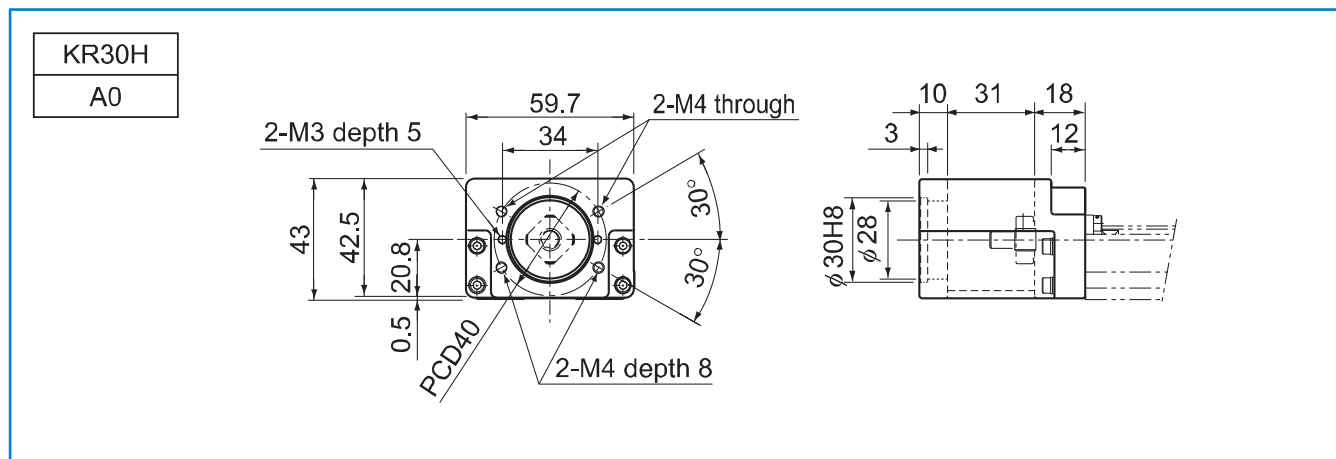


■Intermediate Flange

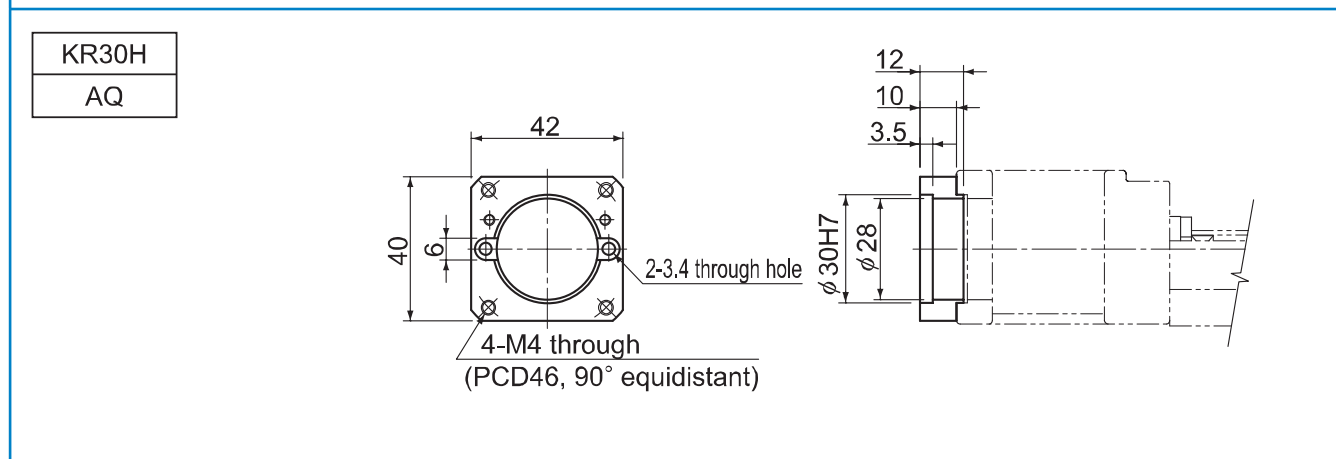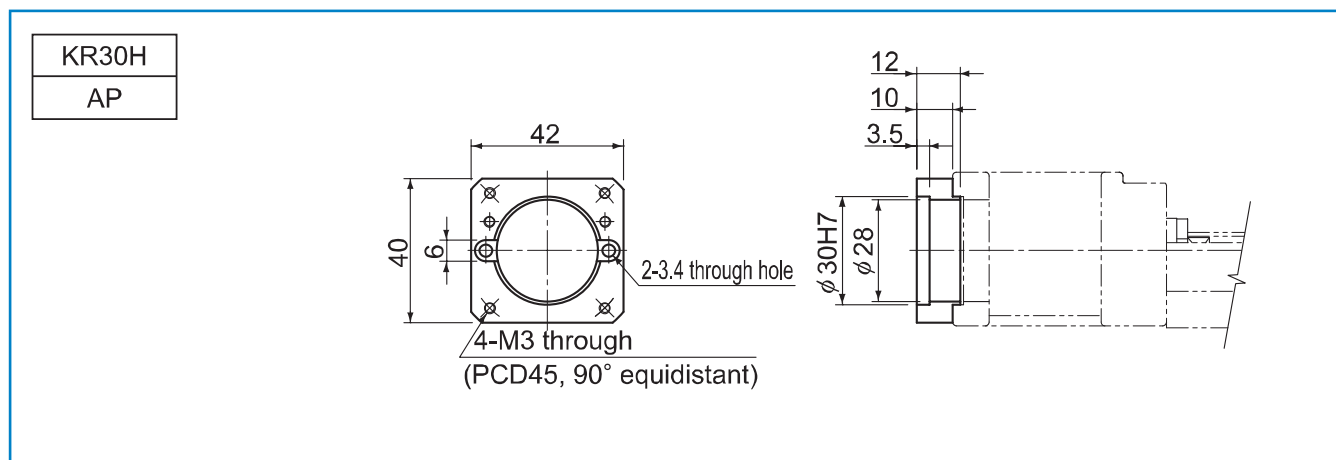


KR30H

AR

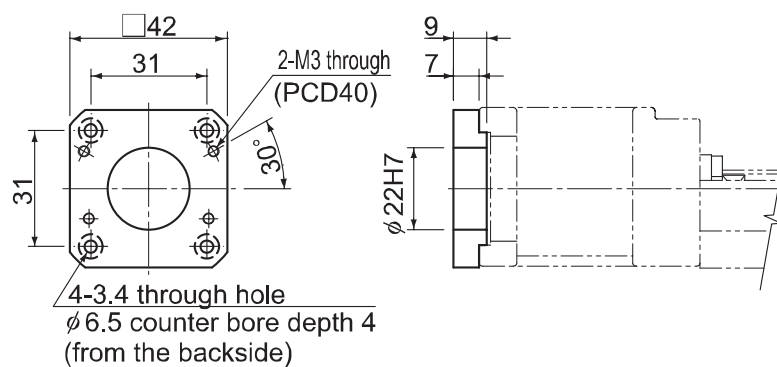


KR30H

AT

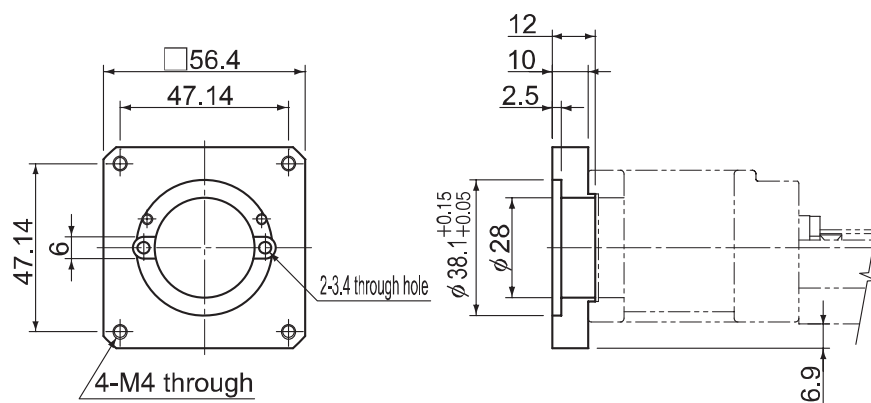

KR30H

AU

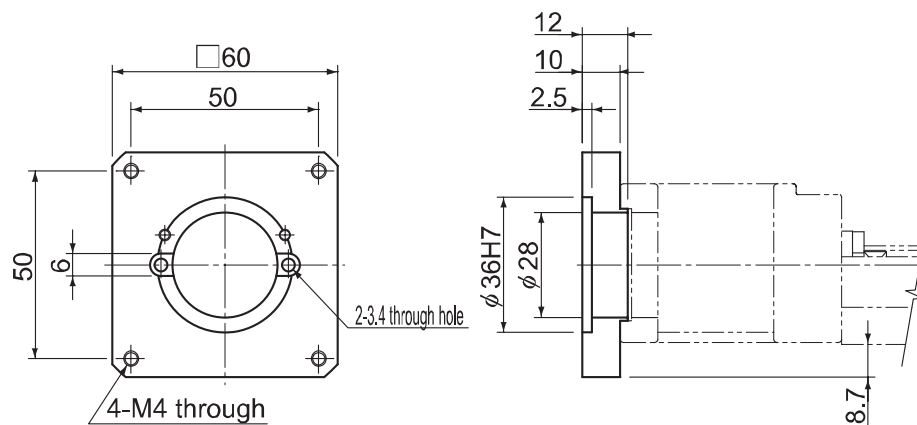


● For Model KR33


KR**	···Actuator model number
●◇	···●: Housing A ◇: Intermediate Flange

■Housing A


KR33
A0

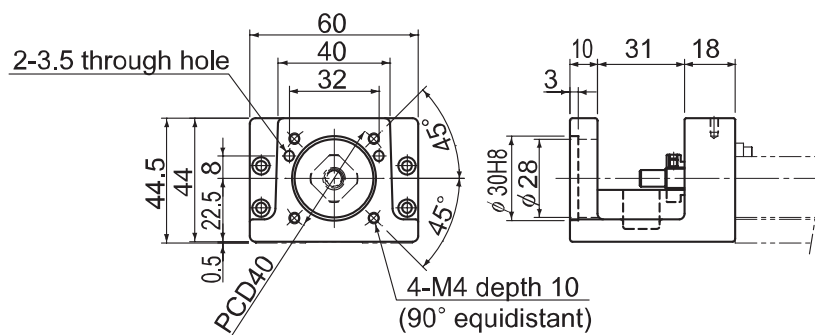


KR33
10

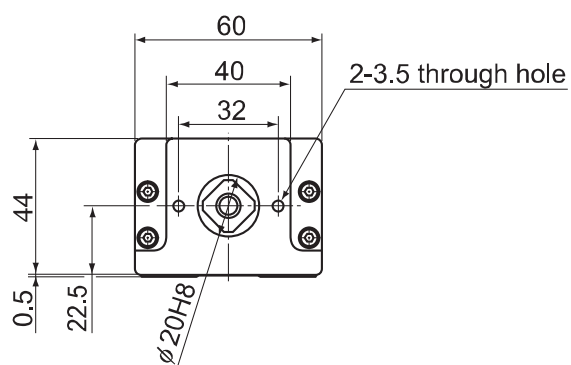


■Housing A for a Separate Motor

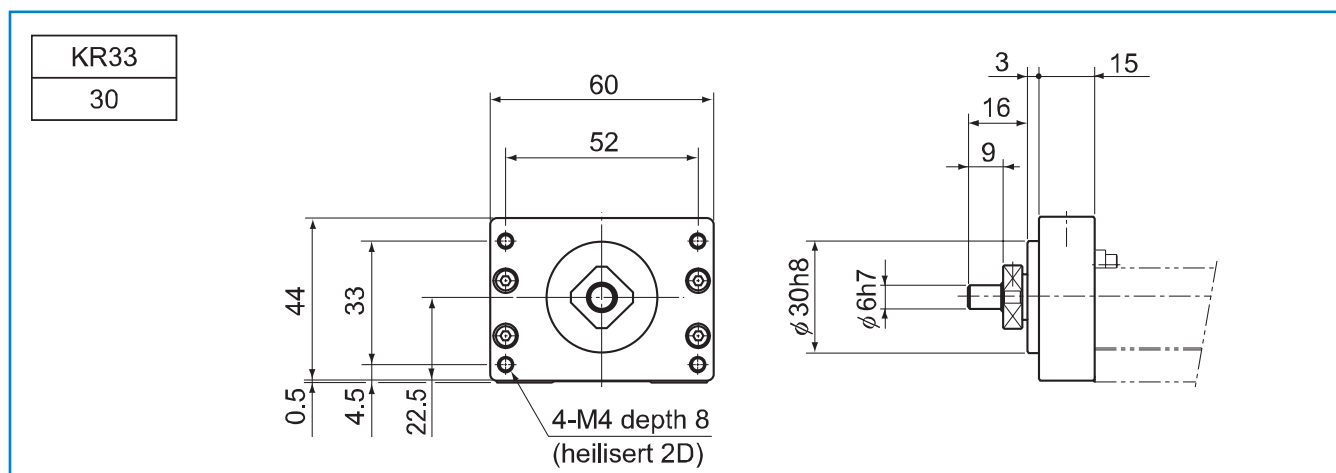


■Turnaround Housing A

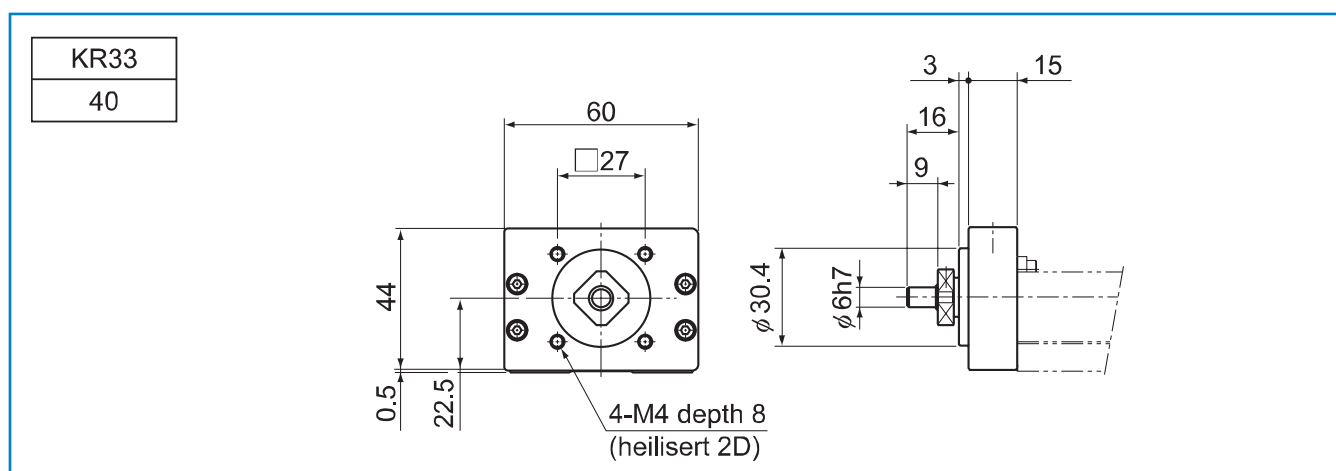


■Intermediate Flange

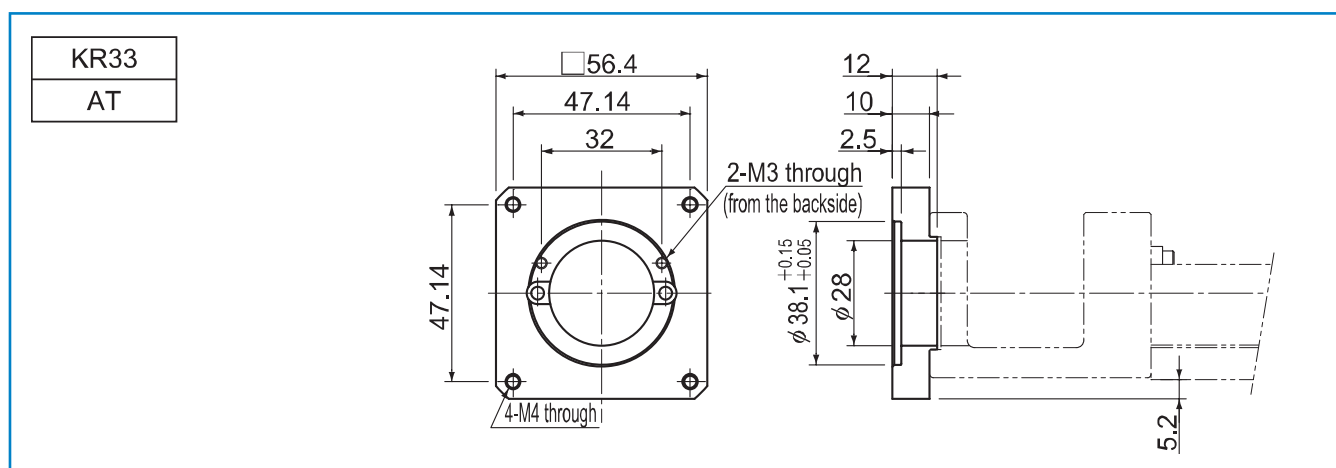


KR33
AU

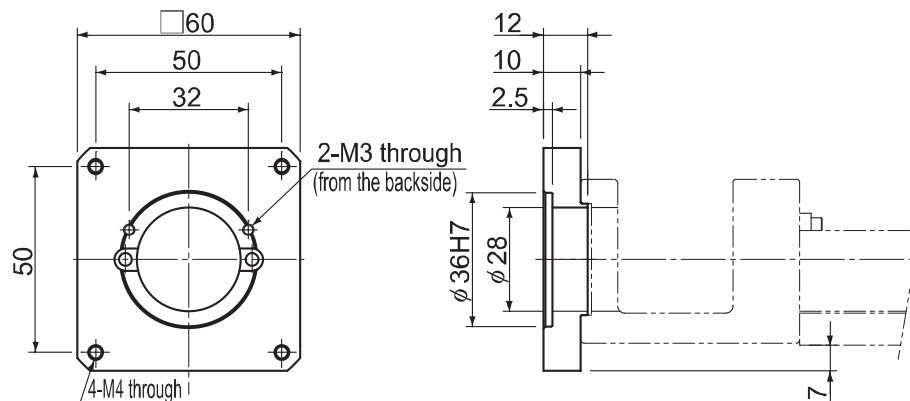


KR33
AQ

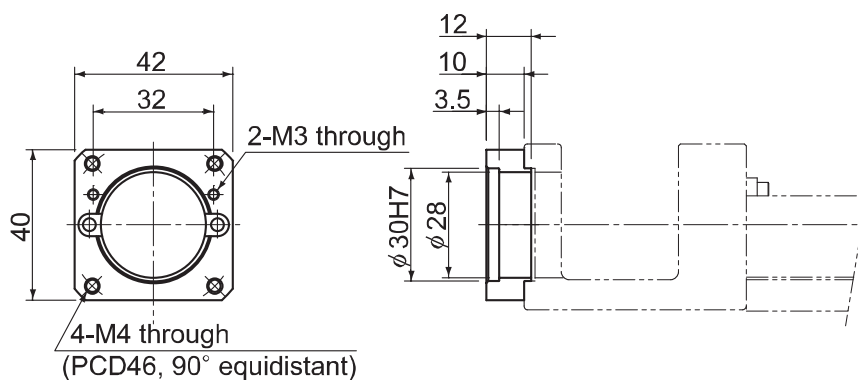

KR33
AR

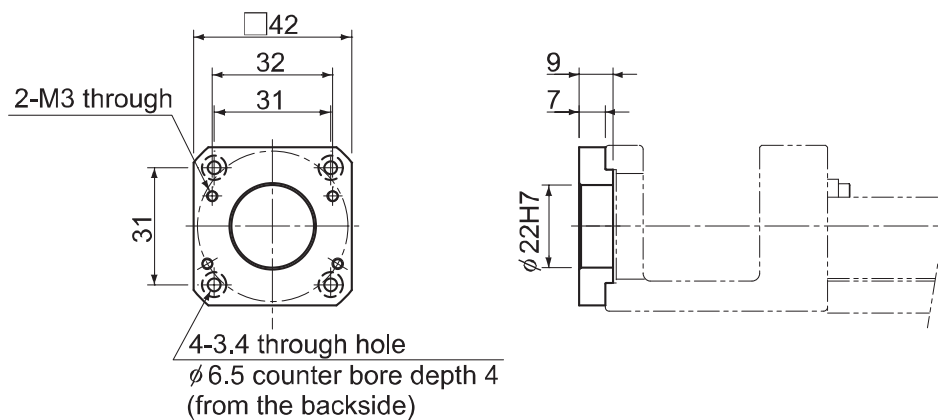


KR33
AP

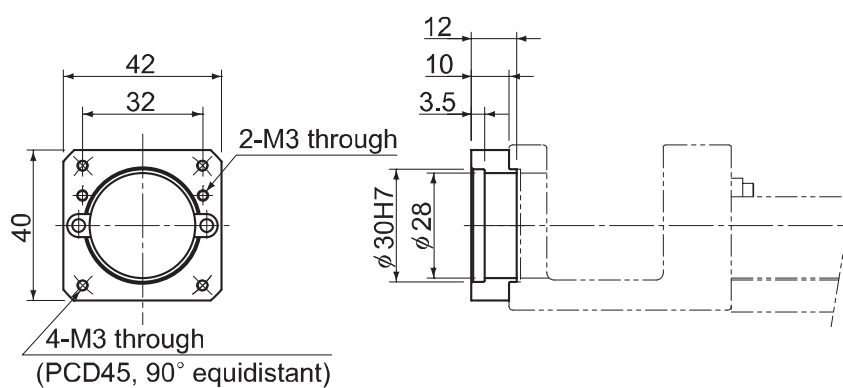

● For Model KR45H


KR**	...Actuator model number
●◇	...●: Housing A ◇: Intermediate Flange

■Housing A

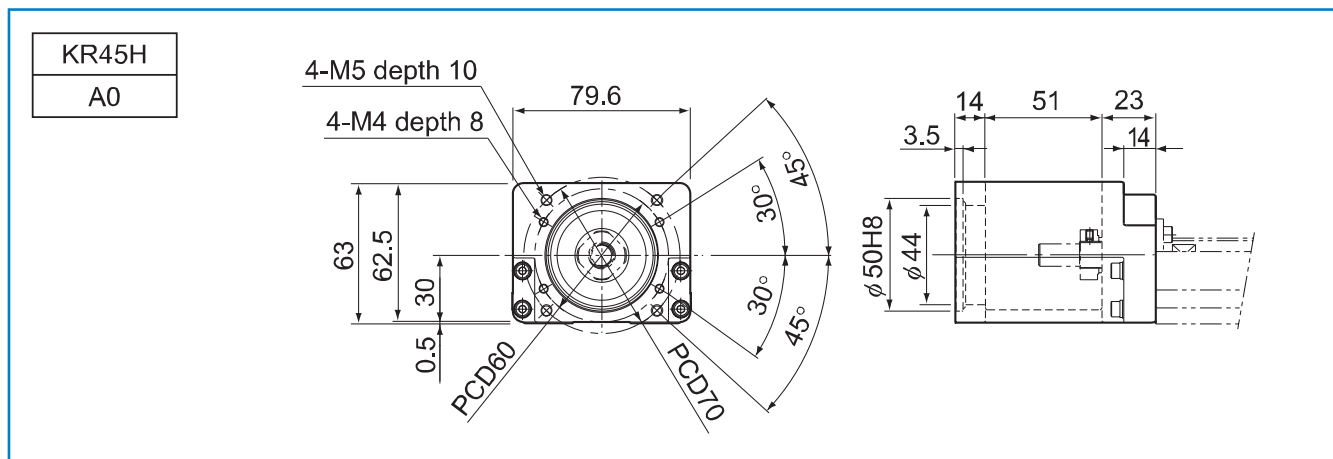


LM Guide Actuator (Options)

■Intermediate Flange

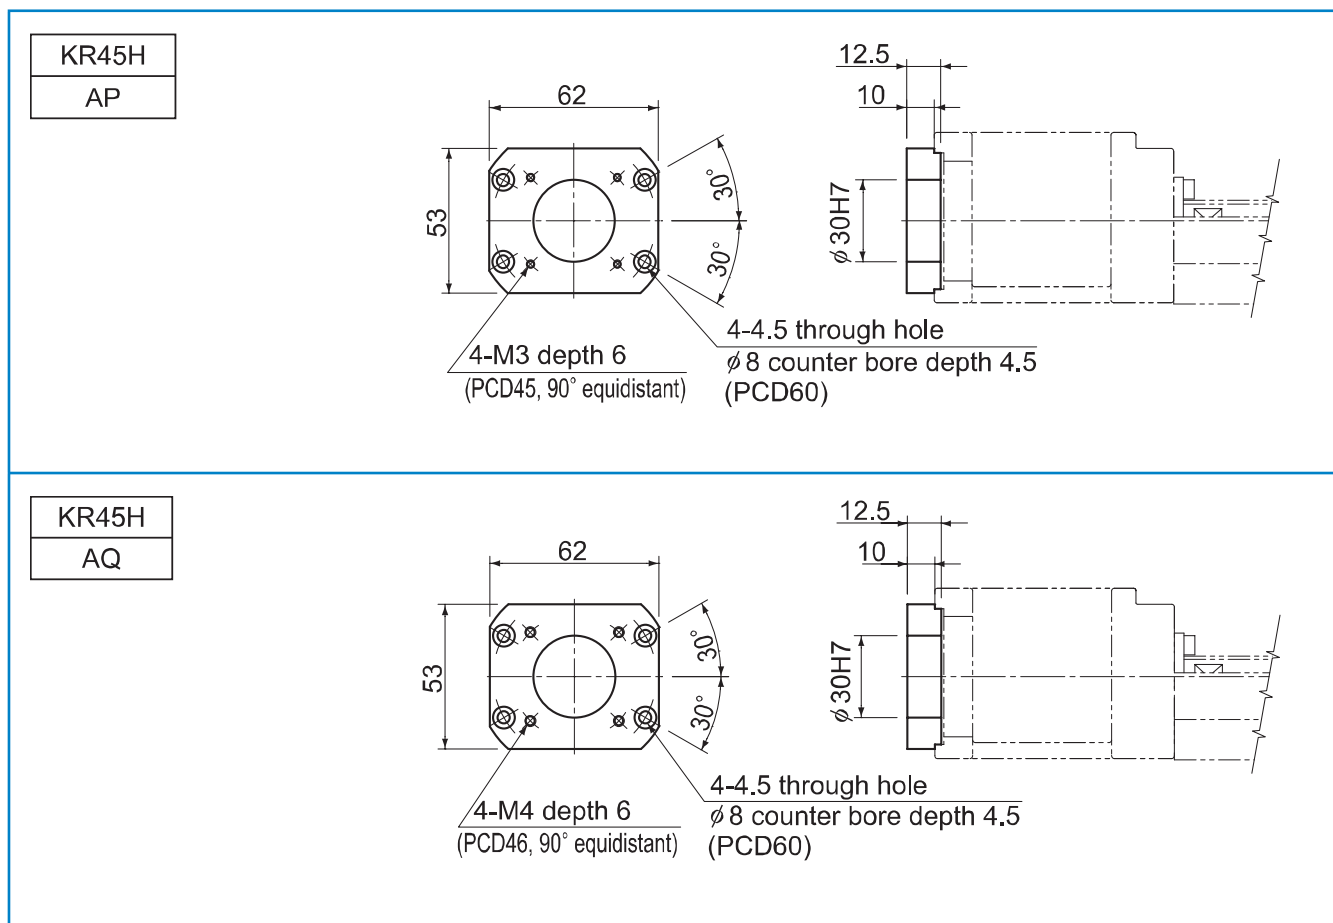


KR45H

AY

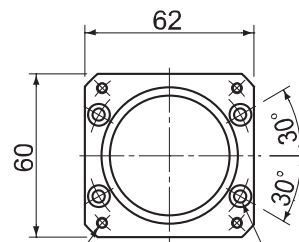


4-M4 through
(PCD70, 90° equidistant)

4-4.5 through hole
ø 8 counter bore depth 4.5
(PCD60)

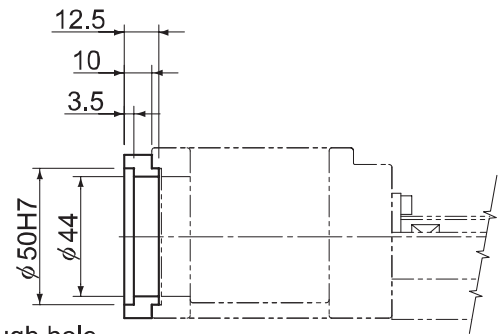


KR45H

AU

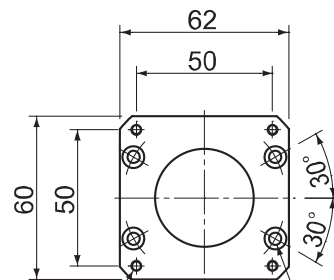

4-M4 through

4-4.5 through hole
ø 8 counter bore depth 4.5
(PCD60)

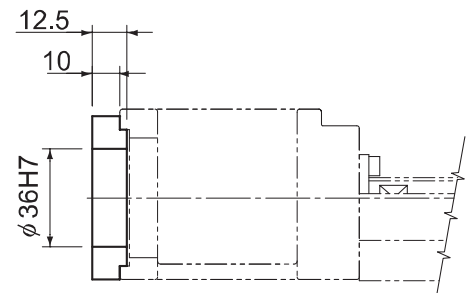


● For Model KR46


KR**	...Actuator model number
●◇	...●: Housing A ◇: Intermediate Flange

■Housing A


KR46
A0

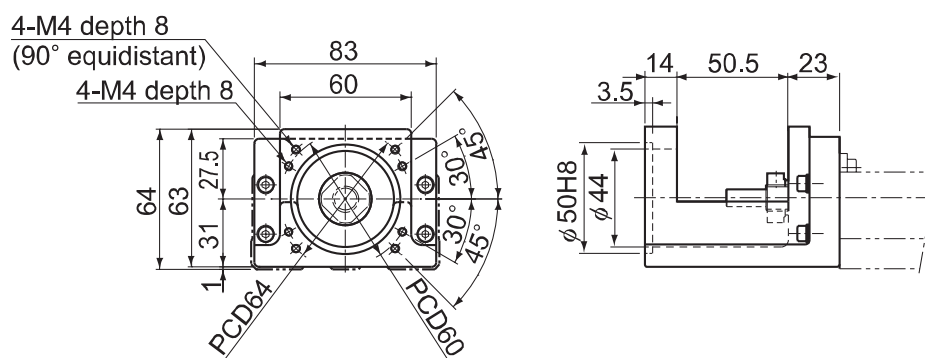

KR46
10

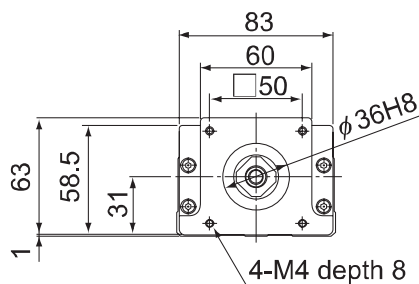


KR46
20

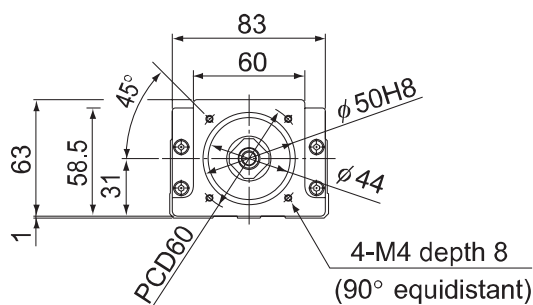


KR46

30

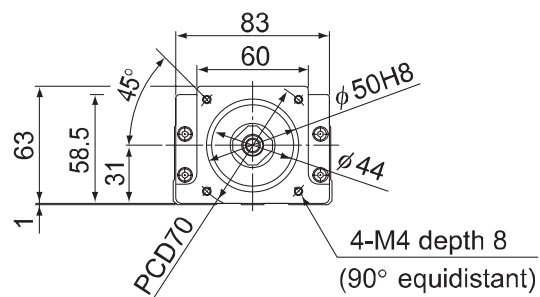

KR46


40

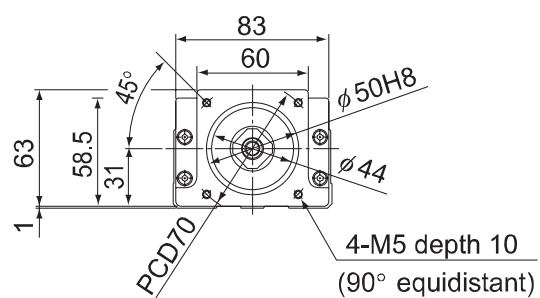

■Housing A for a Separate Motor


KR46

50

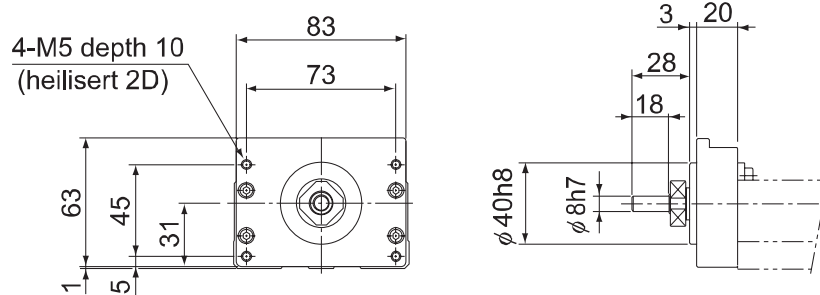


■ Turnaround Housing A

KR46
60

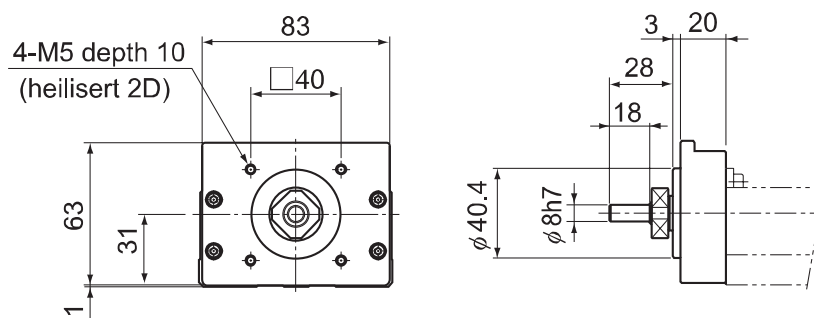


■ Intermediate Flange

KR46
AQ

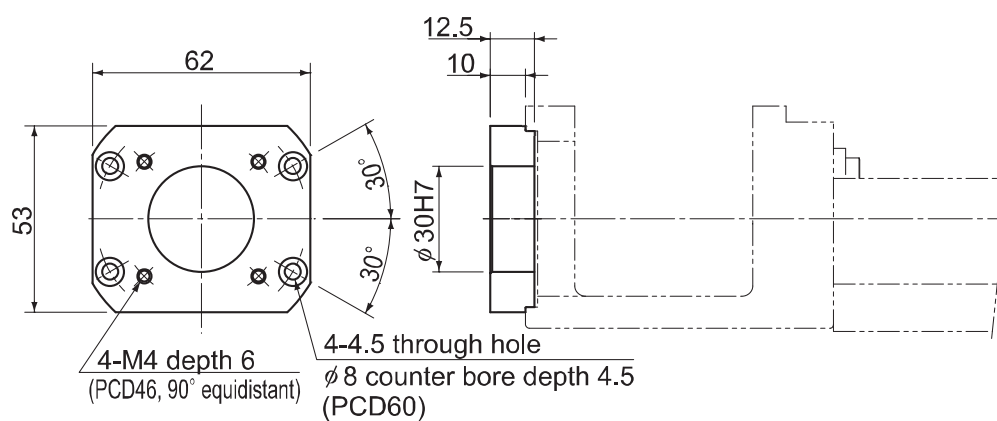


KR46
AP

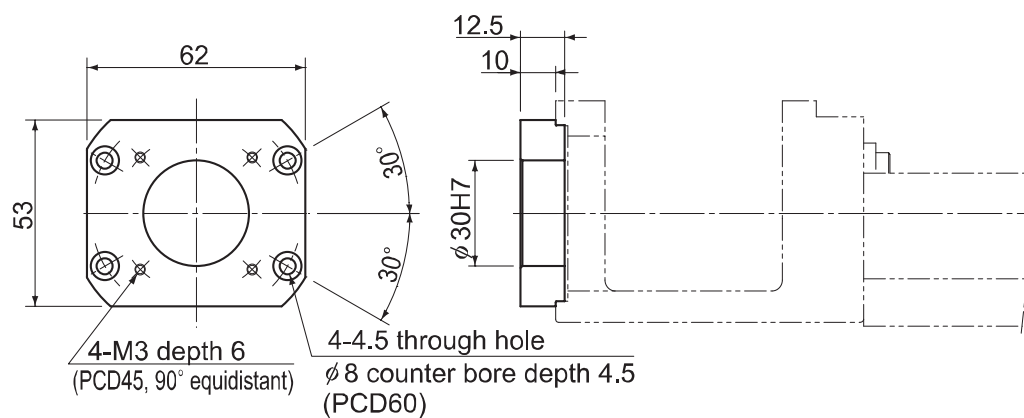

● For Model KR55



KR**	···Actuator model number
●◇	···●: Housing A ◇: Intermediate Flange

■Housing A

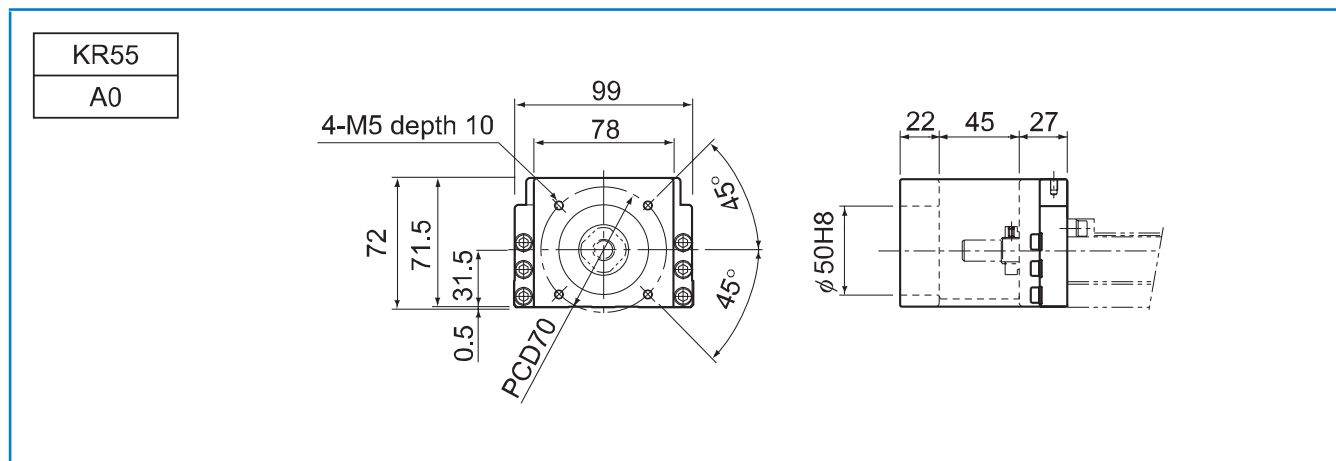

■Turnaround Housing A


Note) Specify mounting holes when ordering.

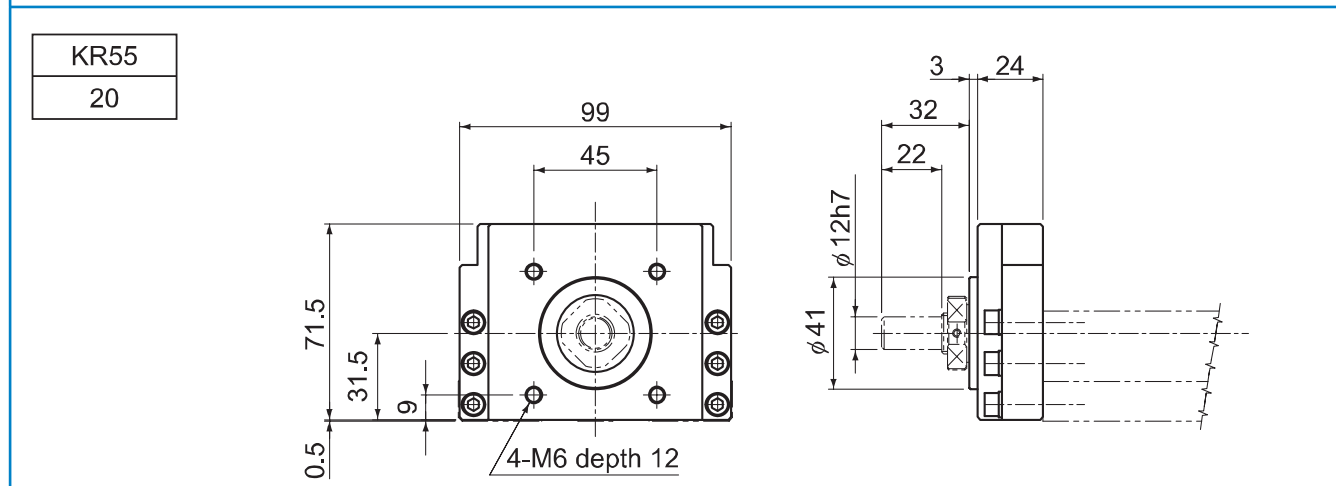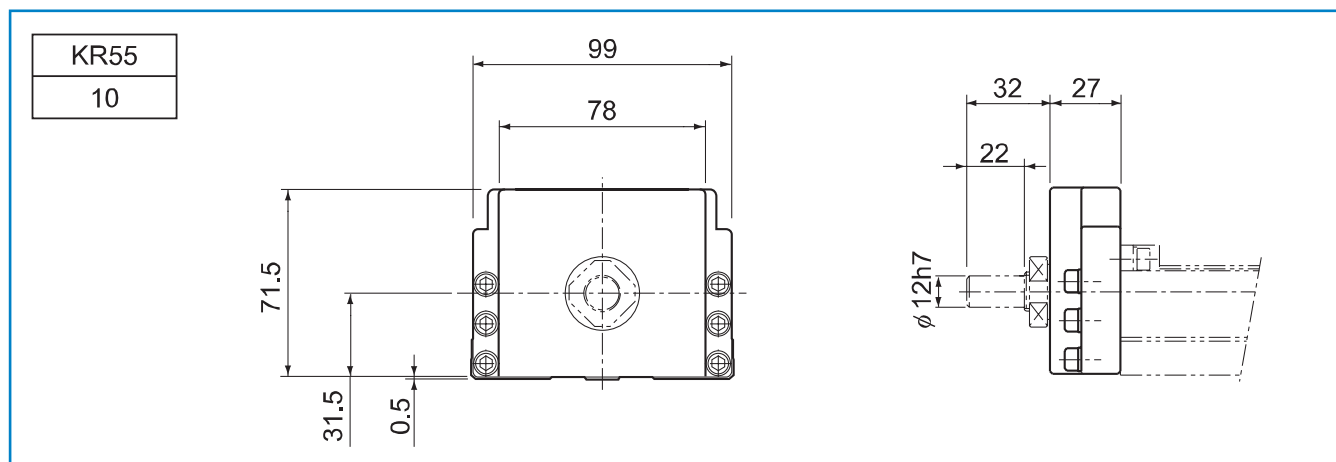

Intermediate Flange


KR55

A5

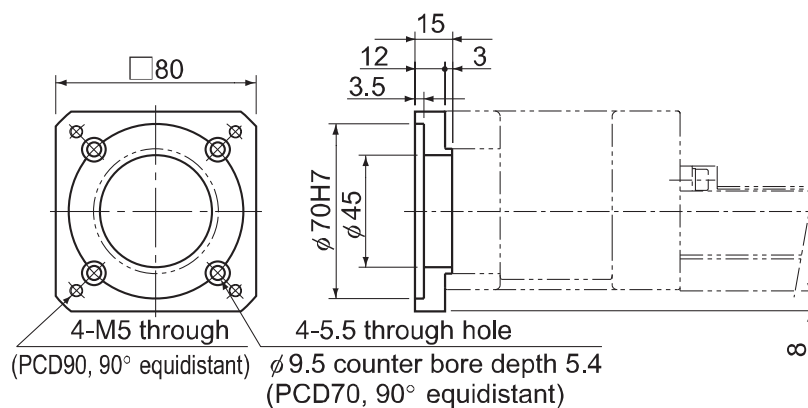


KR55

AZ

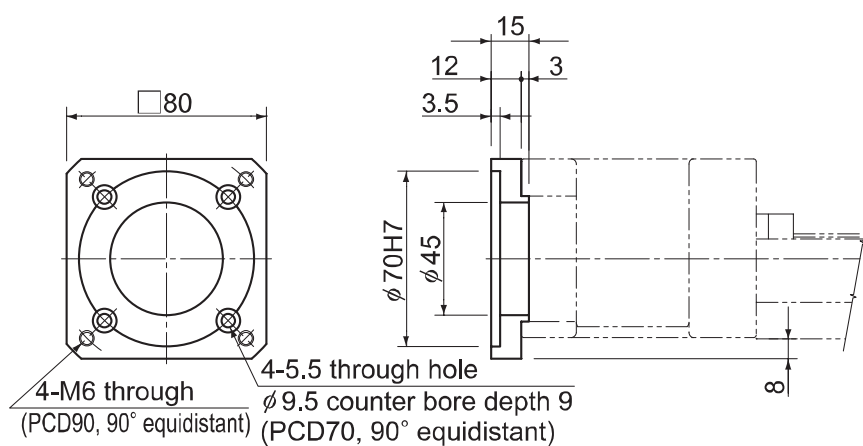

KR55


A6

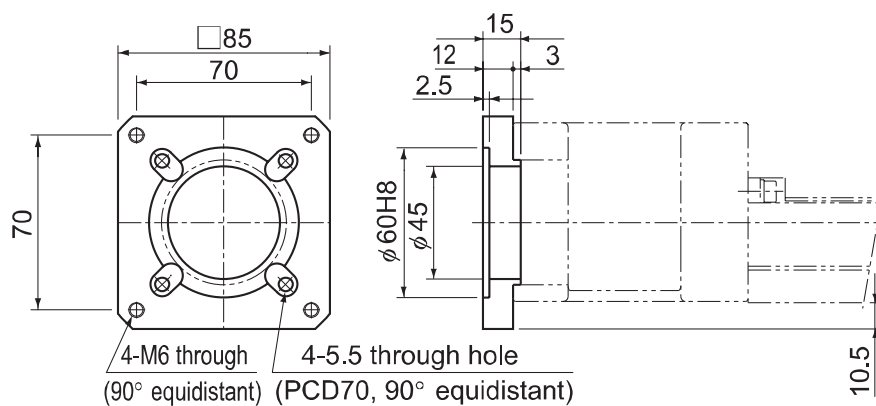

● For Model KR65



KR**	···Actuator model number
●◇	···●: Housing A ◇: Intermediate Flange

■Housing A

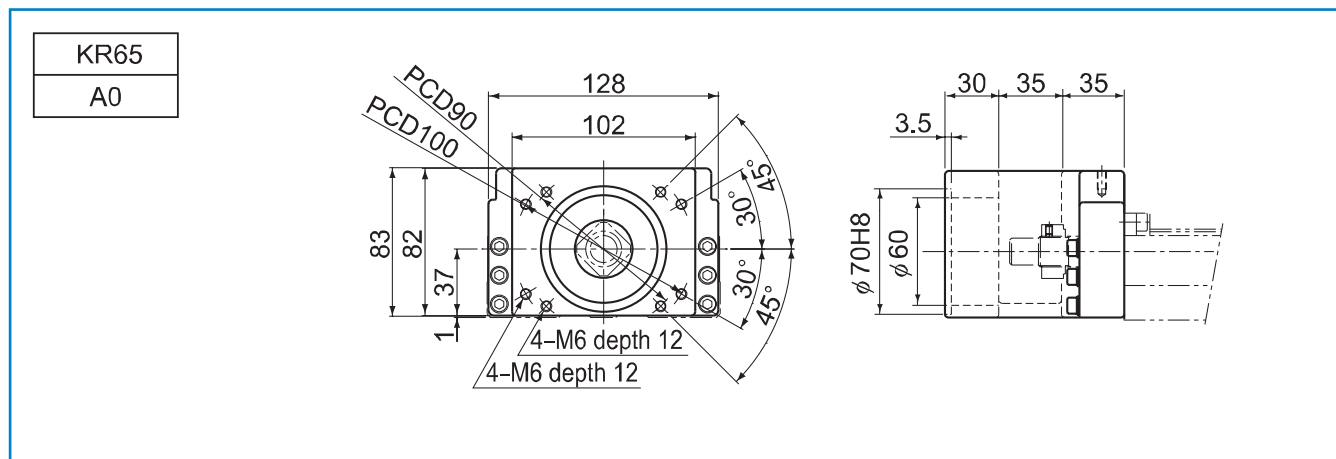

■Turnaround Housing A


Note) Specify mounting holes when ordering.

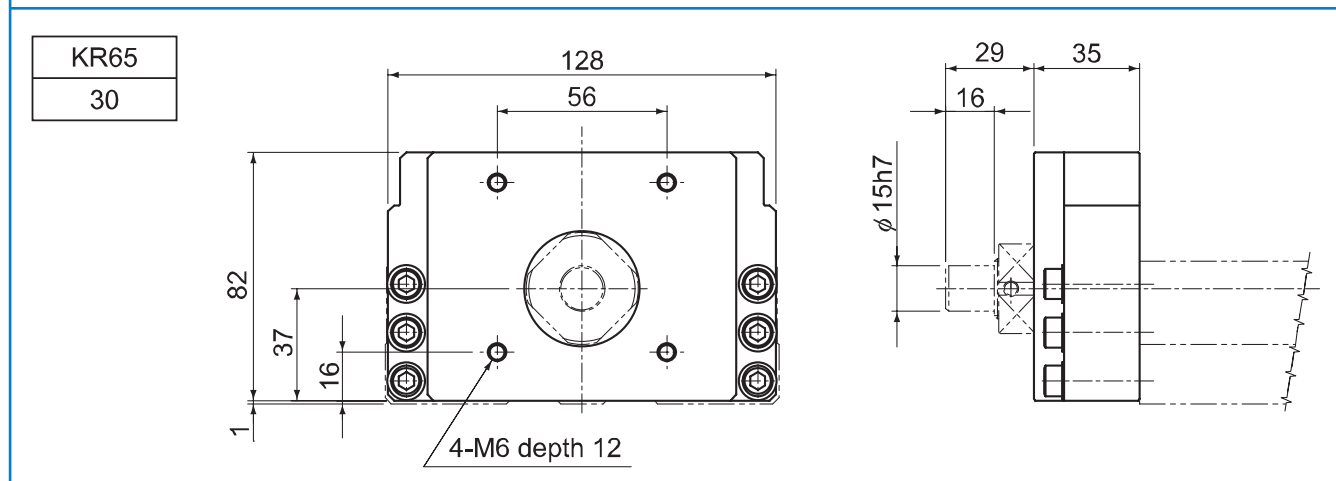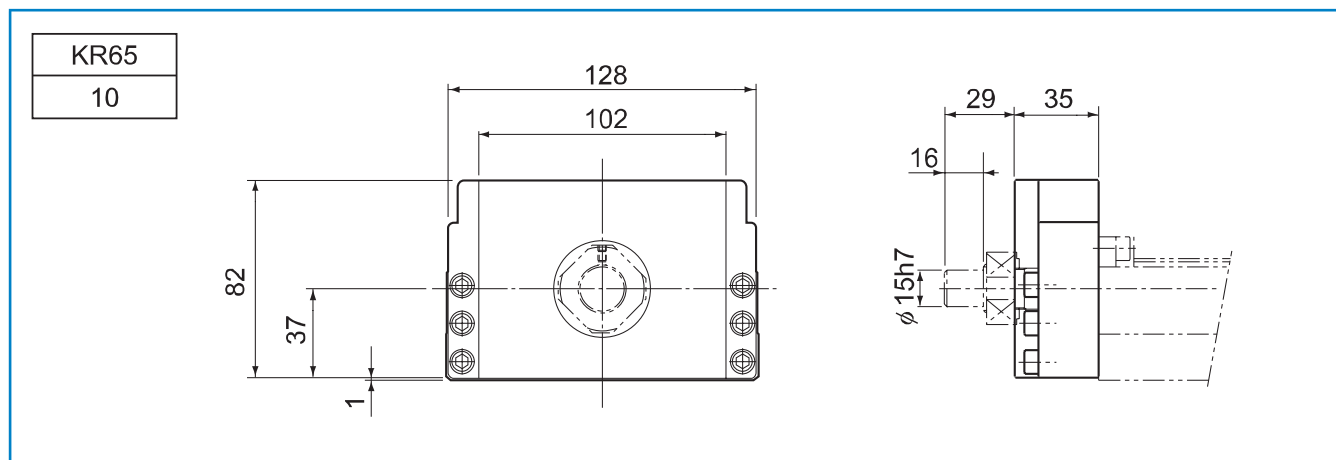

Intermediate Flange


KR65

AV

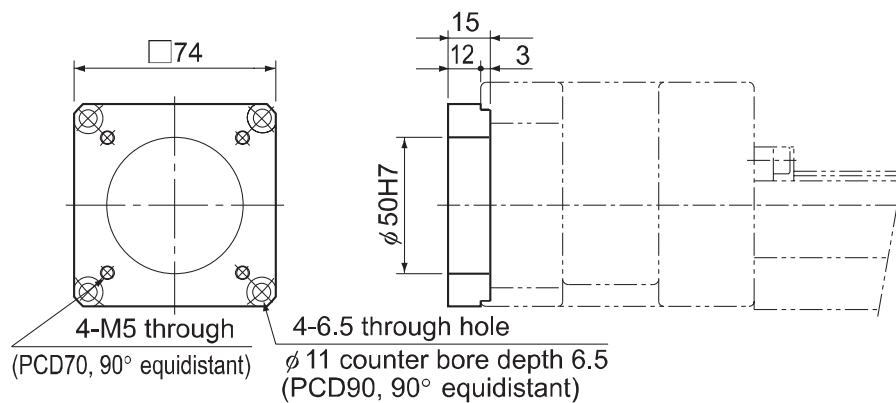


KR65

A5

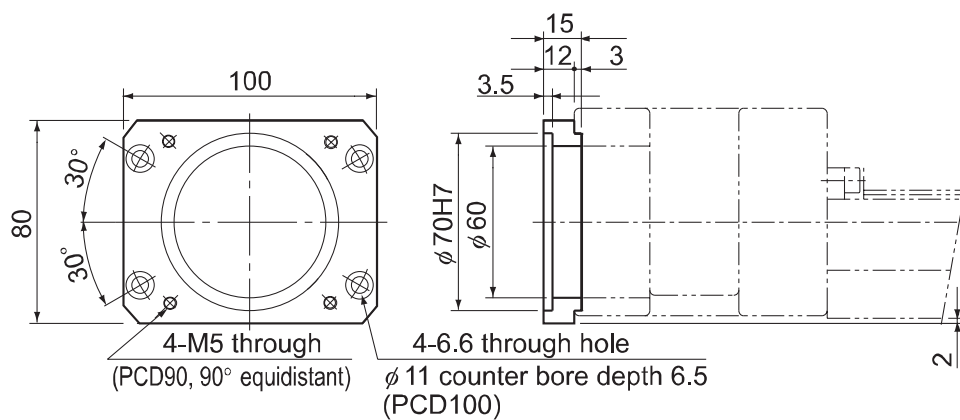

KR65

A6

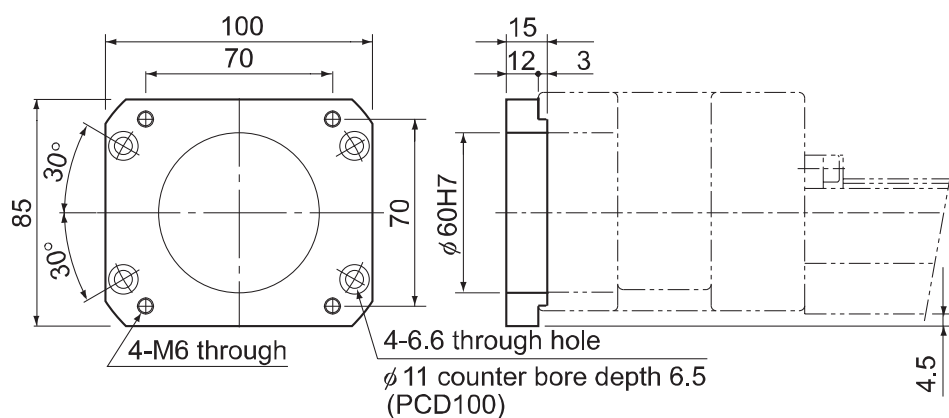

KR65

AZ

