


SKRV1.4

Mr.

PINDA 2 Wiring


BTT SKR V1.4 PIN

WWW.BIGTREE-TECH.COM

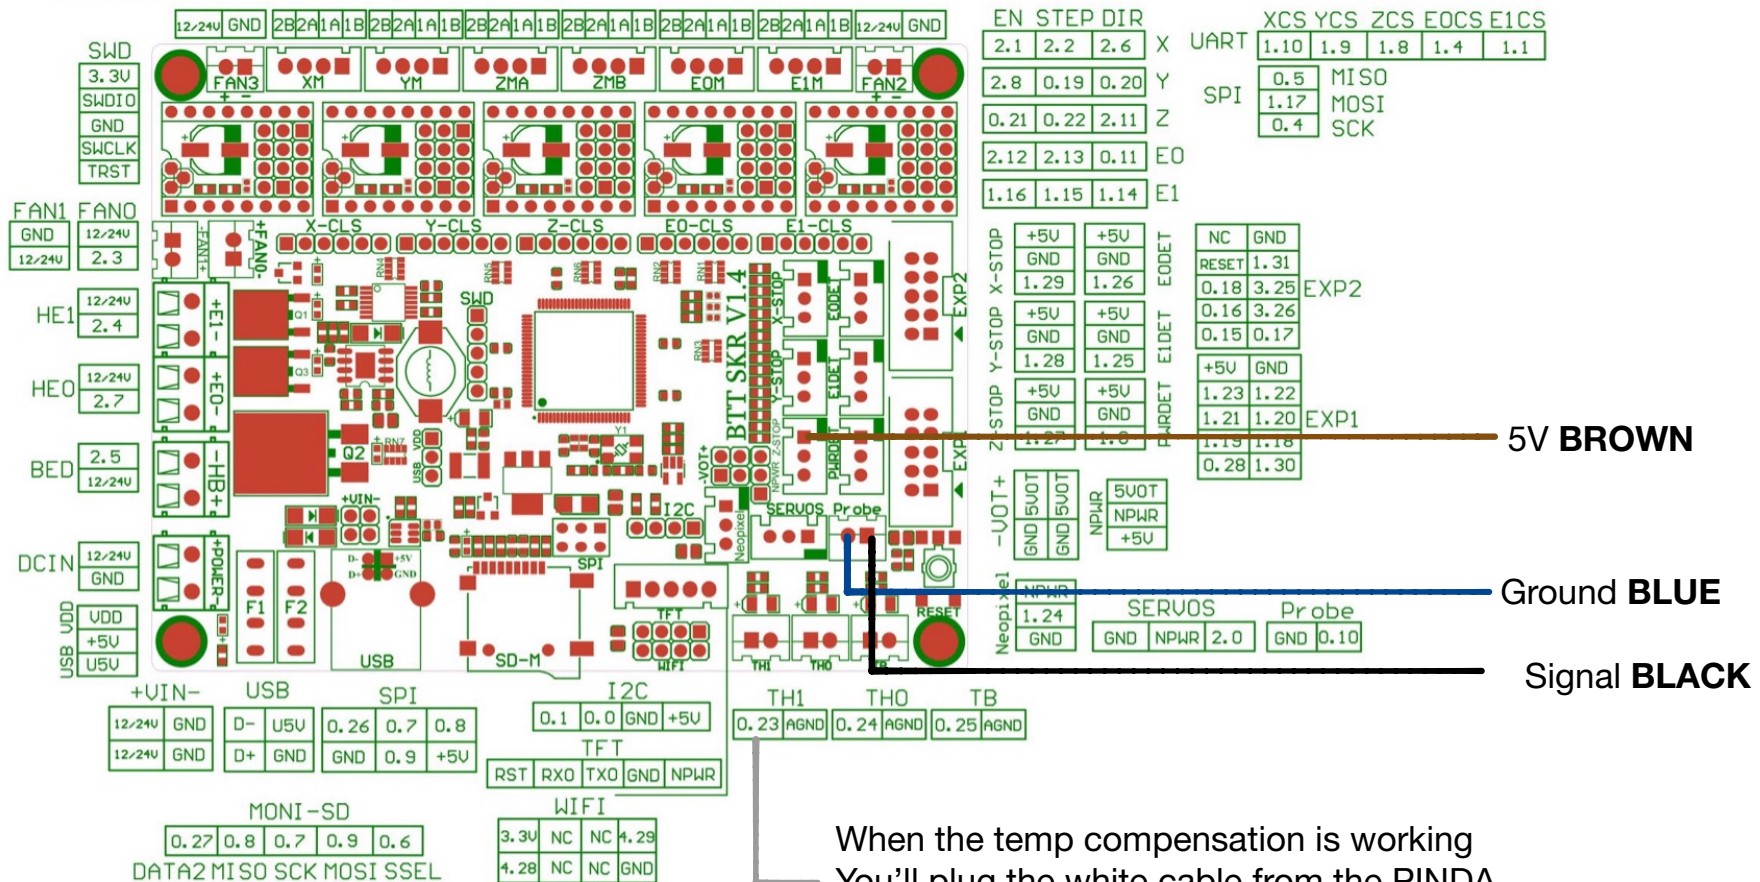


When the temp compensation is working
You'll plug the white cable from the PINDA
Into the **TH1 0.23** pin. If that is not enabled
then do not connect the white wire from
the PINDA. It will act just like a standard
capacitive probe.

Motor Cable Wiring

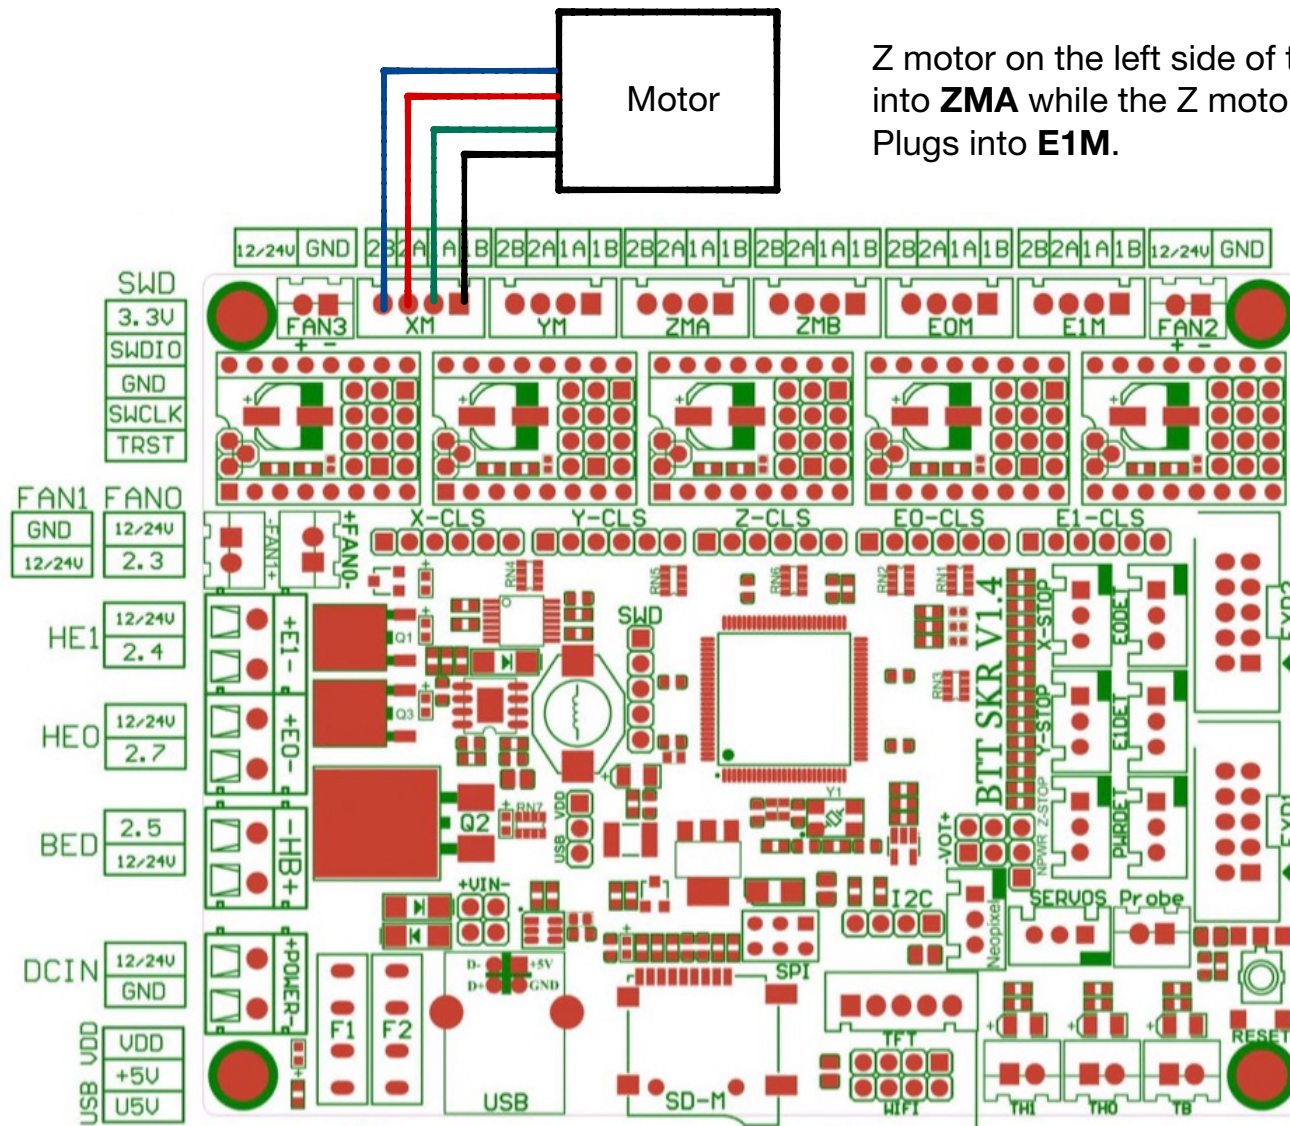

Z motor on the left side of the printer plugs into **ZMA** while the Z motor on the right side Plugs into **E1M**.

Wiring (cont.)

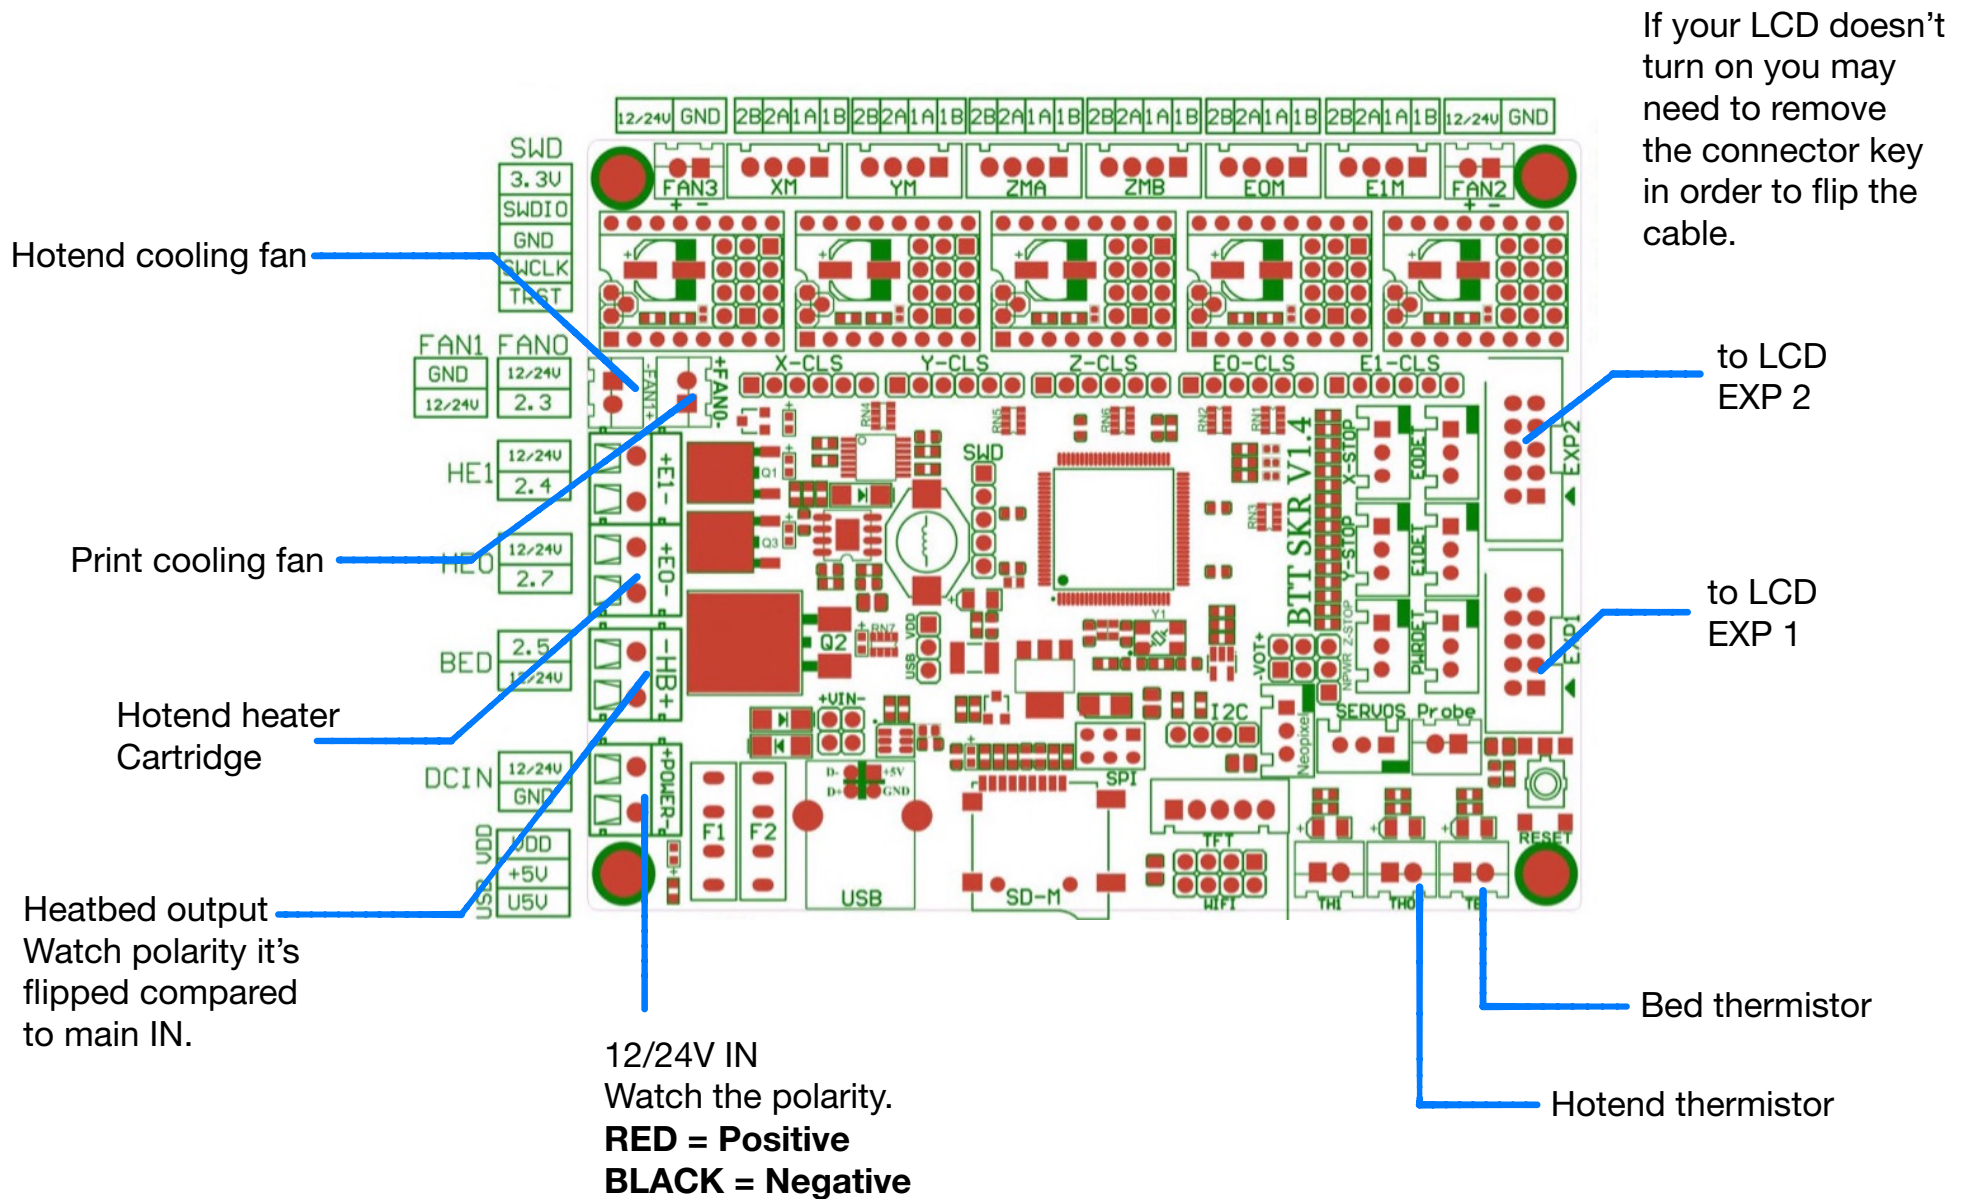

BTT SKR V1.4 PIN

WWW.BIGTREE-TECH.COM

