


SKRV1.4


Mr.

UART

To enable UART for the TMC2209 you must remove all jumpers besides the 3rd one as seen below in the image.

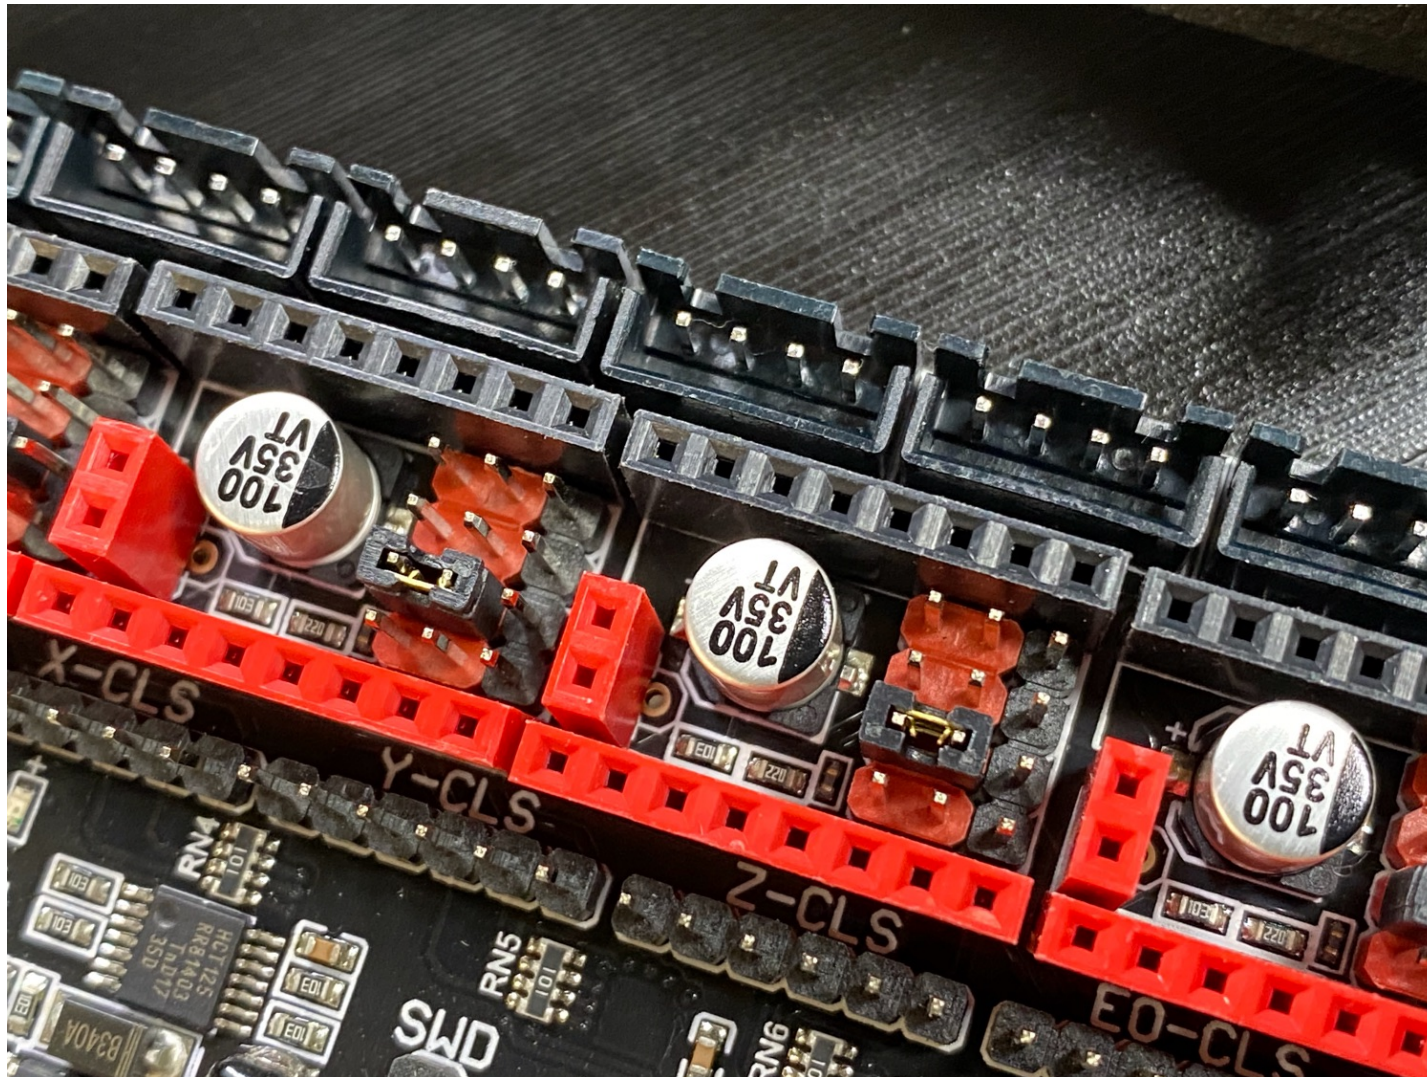

Motor Cable Wiring

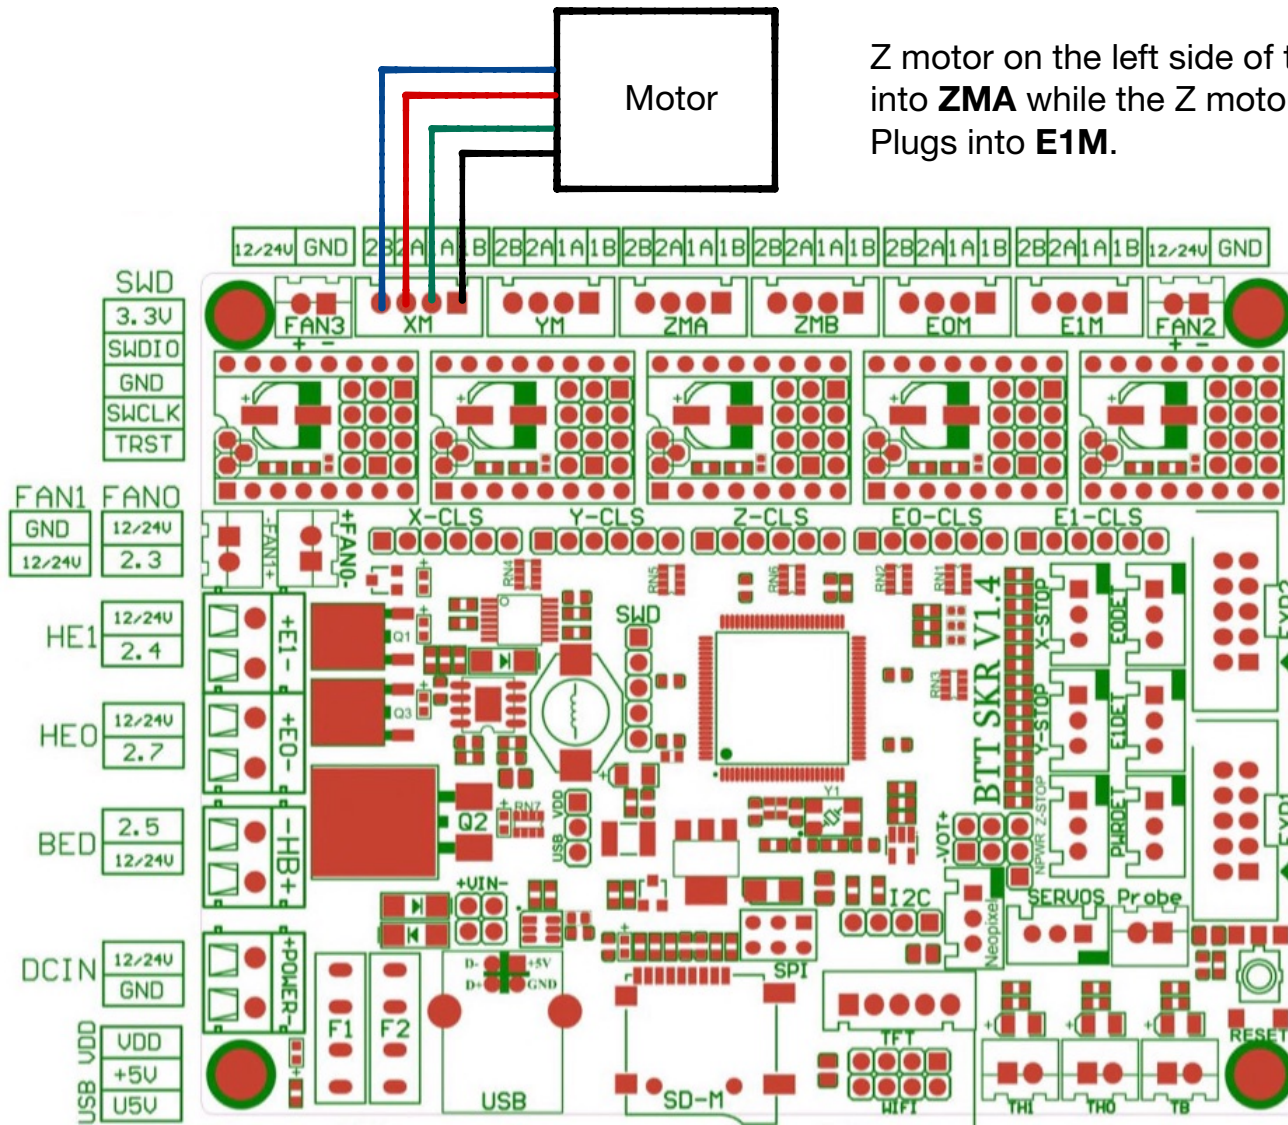


Z motor on the left side of the printer plugs into **ZMA** while the Z motor on the right side Plugs into **E1M**.



PINDA 2 Wiring

BTT SKR V1.4 PIN

WWW.BIGTREE-TECH.COM

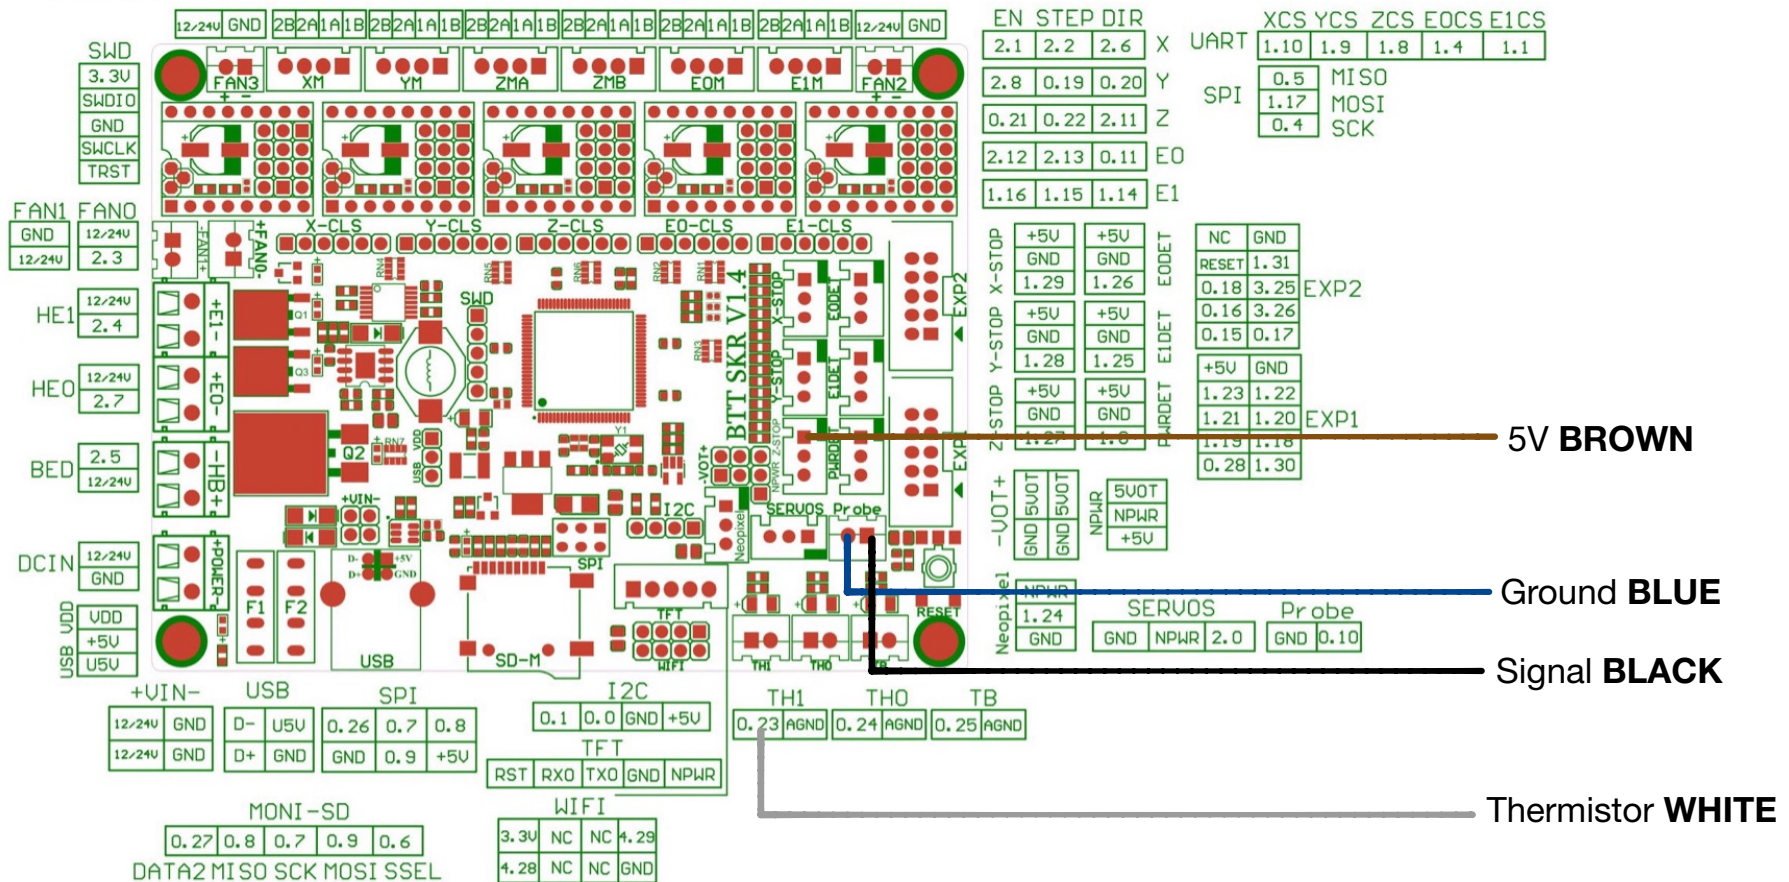


Filament Runout Sensor

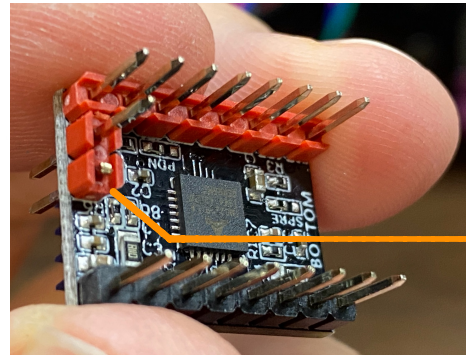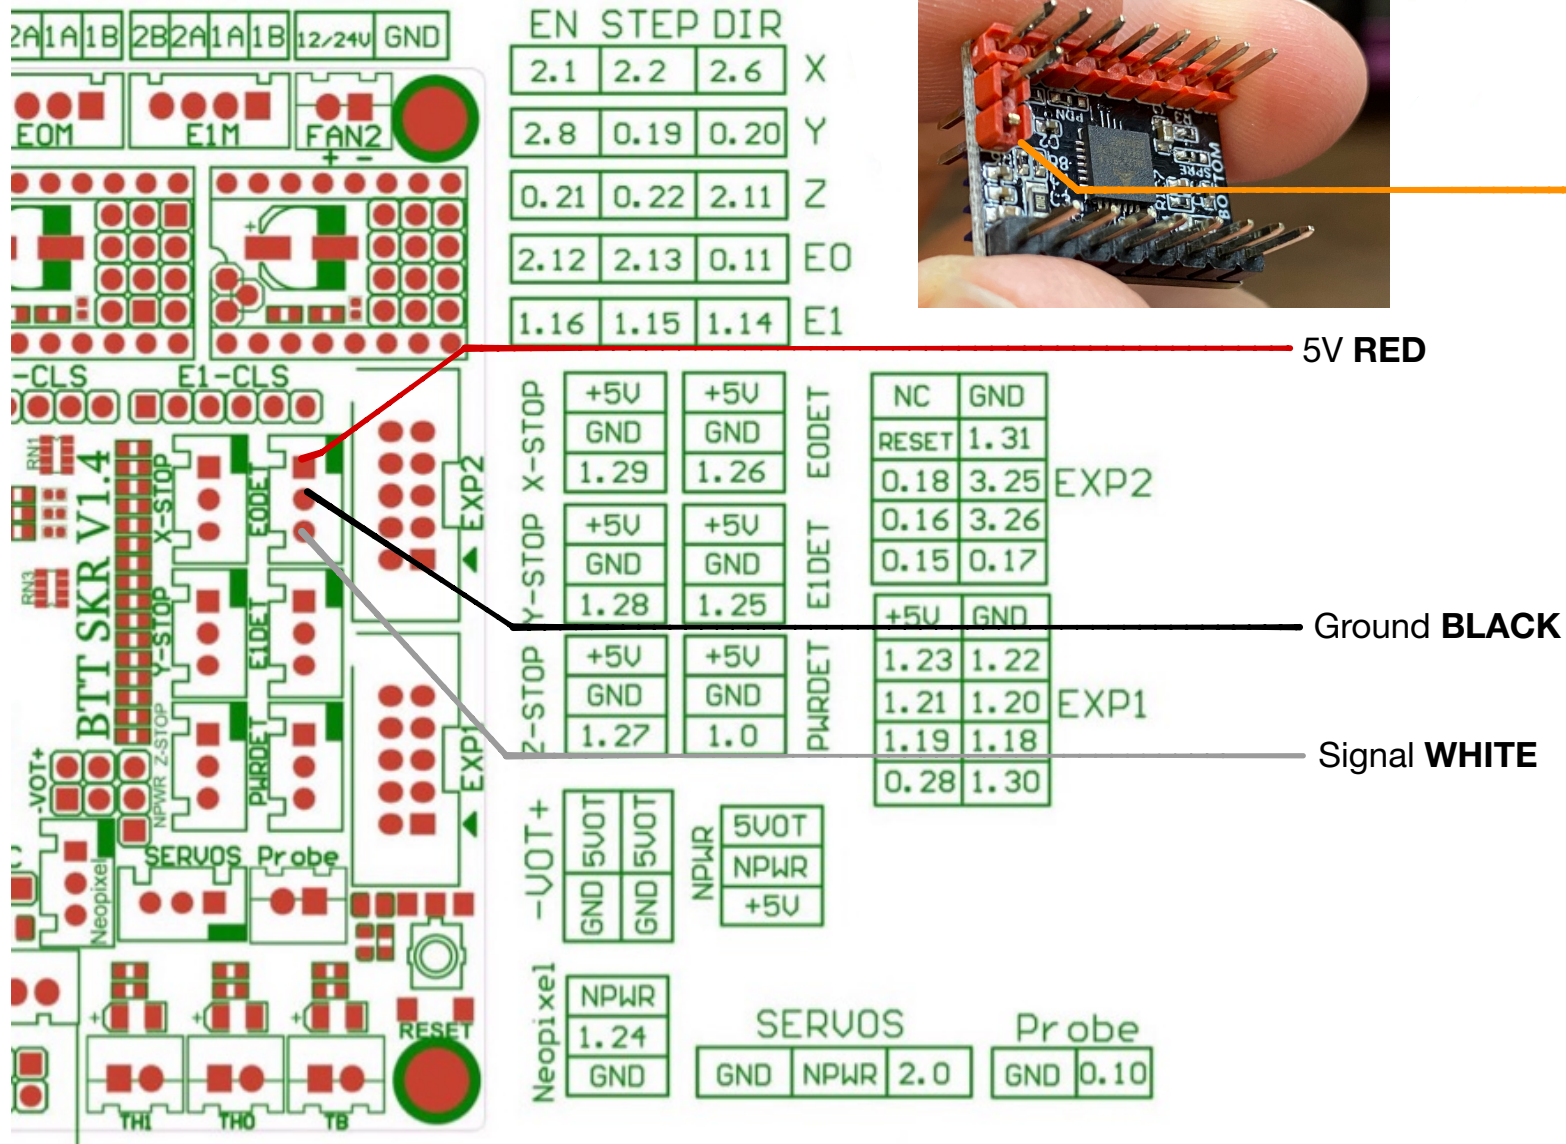

The filament sensor won't work with the diagnostic pin of the extruded stepper so you must cut it or use a soldering iron to heat up the pin and slide it up out of the way.

Wiring (cont.)

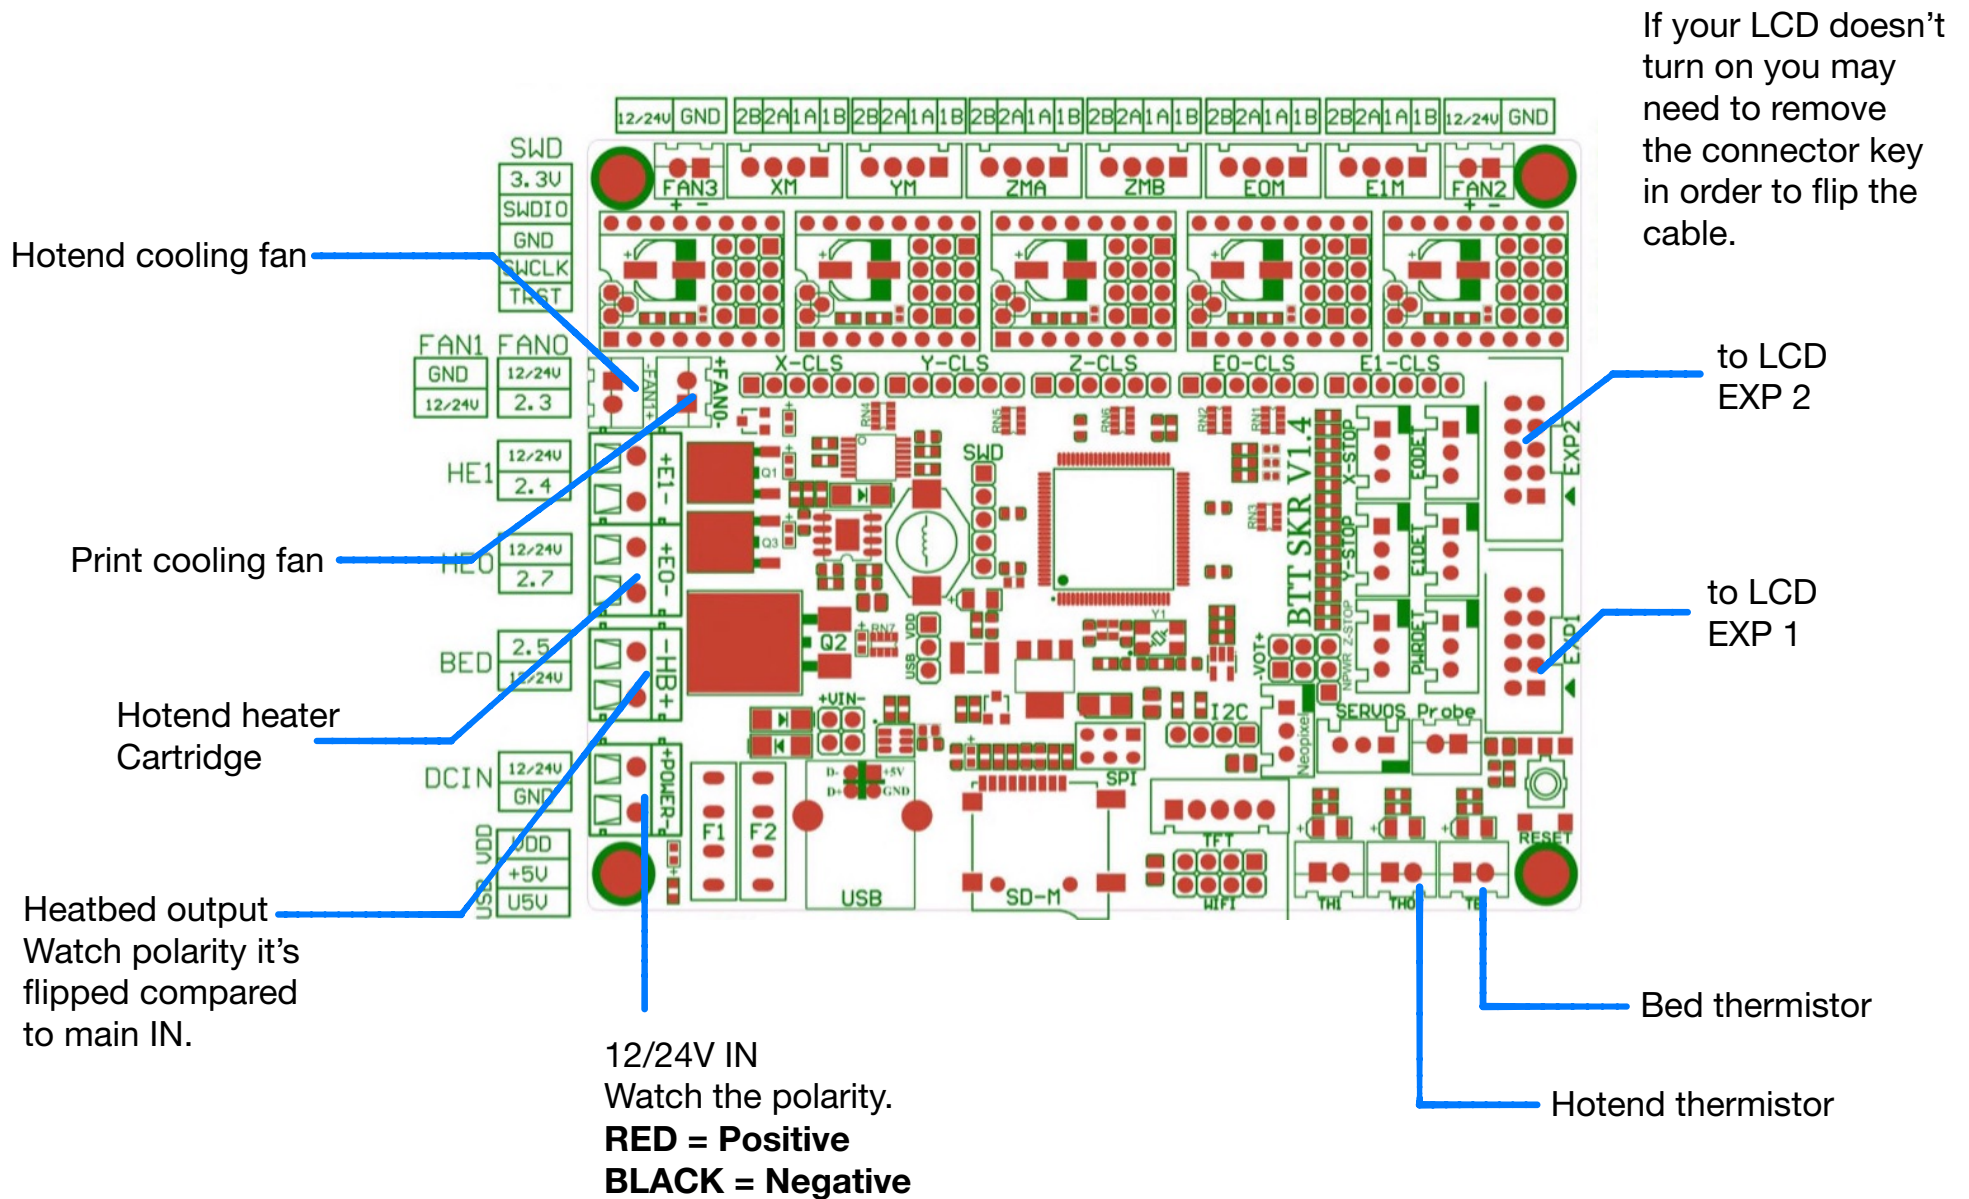

WWW.BIGTREE-TECH.COM

