



Power

Beeper

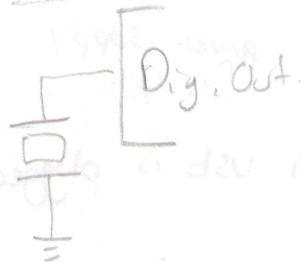


USB Programming

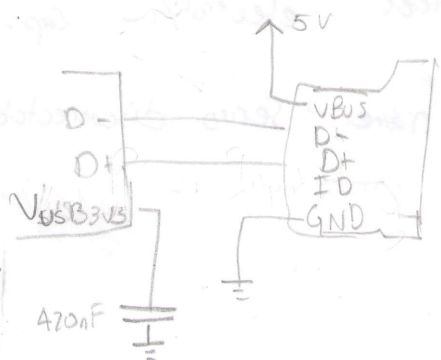

Memory Clear



PS2 Remode

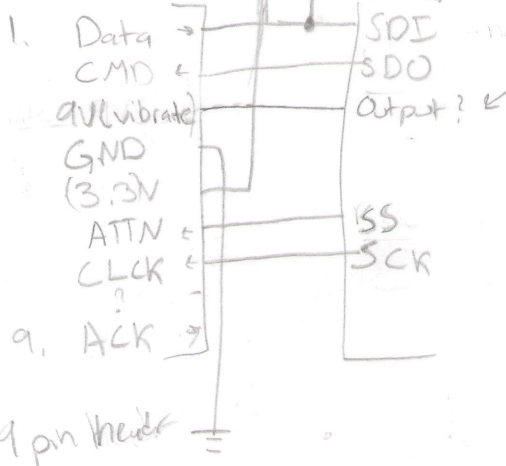


PS2 interface

Note: Logitech PS2 receiver needs 1.5V, and 20mA


Various Schematic Parts

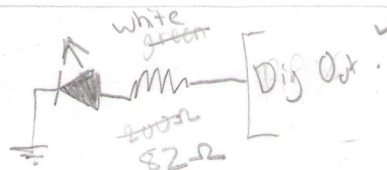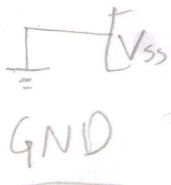

White LED

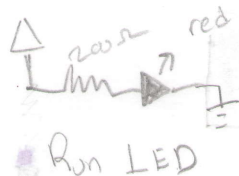


Red LED

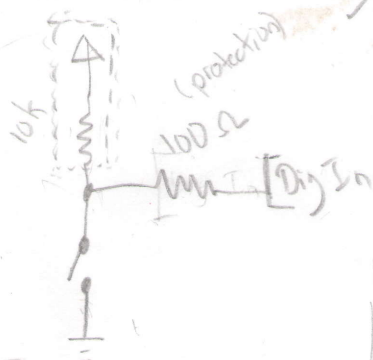

Tilt Switch, x2
Reg. Switch, x1

Header -> ESC, Servo

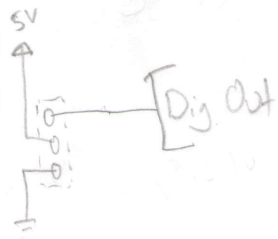

Look into

- power supply capacitor ✓
- beeper orientation: X
- 1000 ohm T1s
- USB FTDI, jumper 0.5A
- how to know which footprint?

- need ^{big} electrolytic cap. near power supply $\rightarrow 1\mu F, 47, 200$
- have Servo disconnected, when usb is plugged in.

