

# Please Read

## Important FM60-VSAT Service Provider Addendum

### Service Provider Settings


To access service provider settings in the ICM's web interface, follow these steps:

1. At the **Settings** page, select the **Other** tab.
2. Click the Intelsat logo five times.
3. Update the contact information for tier-one support and set the modem's user, admin, and OS passwords.\* Then restart the system.

*NOTE: The default admin password of the ICM is "password."*

\* If you do not enter tier-one support information, the Support page will not display contact details.

Figure 1: ICM Other Settings

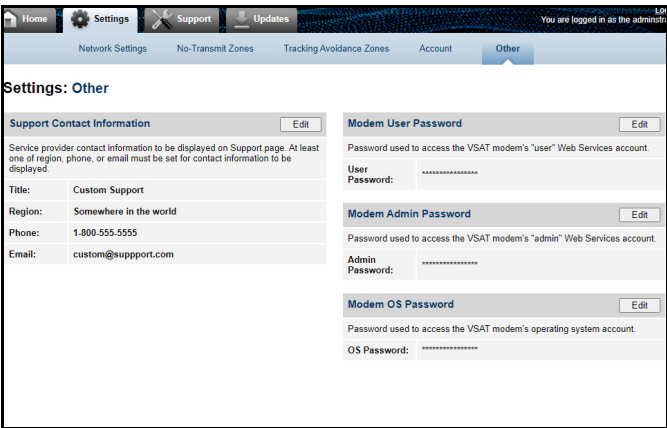


### Modem Configuration Instructions

To configure the modem, follow these steps:

1. Connect your computer to the ICM's User Ethernet port 1 or 2 (see Figure 2).
2. Open a web browser and enter the modem's IP address. The default is **192.168.1.1**.
3. At the modem's login page, enter the admin credentials. The default settings are as follows:
  - User Name: **admin**
  - Password: **iDirect**
4. Upload your network's configuration files and any firmware update files to the modem.

Figure 2: ICM Port Configurations

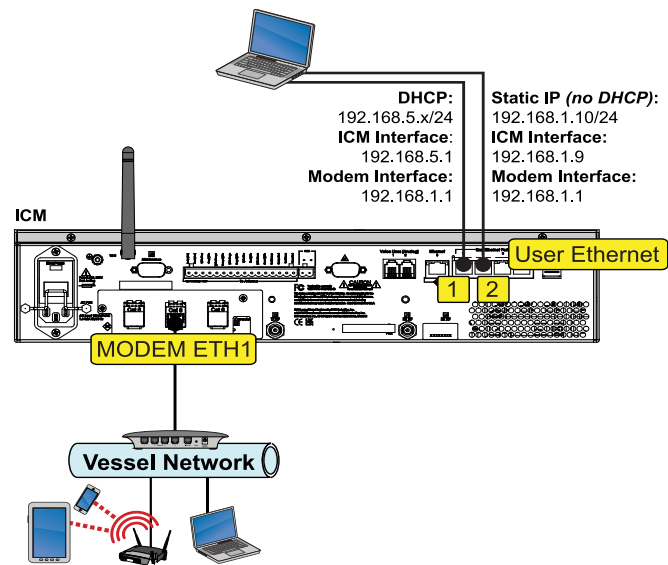

### ICM Port Configurations

The ICM's Ethernet ports are configured as follows by default:

Port	Configuration
User Ethernet 1	<ul style="list-style-type: none"><li>• DHCP server: Enabled<ul style="list-style-type: none"><li>• Default gateway: 192.168.5.1</li><li>• Netmask: 255.255.255.0</li></ul></li><li>• ICM interface: 192.168.5.1</li><li>• Modem interface: 192.168.1.1</li></ul>
User Ethernet 2	<ul style="list-style-type: none"><li>• Static IP: 192.168.1.9*</li><li>• Netmask: 255.255.25.0</li><li>• ICM interface: 192.168.1.9</li><li>• Modem interface: 192.168.1.1</li></ul>
MODEM ETH1	Internet access

\* To use this port, the customer must set up a static IP of 192.168.1.10/24.