

FM60-VSAT Quick Start Guide




This guide provides basic operation information for the FM60-VSAT system. If you need any assistance, please contact your distributor for technical support.

Getting Help

For complete operation, setup, and diagnostics information, refer to the system's comprehensive Help, available on the Support tab of the FM60-VSAT's web interface.


Turning On the System

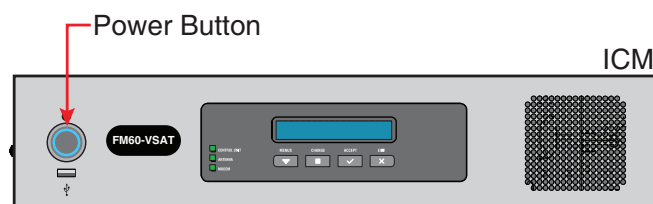

Press the power button on the ICM then wait 5 minutes for system startup. When the ICM indicates "Online," you can access the Internet using any device connected to the network.

The antenna requires a clear view of the sky. Objects such as bridges and boat masts can block satellite signals.


Caution – RF Radiation Hazard

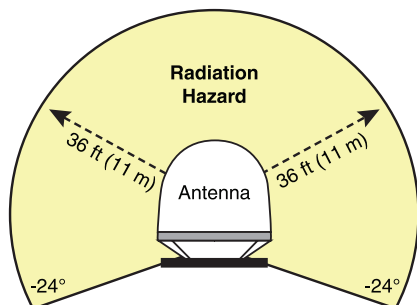

The antenna transmits radio frequency (RF) energy that is potentially harmful. Whenever the system is in use, make sure everyone stays more than 36 feet (11 m) away from the antenna. No hazard exists directly below the antenna.

You can program up to two no-transmit zones to prevent transmissions and protect people in accessible areas around the antenna. Refer to the Help for details.

Accessing the Web Interface

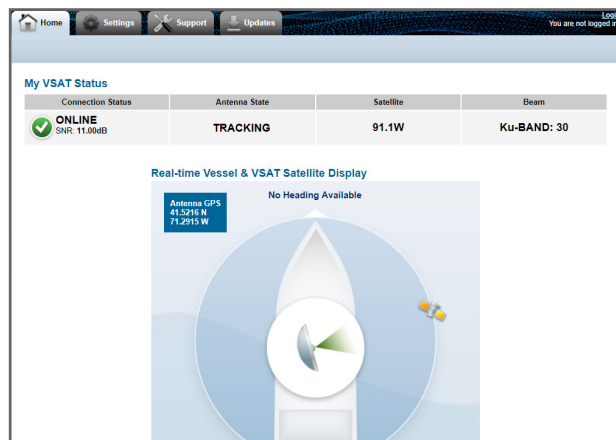

Connect your device to the ICM's User Ethernet 1 port. Then start your web browser and enter the ICM's IP address (default is 192.168.5.1).

At the web interface, you can check system status, update software, and configure the system.

For more details about updating the system software, refer to the system's Help.