

## External +5V Connection for DigiOne Board

**Step 1:** Remove the DC-DC Converter on the Top side of the PCB (as shown below figure-1)

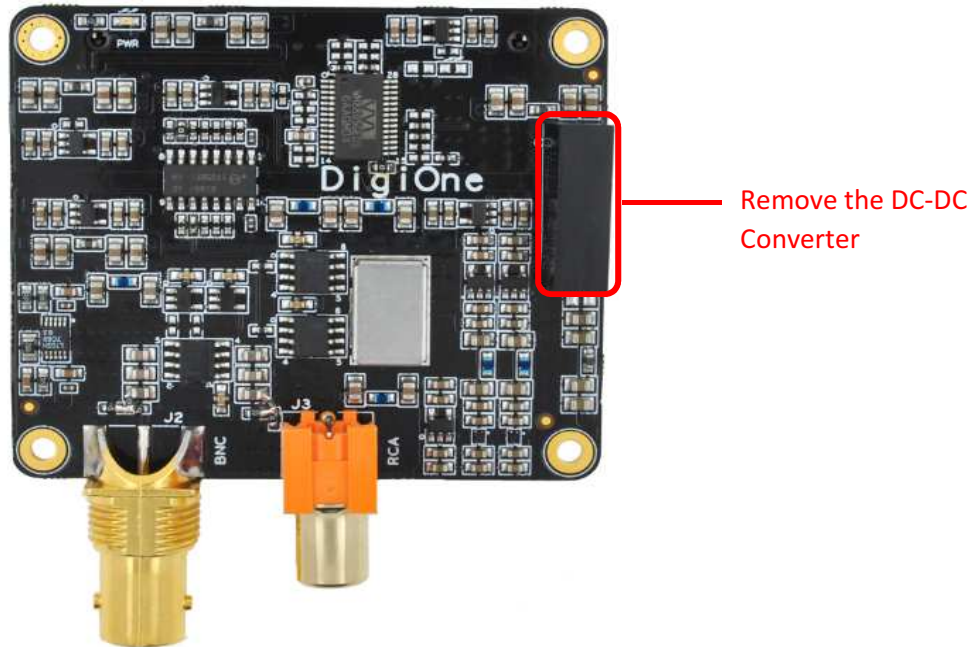


Figure -1

**Step 2:** To feed the +5V external on the Bottom side of the PCB (as shown below figure-2)

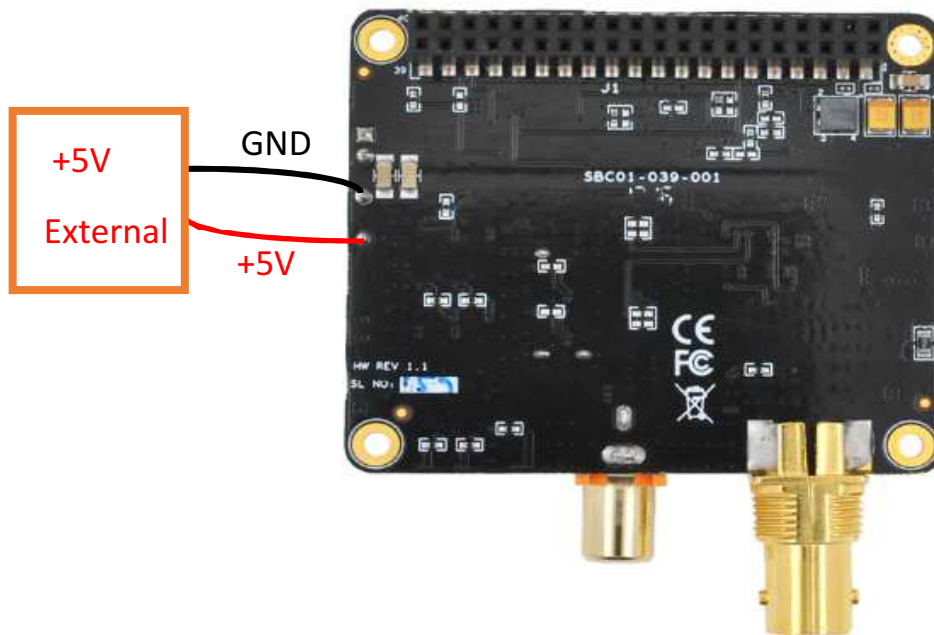


Figure -2