


e-CAM25_CUONX

Linux Application User Manual

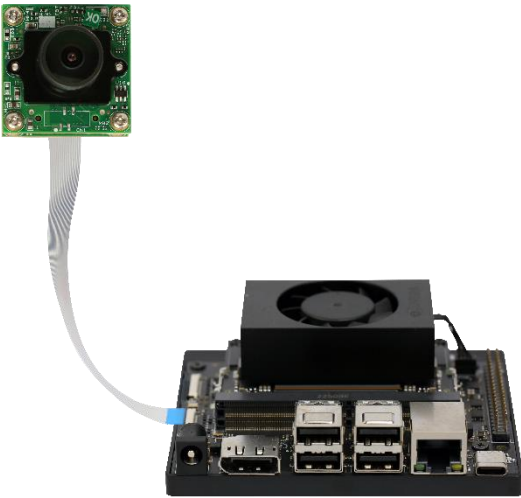

Version 1.3

e-con Systems

3/24/2025

Disclaimer

e-con Systems reserves the right to edit/modify this document without any prior intimation of whatsoever.

Contents

INTRODUCTION TO E-CAM25_CUONX	4
DESCRIPTION	4
LAUNCHING APPLICATION	6
APPLICATION FEATURES	9
IMAGE CONTROLS TAB	9
BRIGHTNESS	11
CONTRAST	11
SATURATION	11
WHITE BALANCE	11
GAMMA	12
GAIN	12
HORIZONTAL FLIP	12
VERTICAL FLIP	12
SHARPNESS	12
EXPOSURE	12
ROI WINDOW SIZE	14
EXTERNAL TRIGGER	15
STROBE	15
DENOISE	15
EXPOSURE COMPENSATION	16
VIDEO TAB	16
DEVICE SELECTION	16
FRAME RATE	16
VIDEO CAPTURE PROPERTIES	17
CAP. IMAGE (I) BUTTON	18
STILL IMAGE CAPTURE	18
STILL FILE PATH	19
ABOUT BUTTON	19
QUIT BUTTON	20
TROUBLESHOOTING	21
FAQ	22
WHAT'S NEXT?	23
GLOSSARY	24

Introduction to e-CAM25_CUONX

e-CAM25_CUONX is a new Mobile Industry Processor Interface (MIPI) camera board which helps to connect AR0234CS camera module to the Jetson Orin NX™/Orin Nano™ development kit launched by e-con Systems, a leading Embedded Product Design Services Company which specializes in advanced camera solutions. The prebuild driver for this camera along with the camera board is provided by e-con Systems.

e-con Systems provides a sample Video for Linux version 2 (V4L2) application, called `ecam_tk1_guvcview`, along with the e-CAM25_CUONX camera. `ecam_tk1_guvcview` is a V4L2 video viewer and capture software of the camera driver for Jetson Orin NX™/Orin Nano™ development kit. It is customized to demonstrate the features of e-CAM25_CUONX.

This document describes the usage of `ecam_tk1_guvcview` application, and the special features of `ecam_tk1_guvcview` application when it is used with e-CAM25_CUONX.

Description

e-CAM25_CUONX can stream the resolutions and frame rates as listed in below table.

Table 1: Supported Resolutions and Frame Rates in 2 Lane

S. NO	Resolution	Frame Rate (fps)
1	640 x 480	120
2	1280 x 720	120
3	1920 x 1080	65
4	1920 x 1200	60

Table 2: Supported Resolutions and Frame Rates in 4 Lane

S. NO	Resolution	Frame Rate (fps)
1	1280 x 720	120
2	1920 x 1080	70
3	1920 x 1200	60

Note:

- The frame rates listed in the above table can be achieved easily in manual exposure.
- In auto exposure, maximum frame rate could be achieved with maximum lighting.

The camera controls of e-CAM25_CUONX are as follows:

- Brightness
- Contrast
- Saturation
- White Balance (both manual and automatic modes)
- Gamma
- Gain
- Horizontal Flip
- Vertical Flip
- Sharpness
- Exposure (manual, full Field of View (FOV) auto and region of interest (ROI) based auto modes)
- ROI Window Size
- External Trigger
- Strobe
- Denoise
- Exposure Compensation

The e-CAM_TK1 guvcviewer or ecam_tk1_guvcview is a simple GTK+ interface for capturing and viewing video from the devices supported on the Jetson Orin NX™/Orin Nano™ development kit.

Using e-CAM_TK1 guvcviewer or ecam_tk1_guvcview application, you can perform the following:

- Enumerate and list all video devices connected.
- Display properties of video renderer.
- Change resolution and color space or compression for video stream if different resolutions are supported by the device.
- Display currently configured values of preview.
- Capture the still images and set the path where still images will be saved.
- Display the average frame rate.

All the above listed properties can be configured by attractive and easy to use Graphical User Interface (GUI).

Please refer to the *e-CAM25_CUONX_Release_Notes_Rev_<ver>.pdf* for the compatible Linux distribution version (L4T version).

Launching Application

This section describes how to launch the `ecam_tk1_guvcview` application.

The commands and output messages in this manual are represented by different colors as listed in below table.

Table 3: Notation of Colors

Color	Notation
Blue	Commands running in development kit
Red	Output message in development kit

The steps to launch the application are as follows:

1. Connect the e-CAM25_CUONX MIPI camera to the J21 connector for Jetson Orin NX™/Orin Nano™ development kit.
2. Power ON the Jetson Orin NX™/Orin Nano™ development kit.

The module drivers of e-CAM25_CUONX provided by e-con Systems will be loaded automatically during the board boot.

3. Run the following command to check whether the camera is initialized.

```
$ sudo dmesg | grep -i "ar0234"
```

The output message appears as shown below.

```
//For Jetson Orin NX and Jetson Orin Nano,  
subdev ar0234 10-0042 bound
```

The output message indicates that the camera is initialized properly.

4. Run the following command to check the presence of video node.

```
$ ls /dev/video*
```

The output message appears as shown below.

```
/dev/video*
```

where (*) denotes the number of cameras connected to the Jetson™ Orin NX™/Orin Nano™ development kit.

Note: Only one camera node will be created for Jetson Orin Nx™/Orin Nano™ development kit since CAM1 port on the Jetson Orin Nano™ development kit supported for 4-lane configuration whereas both camera nodes will be created in 2-lane configuration.

Please refer to the e-

CAM_TK1_GUVCView_Build_and_Install_Guide_Rev_<ver>.pdf to install the application in the Linux system.

5. Run the following commands to check and set the power mode to maximum for better performance.

```
$ sudo nvpmode1 -q  
$ sudo nvpmode1 -m 0
```

6. Run the following Jetson clocks command to achieve maximum frame rate before launching the ecam_tk1_guvcview application in the Jetson Orin NX™/Jetson Orin Nano™ development kit.

```
$ sudo jetson_clocks
```

7. Run the following command to launch the ecam_tk1_guvcview application.

```
$ /usr/local/ecam_tk1/bin/ecam_tk1_guvcview --  
device=/dev/video<X>
```

Note: Replace *X* in `/dev/video<X>` with appropriate number to stream from respective camera for Jetson Orin™ development kit. When entering the command in terminal, the screen appears as shown below.

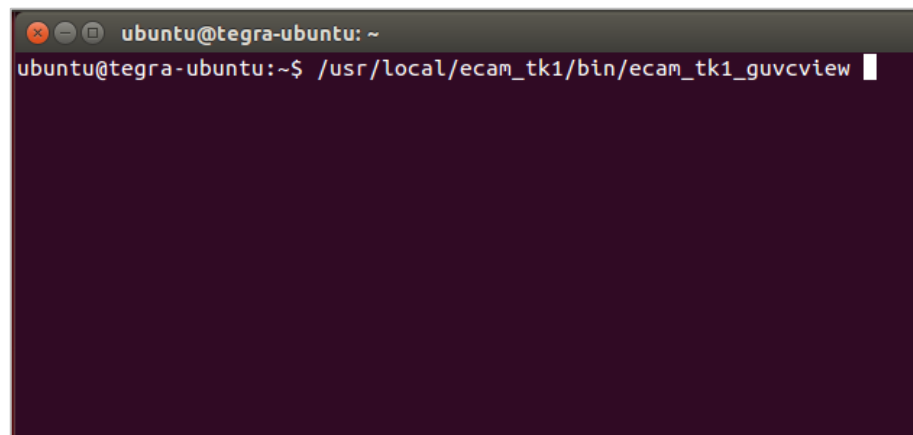


Figure 1: Terminal Window

Once the application is launched, you can view the screen similar to the screen shown below.

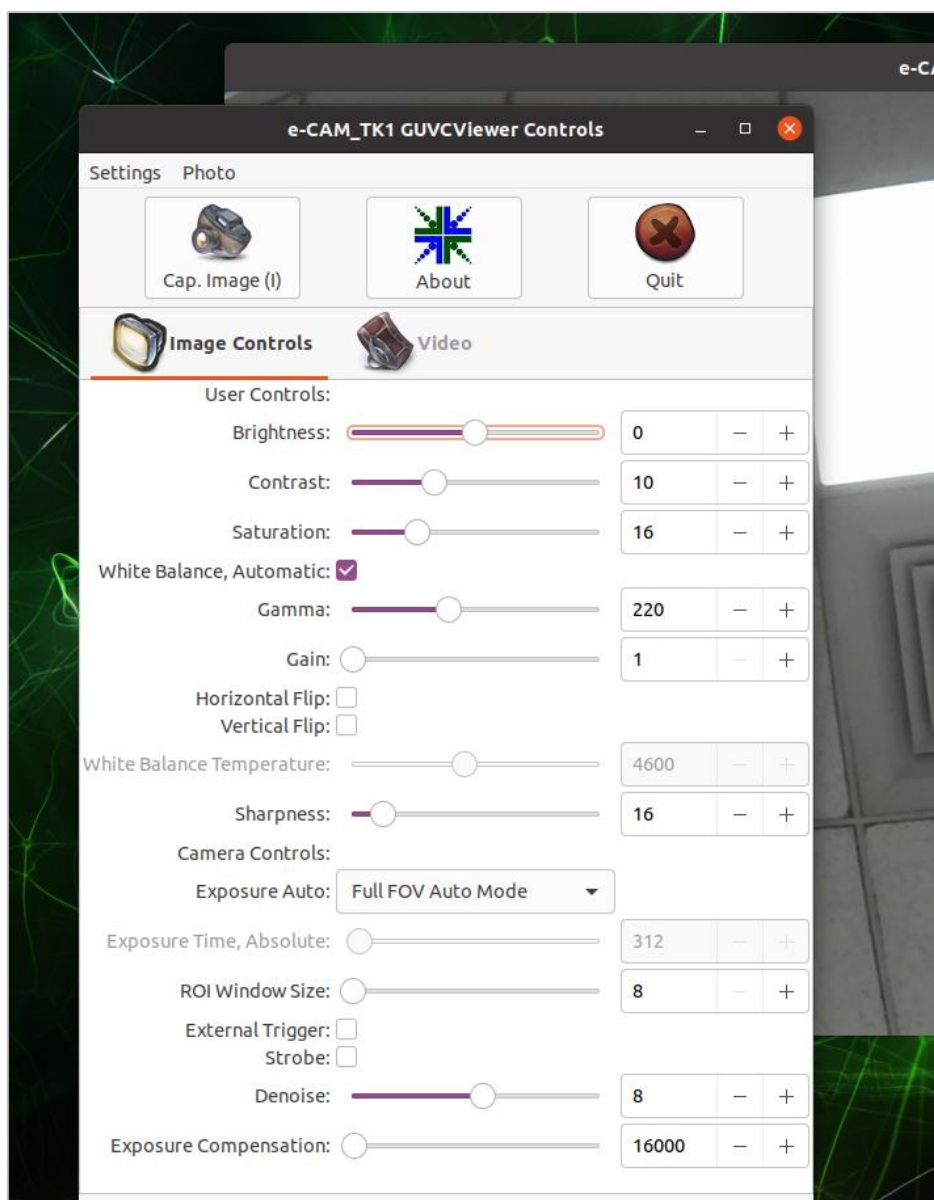


Figure 2: Initial Window Appearance

Application Features

This section describes the controls that are supported in the current version of ecam_tk1_guvview application for e-CAM25_CUONX.

The controls supported in ecam_tk1_guvview application are as follows:

- [Image Controls Tab](#)
- [Video Tab](#)
- [Cap. Image \(I\) Button](#)
- [About Button](#)
- [Quit Button](#)

Image Controls Tab

When selecting the **Image Controls** tab, you can view the available controls as shown below.

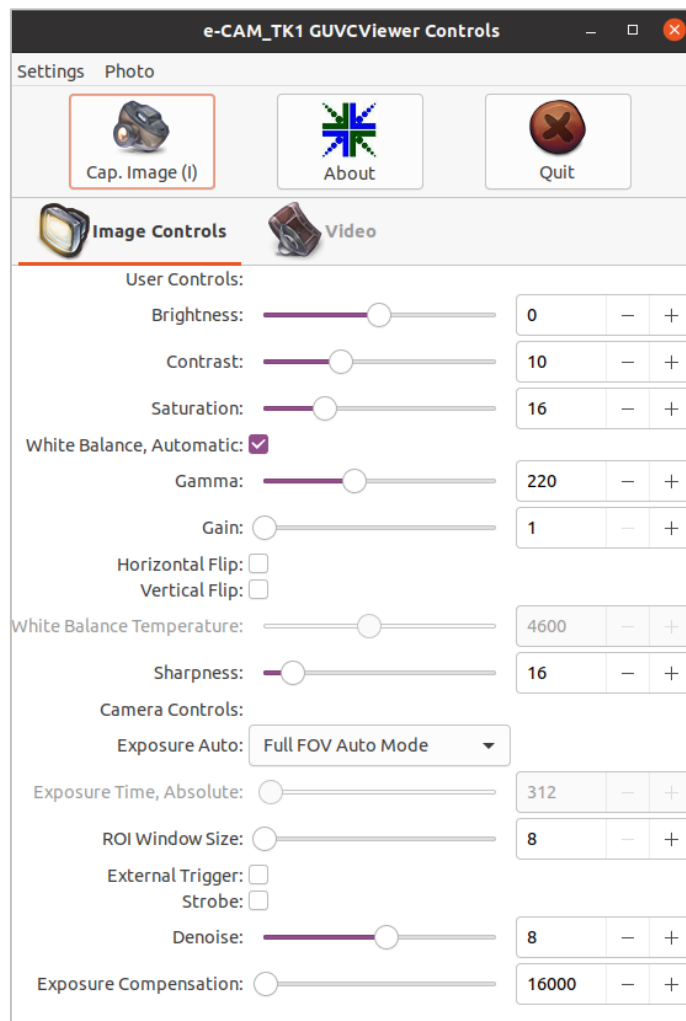


Figure 3: Image Controls Tab

The controls available in **Image Controls** tab are as follows:

- [Brightness](#)
- [Contrast](#)
- [Saturation](#)
- [White Balance](#)
- [Gamma](#)
- [Gain](#)
- [Horizontal Flip](#)
- [Vertical Flip](#)
- [Sharpness](#)
- [Exposure](#)
- [ROI Window Size](#)
- [External Trigger](#)
- [Strobe](#)
- [Denoise](#)
- [Exposure Compensation](#)

You can move the slider and configure the preview settings according to your needs. The sliders whose labels are not greyed can only be configured. The value being set will be displayed in the text box based on the position of the slider. As soon as the slider is moved to configure the values, the preview property will change at that instance.

The values of e-CAM25_CUONX controls are listed in below table.

Table 4: Values of e-CAM25_CUONX Controls

Controls	Minimum Value	Maximum Value	Default Value	Manual Control	Auto Control
Brightness	-15	15	0	YES	NO
Contrast	0	30	10	YES	NO
Saturation	0	60	16	YES	NO
White Balance	10	10000	4600	YES	YES
Gamma	40	500	220	YES	NO
Gain	1	40	1	YES	NO
Horizontal Flip	0	1	0	YES	NO
Vertical Flip	0	1	0	YES	NO
Sharpness	0	127	16	YES	NO
Exposure	1 (100 μ s)	10000(1s)	312 (31.2 ms)	YES	YES
ROI Window Size	8	64	8	YES	NO
External Trigger	0	1	0	YES	NO
Strobe	0	1	0	YES	NO
Denoise	0	15	8	YES	NO
Exposure Compensation	8000	1000000	16000	YES	NO

Brightness

The brightness values can be changed from a minimum value of -15 to 15 by moving the slider, and the exact changes will be reflected immediately in the preview. This brightness control increases the low light performance of e-CAM25_CUONX. The default value is 0.

Contrast

The contrast values can be changed from a minimum value of 0 to 30 by moving the slider, and the exact changes will be reflected immediately in the preview. Increasing the contrast value increases the luminance of e-CAM25_CUONX. The default value is 10.

Saturation

The saturation values can be changed from a minimum value of 0 to 60 by moving the slider, and the exact changes will be reflected immediately in the preview. Increasing the saturation value increases the intensity of the color of e-CAM25_CUONX. The default value is 16.

White Balance

The manual white balance can be selected by deselecting the **White Balance, Automatic** check box as shown below.

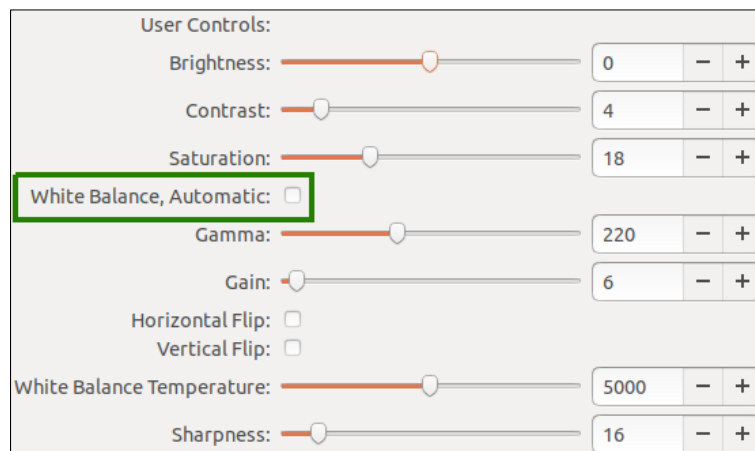


Figure 4: Manual White Balance

The manual white balance values can be changed from a minimum value of 10 to 10000 by moving the slider of White Balance Temperature control, and the exact changes will be reflected immediately in the preview. By default, the camera is in manual mode, and the default value is 4600.

The automatic white balance can be selected by selecting the **White Balance, Automatic** check box as shown below.

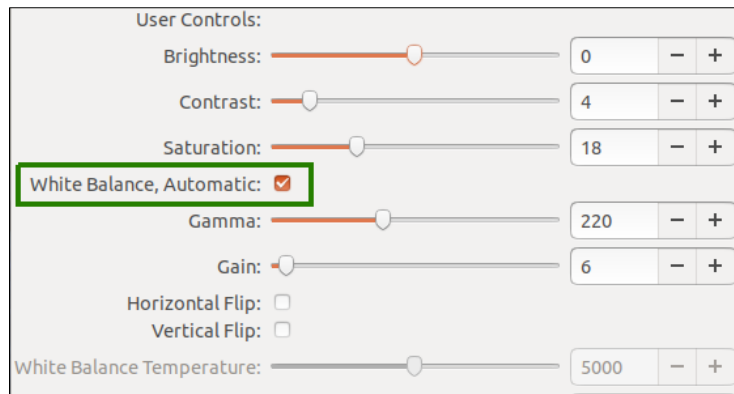


Figure 5: Automatic White Balance

The White Balance Temperature control will be greyed when selecting the **White Balance, Automatic** check box.

Gamma

The gamma values can be changed from a minimum value of 40 to 500 by moving the slider, and the exact changes will be reflected immediately in the preview. The default value is 220.

Gain

The gain values can be changed from a minimum value of 1 to 40 by moving the slider. The changes are updated in the preview only when exposure control is set to manual mode. The default value is 1.

Horizontal Flip

The preview from the sensor can be horizontally flipped by selecting the **Horizontal Flip** check box. By default, this control is deselected.

Vertical Flip

The preview from the sensor can be vertically flipped by selecting the **Vertical Flip** check box. By default, this control is deselected.

Sharpness

The sharpness values can be changed from a minimum value of 0 to 127 by moving the slider, and the exact changes will be reflected immediately in the preview. This sharpness control increases the clarity of e-CAM25_CUONX. The default value is 16.

Exposure

e-CAM25_CUONX supports manual, full FOV auto and ROI based auto mode which can be controlled using the slider of Exposure Time, Absolute control of the **Image Controls** tab of ecam_tk1_guvcview. The default mode of exposure control is manual mode. When the exposure time is changed, the frame rate will vary accordingly.

To use the slider of Exposure Time, Absolute control, you must select the **Manual Mode** from the **Exposure Auto** drop-down list box. You can view the screen similar to the screen shown below.

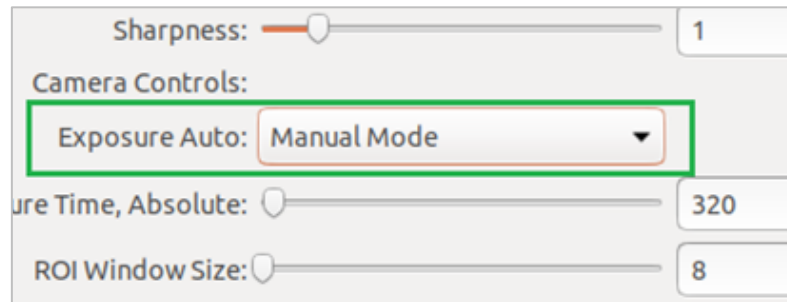


Figure 6: Manual Mode

The exposure value could be manually changed by moving the slider. e-CAM25_CUONX supports exposure values ranging from 100 μ s to 1 s which is represented as 1 to 10000 in the slider. The exposure values are configured inside the CMOS image sensor based on the sensor configuration and clock configuration details. The default manual exposure value will be 312 that is 31.2 ms.

To obtain a good low light performance, it is essential to change the exposure according to the change in lighting conditions. To support this feature, e-CAM25_CUONX has a full FOV auto mode, by which the exposure of the camera will be changed according to the lighting conditions giving the best low light performance.

When you select the **Full FOV Auto Mode** from the **Exposure Auto** drop-down list box, you can view the screen similar to the screen shown below.

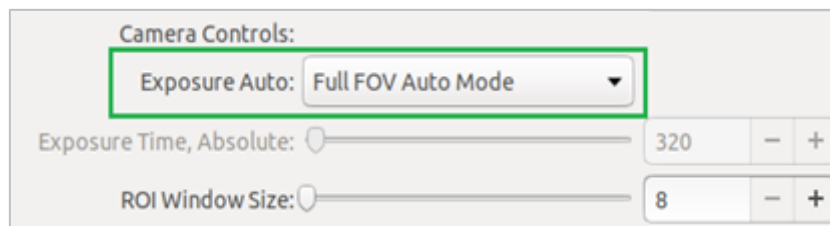


Figure 7: Full FOV Auto Mode

The exposure value applied in the sensor in ms is 1/10 of the set value as listed in below table.

Table 5: Exposure Value-Exposure Time Mapping

Exposure Value	Exposure Time
1	0.1 ms
2	0.2 ms
3	0.3 ms
..	..
10	1 ms
11	1.1 ms

12	1.2 ms
..	..
100	10 ms
..	..
1000	100 ms
..	..
10000	1s

Note:

- When the exposure time period is more than the time period of camera frame, the frame rate will drop.
- Controls are global across all resolutions and formats, and hence changing the control values will reflect the changes in both the formats and resolutions.

When you select the **ROI Based Auto Mode** from the **Exposure Auto** drop-down list box, you can view the screen similar to the screen shown below.

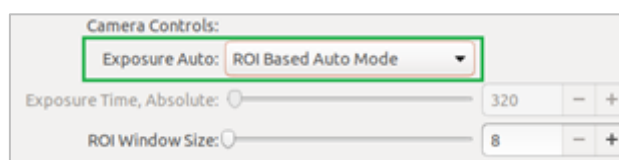


Figure 8: ROI Based Auto Mode

In ROI Based Auto Mode, you can select the ROI and at that region, the exposure value will be applied to the entire frame. You can select the required window size using the slider of ROI window size control. Click the required region on the preview window of the application and based on that region, the exposure will be applied to the entire frame.

The exposure of the image can be varied based on targeted object in the FOV. By selecting the ROI Based Auto Mode, you can also select the target object area of the frame in guvcviewer display area. The exposure algorithm will calculate the automatic exposure adjustment for the selected display area. The ROI region can be adjusted by increasing/decreasing the slider of ROI window size control.

ROI Window Size

You can change the ROI window size, by moving the slider of ROI window size control. The default size is 8.

For window size 64, the entire frame will be the ROI. If this region exceeds or falls below the frame boundary, the ROI will be clipped automatically.

For 1280 x 720 frame size, the ROI based on the window size is shown in below table.

Table 6: Window Size - ROI Region

Window Size	ROI Region
8	1/8 (160 x 90)
16	2/8 (320 x 180)
24	3/8 (480 x 270)
32	4/8 (640 x 360)
40	5/8 (800 x 450)
48	6/8 (960 x 540)
56	7/8 (1120 x 630)
64	1 (1280 x 720)

External Trigger

The external sensor trigger can be enabled by selecting the **External Trigger** check box. When external trigger is enabled, there won't be any preview until external trigger is applied to the CN3 connector of ACC-RB-WTB-ADB board. By default, this control is deselected.



Figure 9: Selecting External Trigger

Note: Refer the e-
CAM25_CUONX_Trigger_and_Strobe_Mode_Application_Note_Rev_<ver>.pdf for connections and pin description details.

Strobe

The strobe control can be enabled by selecting the **Strobe** check box. By default, this control is deselected.

The strobe signal can be read from the CN3 connector of ACC-RB-WTB-ADB board.



Figure 10: Selecting Strobe

Note: Refer the e-
CAM25_CUONX_Trigger_and_Strobe_Mode_Application_Note_Rev_<ver>.pdf for connections and pin description details.

Denoise

The denoise control is used to remove pixel noise from the preview. This control value can be changed from a minimum value of 0 to 15 by moving the slider. The default value is 8.

Exposure Compensation

The exposure compensation control adjusts the upper limit of auto exposure. The value can be changed from a minimum value of 8000 μ s to 1000000 μ s by moving the slider. The default value is 16000 μ s.

Video Tab

On selecting the **Video** tab, the video renderer properties will be displayed. You can adjust the video preview settings in the **Video** tab. The features supported in **Video** tab are as follows:

- [Device Selection](#)
- [Frame Rate](#)
- [Video Capture Properties](#)

Device Selection

When you click the **Device** drop-down list box, you can view the connected device as shown below.

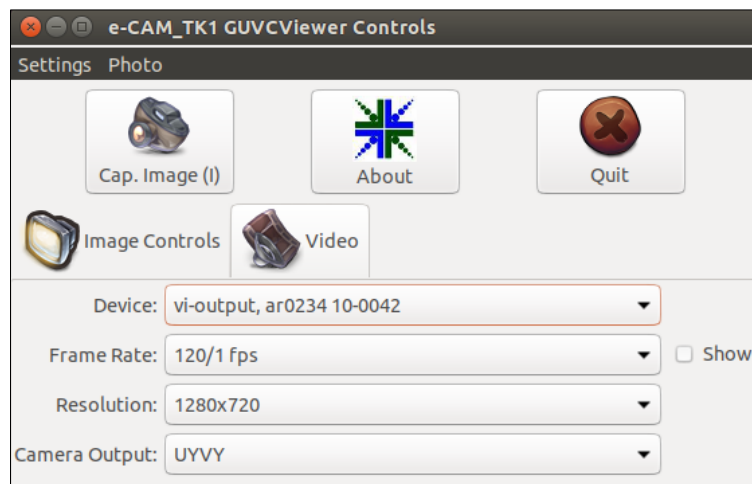


Figure 11: Device Connected

Frame Rate

The frame rate of the preview can be viewed by selecting the **Show** check box in the **Video** tab. Before selecting the **Show** check box, you can view the screen similar to the screen shown below.

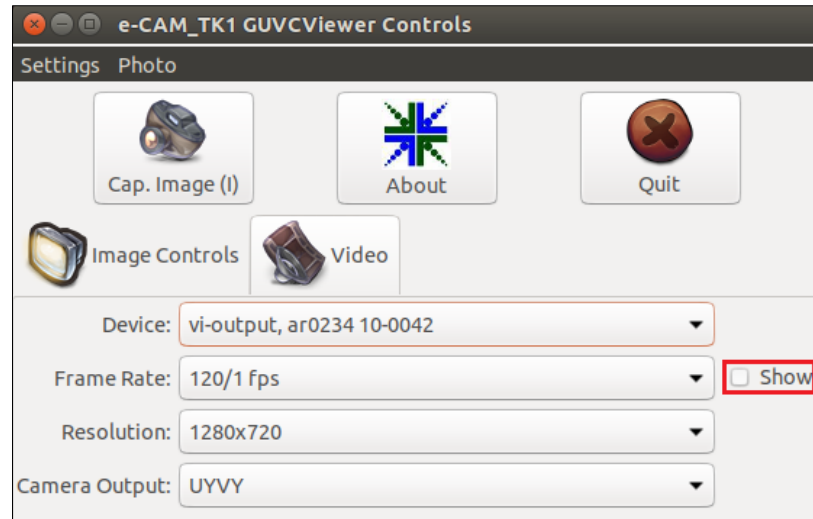


Figure 12: Selecting Show to Display Frame Rate

After selecting the **Show** check box, the frame rate will be displayed in the top of the preview window as shown below.

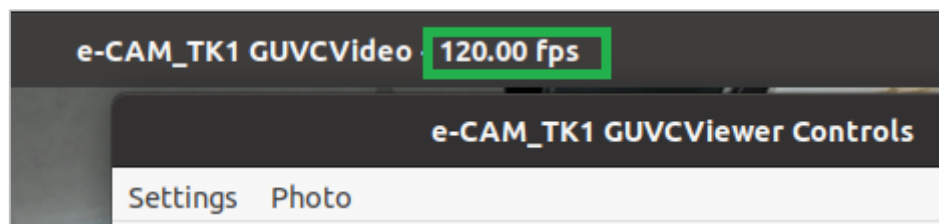


Figure 13: Displaying Frame Rate in Preview Window

Note: The frame rate will be affected by various environmental parameters.

Video Capture Properties

You can configure the output size (resolution) of stream format. Currently e-CAM25_CUONX supports UYVY output format. In UYVY format, five resolutions are supported. When you click the **Resolution** drop-down list box, you can view the supported resolutions as shown below.

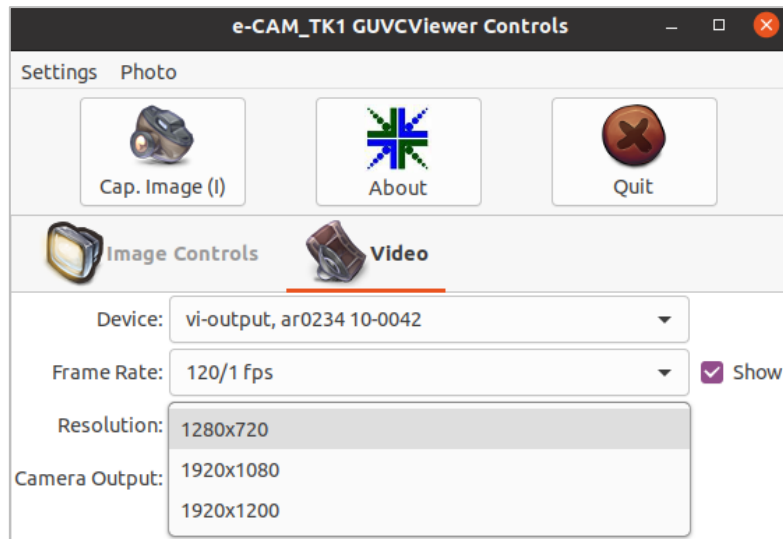


Figure 14: Supported Video Resolutions

The supported resolutions in UYVY format are listed in below table.

Table 7: Supported Resolutions and Frame Rates in 2 Lane

S. NO	Resolution	Frame Rate (fps)
1	640 x 480	120
2	1280 x 720	120
3	1920 x 1080	65
4	1920 x 1200	60

Table 8: Supported Resolutions and Frame Rates in 4 Lane

S. NO	Resolution	Frame Rate (fps)
1	1280 x 720	120
2	1920 x 1080	70
3	1920 x 1200	60

Cap. Image (I) Button

The **Cap. Image (I)** button allows you to capture the still image of the selected device in the **Device** drop-down list box and select the path to store the image. The features supported in **Cap. Image (I)** button are as follows:

- [Still Image Capture](#)
- [Still File Path](#)

Still Image Capture

You can click the **Cap. Image (I)** button in the top of the control panel to capture the still image. You can view the screen similar to the screen shown below.

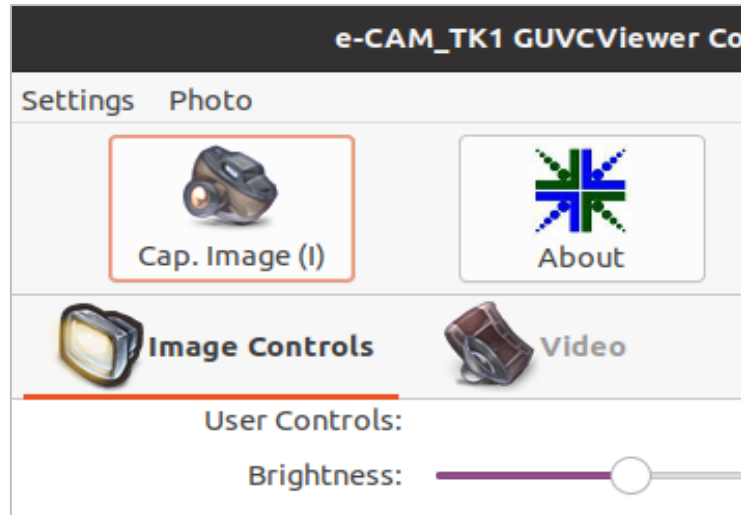


Figure 15: Capture Still Image

By default, the image will be saved in the home directory. You can configure the folder to save the images. The default name for captured image file is `guvview_image.jpg`.

Note: To capture an image of another resolution, you must switch the preview to that resolution. Unlike Windows, the Linux kernel does not support cross resolution images.

Still File Path

To create a folder for saving the captured images, click **Photo > File** as shown below.

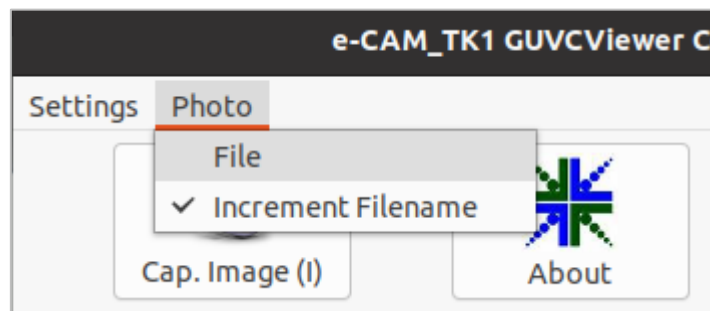


Figure 16: Save File Dialog Box to set Still Image Folder

A **Save File** dialog box will appear for selecting the file format to save the captured image. You can also browse to the required directory and set the file name, so that the captured images will also be saved in that folder.

About Button

When you click the **About** button, you can view the details of e-CAM_TK1 GUVViewer application as shown below.

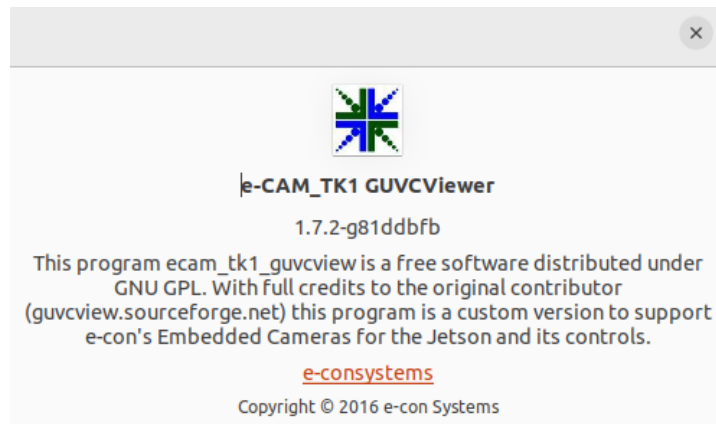


Figure 17: About e-CAM_TK1 GUVViewer

Quit Button

When you click the **Quit** button, you can exit the e-CAM_TK1 GUVViewer application.

Troubleshooting

In this section, you can view the list of commonly occurring issues and their troubleshooting steps.

In lower exposure value, setting a higher gain value causes a blue noise in higher resolutions.

This is a known issue. You need to either reduce the gain value or increase the exposure value to recover from this issue.

How to recover if black screen appears in ecamTk1_guvcview camera window?

This is a known issue. If this issue occurs, it will auto recover in few seconds and if still not able to recover in few seconds, please restart the application.

Opening more than one instance of ecamTk1_guvcview causes frame drops.

This is a known issue. Opening more than one instance of the ecamTk1_guvcview application at the same time could result in reduced frame rate and reduced system performance.

FAQ

1. How can I get the updated package?

Please login to the [Developer Resources](#) website and download the latest release package.

What's Next?

After understanding the usage of `ecam_tk1_guvview` application, you can refer to the following documents to understand more about e-CAM25_CUONX.

- *e-CAM_TK1-GUVCView Build and Install Guide*
- *e-CAM25_CUONX Release Notes*

Glossary

API: Application Program Interface.

CMOS: Complementary Metal Oxide Semiconductor.

FOV: Field of View.

GIMP: GNU Image Manipulation Program.

GNU: GNU's Not Unix.

GTK: GIMP Toolkit.

GUI: Graphical User Interface.

L4T: Linux for Tegra.

MIPI: Mobile Industry Processor Interface.

ROI: Region of Interest.

UYVY: YUV422 16-bit image format with UYVY ordering.

V4L2: Video for Linux version 2 is a collection of device drivers and API for supporting real-time video capture on Linux systems.

Contact Us

If you need any support on e-CAM25_CUONX product, please contact us using the Live Chat option available on our website - <https://www.e-consystems.com/>

Creating a Ticket

If you need to create a ticket for any type of issue, please visit the ticketing page on our website - <https://www.e-consystems.com/create-ticket.asp>

RMA

To know about our Return Material Authorization (RMA) policy, please visit the RMA Policy page on our website - <https://www.e-consystems.com/RMA-Policy.asp>

General Product Warranty Terms

To know about our General Product Warranty Terms, please visit the General Warranty Terms page on our website - <https://www.e-consystems.com/warranty.asp>

Revision History

Rev	Date	Description	Author
1.0	18-Apr-2023	Initial draft	Camera Dev Team
1.1	10-Nov-2023	Updated to L4T35.4.1 and supported 2 lane configuration	Camera Dev Team
1.2	24-Feb-2025	Updated the Application version	Camera Dev Team
1.3	24-Mar-2025	The mode 320 x 240 Is removed	Camera Dev Team