







## 54. X-axis belt assembly

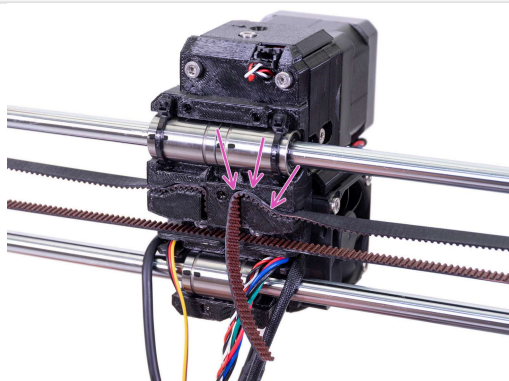

-  Before you continue to guide the belt through the X-axis, please release two M3 screws on the X-end until they detach from the motor. It must be possible to move the motor freely to the sides.
-  Rotate the X-axis motor as indicated towards the frame.
-  Insert the flat part of the X-GT2 belt into the X-carriage as in the second picture.
-  Use a screwdriver or the smallest Allen key to push the belt in.
-  There will be belt overhang on this side, **DON'T TRIM IT** yet.



Next →

