








## 17. Preparing Y-motor-holder

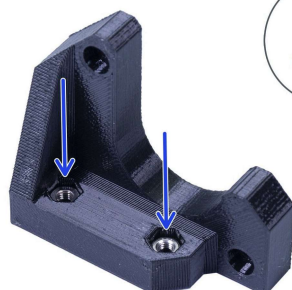

-  Take the Y-motor-holder and insert two M3n nuts.
-  In case you can't press the nuts in, don't use excessive force. Use an M3 screw from the other side and tighten it.
-  Place the Y-motor-holder on the motor, ensure the correct orientation as in the picture (use the motor cable).
-  Using two M3x10 screws tighten holder and motor together.



Next →

