




## 52. X-axis belt assembly

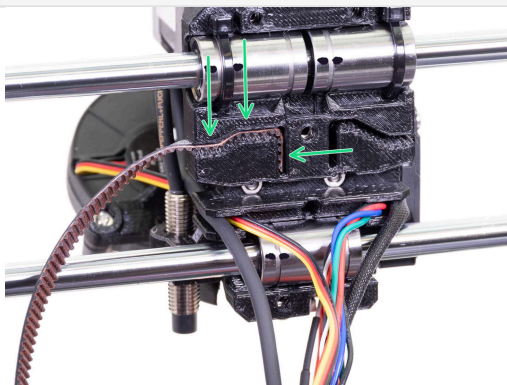

Insert the flat part of the X-axis belt into the X-carriage as in the picture.



Use a screwdriver or the smallest Allen key to push the belt in.



Next →

