







## 53. X-axis belt assembly



-  Guide the X-axis belt through the X-end-idler, around the 623h bearing with the housing and back.
-  Continue with the belt through the X-carriage.
-  Guide the X-axis belt through the X-end-motor, around the GT2-16 pulley and back.

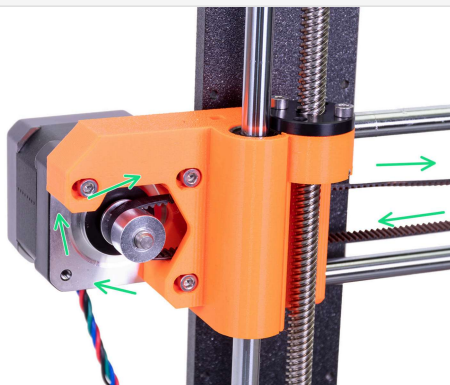

Next →

