









6. X-axis: trapezoidal nuts (part 2)

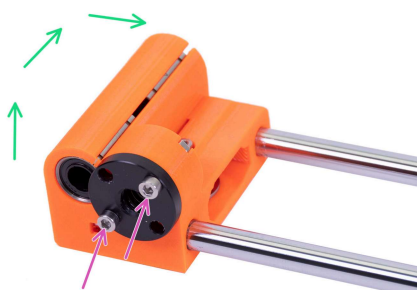

-  Carefully rotate the X-axis onto its backside.
-  Insert the trapezoidal nuts to each X-end.
-  **Note the correct orientation of the trapezoidal motor nuts!**
-  Tighten the nuts with M3x18 screws.
-  You can use any of all four holes on the trapezoidal nuts.



Next →

