

## SETUP and first steps in the delta3 | app

### Starting the app

- Start by clicking on the "delta3App"




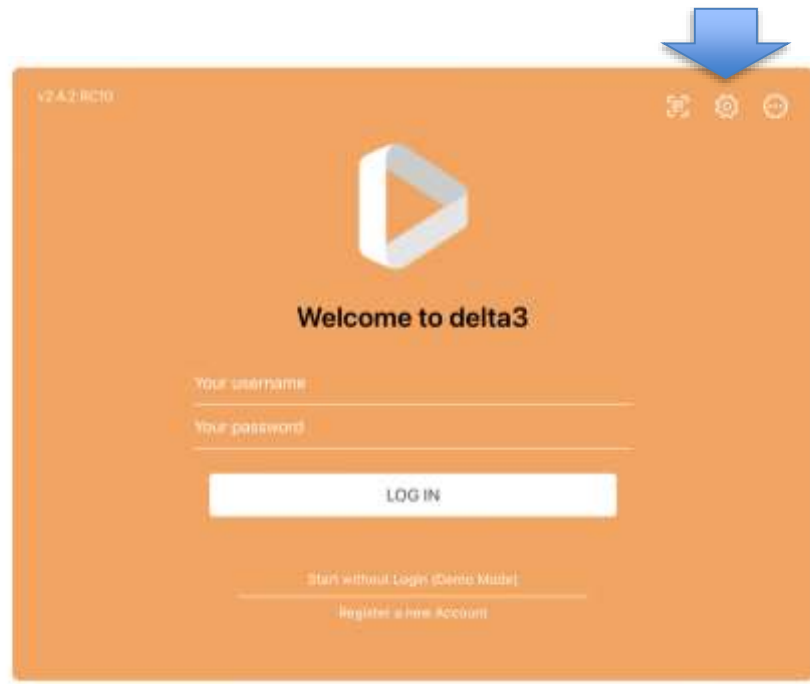
- The following login and setup page appears



- the app can be started immediately in demo mode by clicking on "Start without Login (Demo Mode)".

## App configuration


- Before registering or logging in for the first time, the server settings must be adjusted
- By clicking on the symbol  at the upper right edge the app can be configured manually



- To configure the app, the fields "API Host", "Cloud Host" and "MQTT Host" have to be customized individually

## Individual configuration for API-Host, Cloud-Host, MQTT-Host

- at 3: <https://thowl.delta3.io>
- at 5: <https://thowl-cloud.delta3.io>
- at 6: [thowl-mqtt.delta3.io](https://thowl-mqtt.delta3.io)

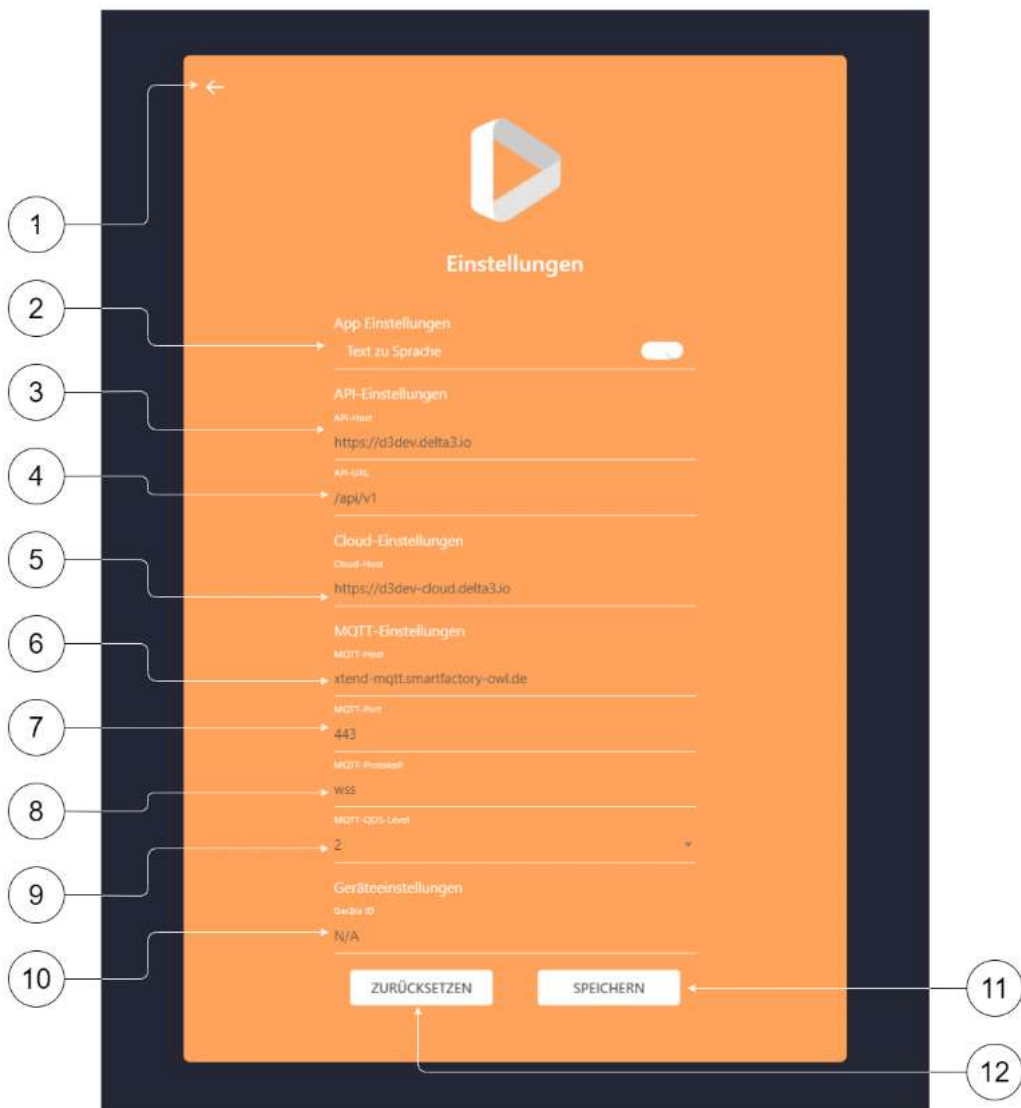

**Einstellungen**

App Einstellungen  
Text zu Sprache ☐

API-Einstellungen  
API-Host  
<https://d3dev.delta3.io>  
API-URL  
</api/v1>

Cloud-Einstellungen  
Cloud-Host  
<https://d3dev-cloud.delta3.io>

MQTT-Einstellungen  
MQTT-Host  
<xtend-mqtt.smartfactory-owl.de>  
MQTT-Port  
443  
MQTT-Protocol  
WSS  
MQTT-QoS-Level  
2

Geräteinstellungen  
Device ID  
N/A

ZURÜCKSETZEN SPEICHERN

## Personal login in the app

**Important:** registration is necessary before the first login (see instructions "First Steps Device Registration App").

- Entering user name and password



- Logging on to the system by clicking on "LOG IN"