

GTA group

WaterMe
Use-Case Specification:
Change Settings

Version 1.1

Revision History

Date	Version	Description	Author
27/Okt/16	1.0		Chris Todt Paul Giesa
01/Nov716	1.1		Olga Akymenko Chris Todt Paul Giesa

Table of Contents

[Use-Case Name](#)

[Brief Description](#)

[Mockup](#)

[Flow of Events](#)

[Basic Flow](#)

[Alternative Flows](#)

[Enable notifications](#)

[Enable sounds](#)

[Enable LEDs](#)

[Special Requirements](#)

[n/a](#)

[Preconditions](#)

[Main screen](#)

[Postconditions](#)

[Changed buttons](#)

[Extension Points](#)


Use-Case Specification: Change Settings

1. Use-Case Name

1.1 Brief Description


In “Settings” you can activate/deactivate notifications, sounds, LEDs and change WLAN settings for the Pi.

1.2 Mockup

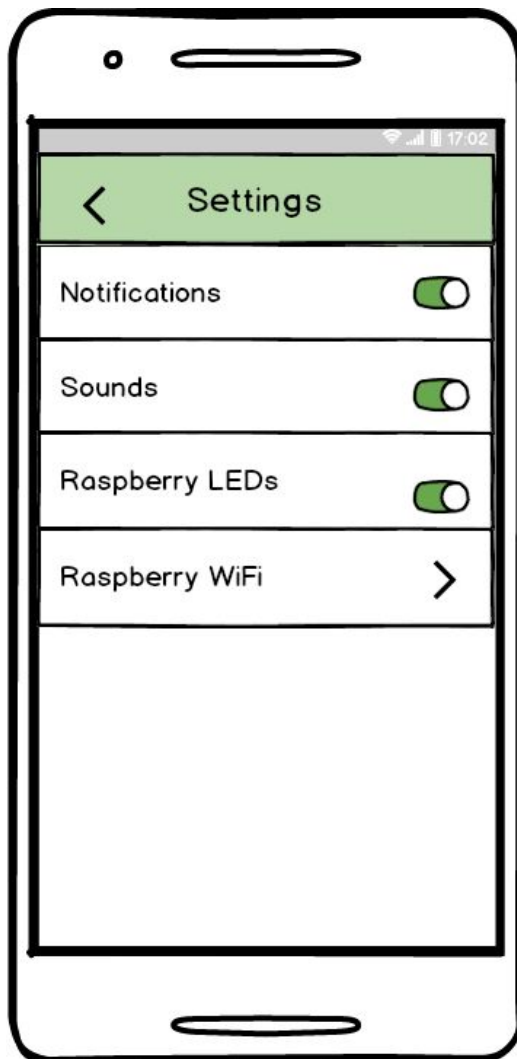


2. Flow of Events

2.1 Basic Flow

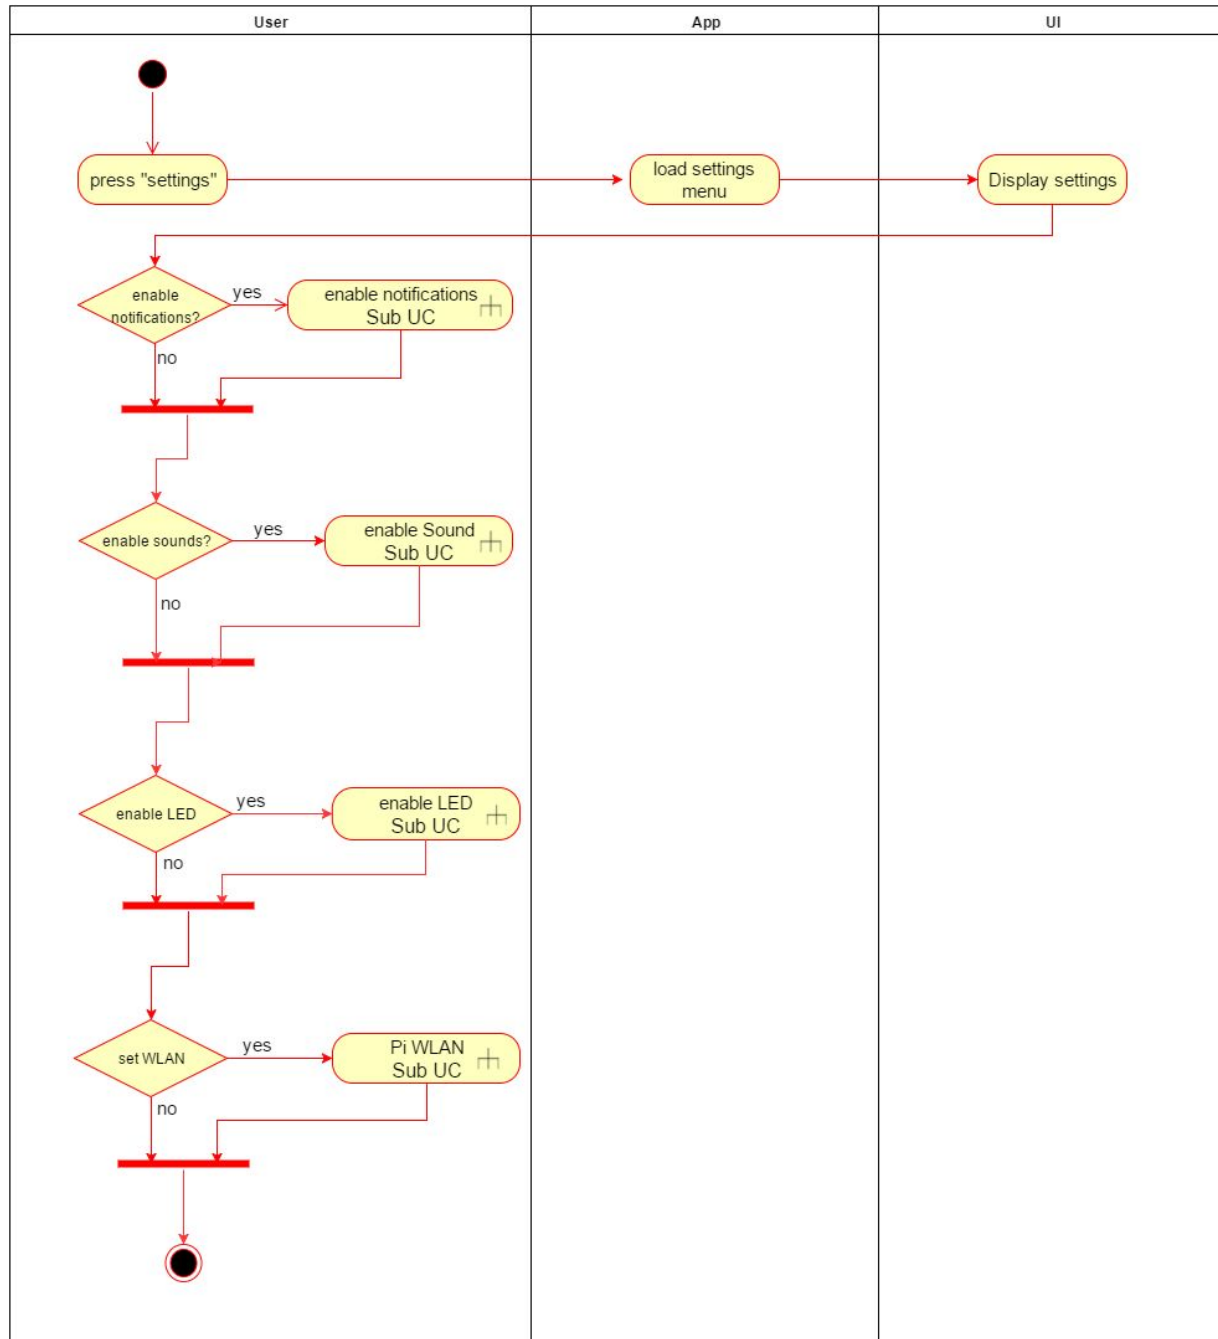


2.2 Alternative Flows


2.2.1 Enable notifications

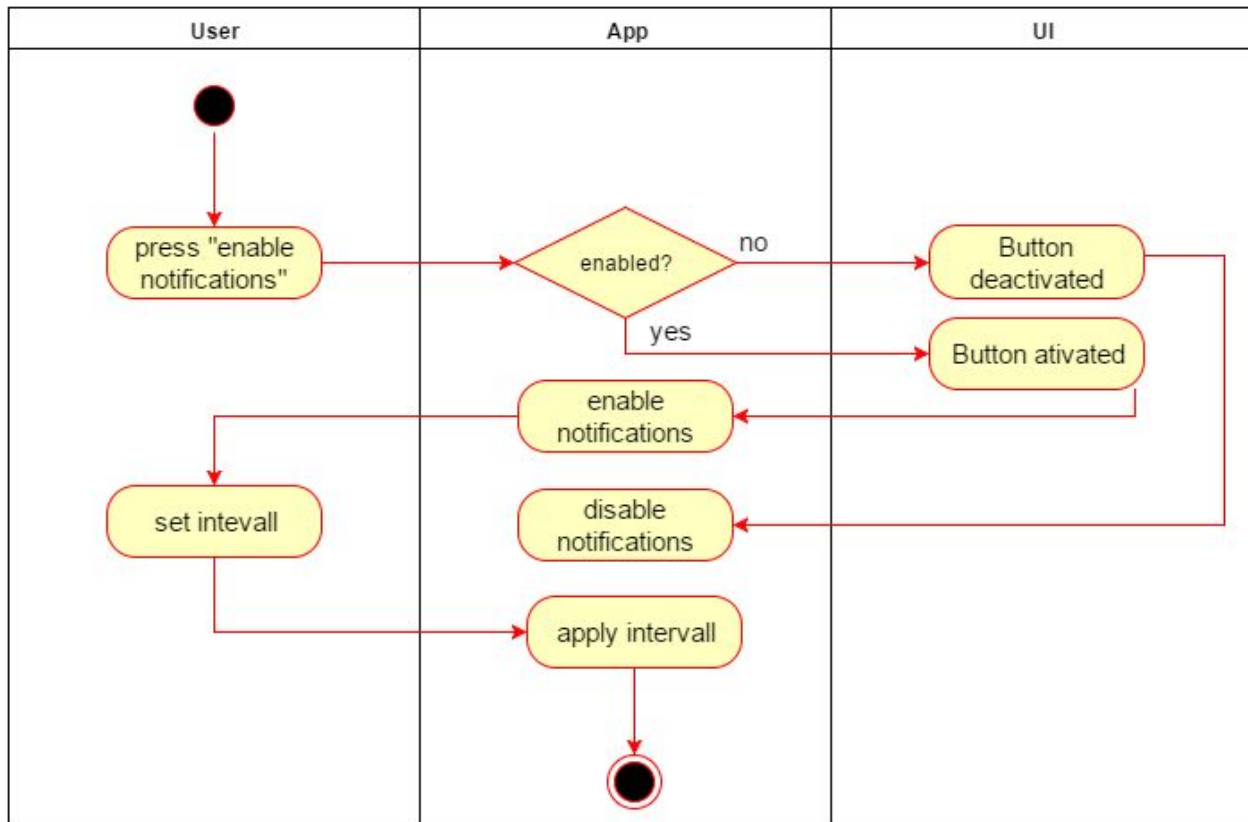


2.2.2 Enable sounds

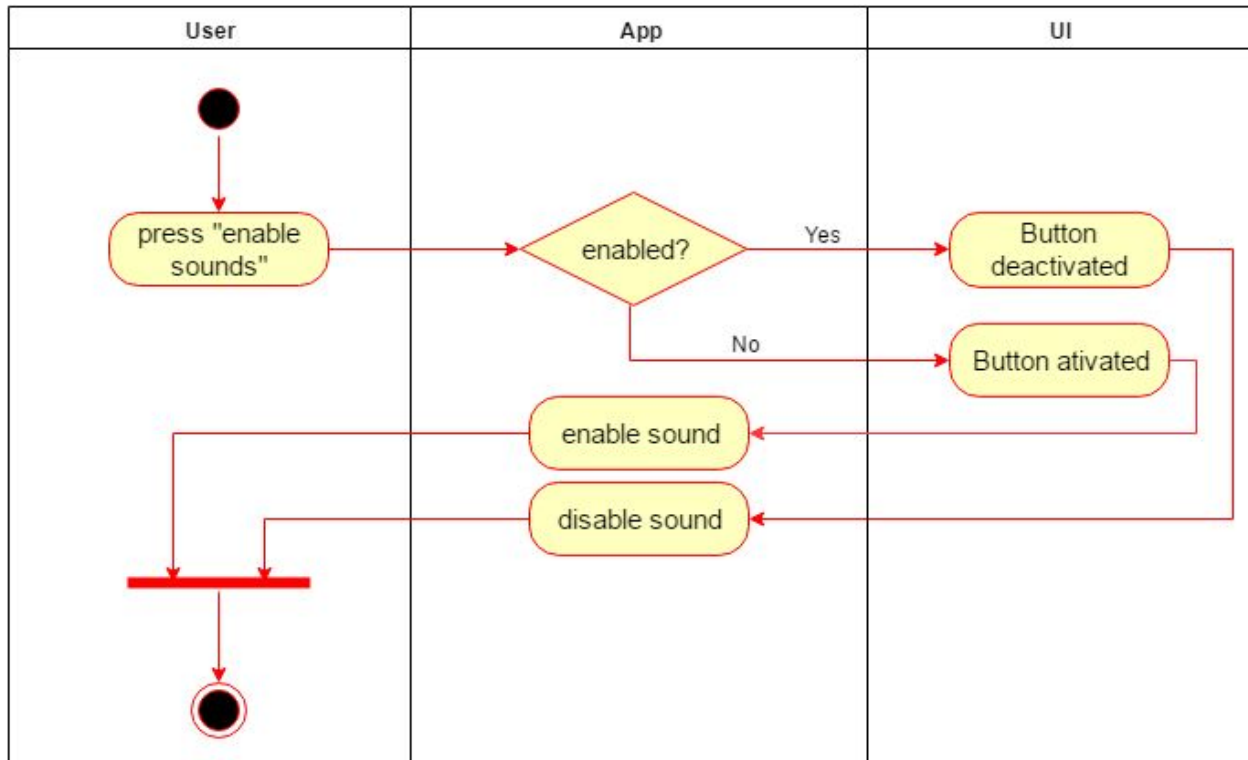

2.2.3 *Enable LEDs*

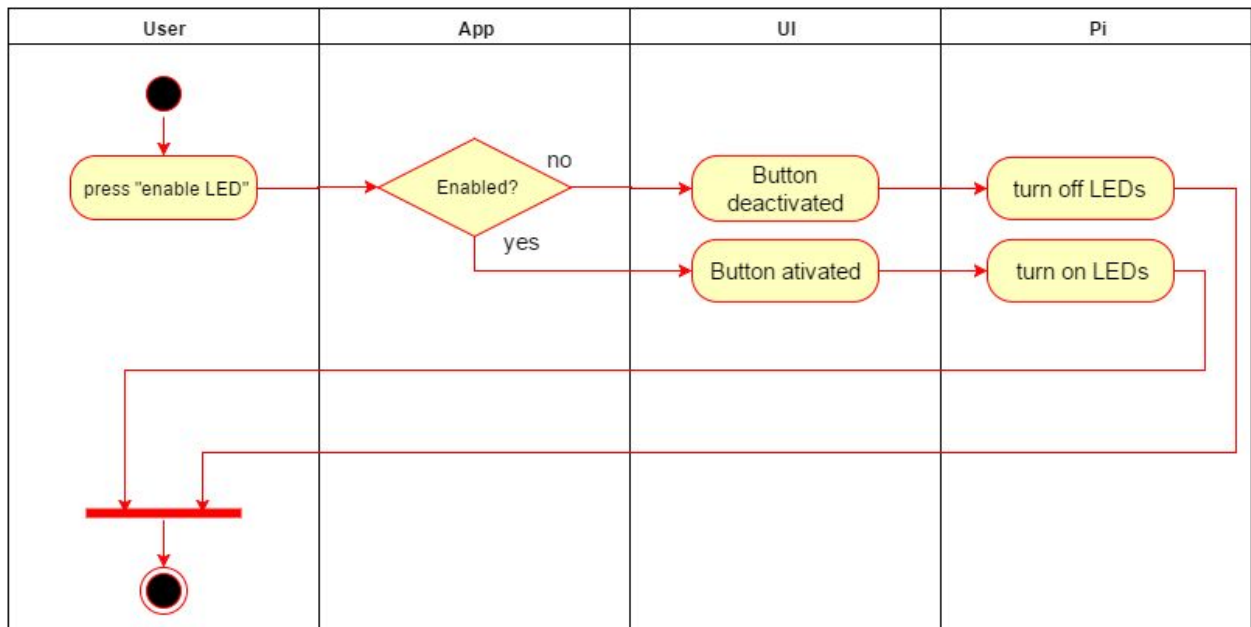

2.2.4 Set WLAN

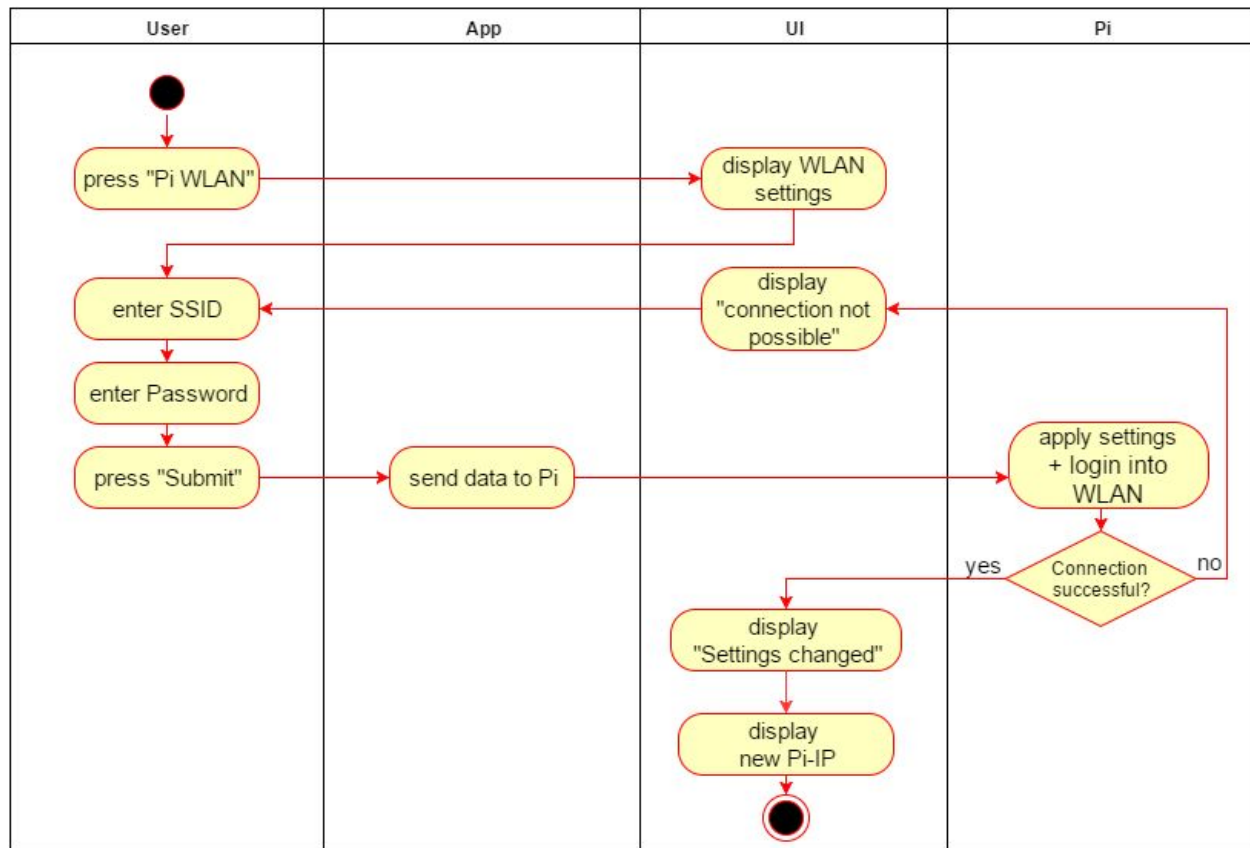

3. Special Requirements

n/a

4. Preconditions

4.1 Main screen

The user has to be in the main screen to be able to access the settings

5. Postconditions

5.1 Changed buttons

The buttons will be transparent if the setting is disabled / colored if the setting is enabled.

6. Extension Points

To be determined