

# Device: NewTek TriCaster Mini



## Introduction

The integration with TriCaster Mini is performed on a


- NewTek TriCaster Mini SDI Advanced Edition w. Build Number: 5-1-180323C (SDI 180323)

For a controller with the TriCaster Mini Device Core to work a matching static IP must be set on the TriCaster.

Our default configurations for NewTek TriCaster Mini usually involves activating a number of Macros. In the NewTek TriCaster Mini Device Core this action is called "TriCaster Mini: Trigger".



If the shortcut is not defined the same way as instructed in this manual, the desired action will not properly be triggered. A example below shows the "Trigger" necessary to be defined in order for our controller to activate that particular macro.

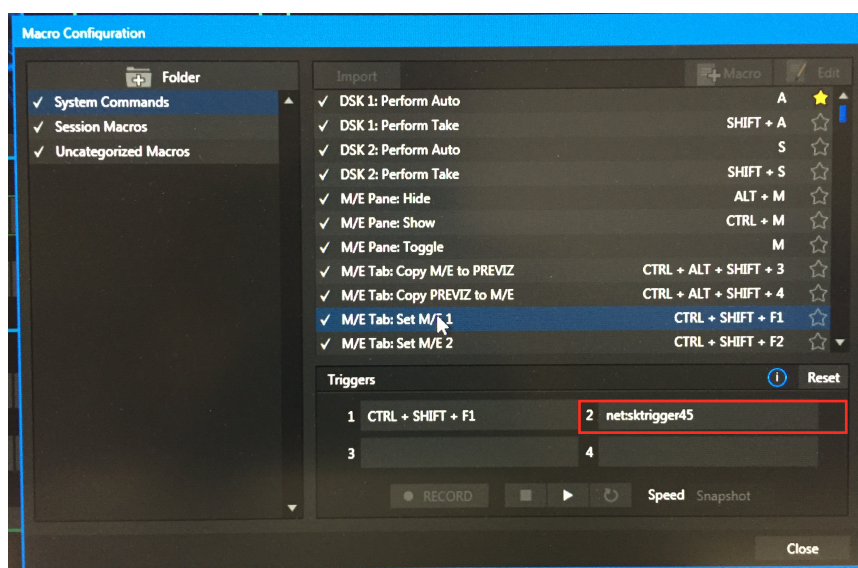

The relevant Macros can be found here: <https://github.com/kasperskaarhoj/SKAARHOJ-Open-Engineering/tree/master/Manuals/NewTek>

Here is a overview of some of the Macros

### **System Commands**

34: Switcher: Copy Main to PREVIZ (Also opens PREVIZ Tab)

35: Media Player: Next

36: Media Player: Play

37: Media Player: Previous

39: BUFFERS

40: Main Tab

41: DDR 1

42: DDR 2

43: GFX 1

44: GFX 2

45: M/E Tab: Set M/E 1

46: M/E Tab: Set M/E 2

47: M/E Tab: Set M/E 3

48: M/E Tab: Set M/E 4

49: TAB: Show PTZ

50: AUDIO MIXER

### **Session Macros**

21: PiP Left

22: PiP Right

31: main\_background\_select\_index=0 (Transition number 1 selection)

32: main\_background\_select\_index=1 (Transition number 2 selection)

33: main\_background\_select\_index=2 (Transition number 3 selection)