



WARNING



RISK OF DEATH OR SERIOUS INJURY

- Whenever you ride a Boosted board, you risk death or serious injury from loss of control, collision, and falls. To ride safely, you must read and follow all warnings and instructions in the manual and at www.boostedboards.com/training.
- Always wear a helmet when riding. Avoid water, wet surfaces, slippery/uneven surfaces, steep hills, traffic, cracks, tracks, gravel, rocks, or any obstacles that could cause a loss of traction and cause a fall. Avoid night riding, areas with poor visibility, and small spaces.
- **WARNING:** Do not ride Boosted in environments, on inclines, or at speeds where you would not be safely in control of an unpowered longboard. In the event of wireless interference or battery fault, you may need to rely on skating techniques like footbraking or sliding to stop. For more information, visit the online tutorials at www.boostedboards.com/training.



WARNING: AVOID WATER!

Your Boosted board is not waterproof. Electronics, bearings, and other components can be damaged. Water damage is not covered under the warranty.



WARNING: PINCH POINTS!

Keep fingers, hair, and clothing away from belts, motors, wheels, and all moving parts.



WARNING: RISK OF ELECTRIC SHOCK!


Do not open or tamper with electronics housings, which also voids the warranty.

YOU ARE BOOSTED: Please ride responsibly and respect those around you, both for your safety and to help promote our new sport and mode of transportation.


TABLE OF CONTENTS

Symbol used	2
Safety warning symbols	2
Arrangement of jetsurf and it`s accessories in board bag	4
List of accessories	5
1B DESCRIPTION.....	6
Fuel tank	
Exhaust	
Control handle	12
Engine starter	14
Exhaust silencer	15
Ignition control unit (icu)	17
Signaling of ignition control unit (icu) faults	17
Indicator	18
Electric bilge pump	20
Engine	21
	22
	23
2B SPECIFICATIONS	24
List of authorised dealers	25


A) REMOTE GLOSSARY

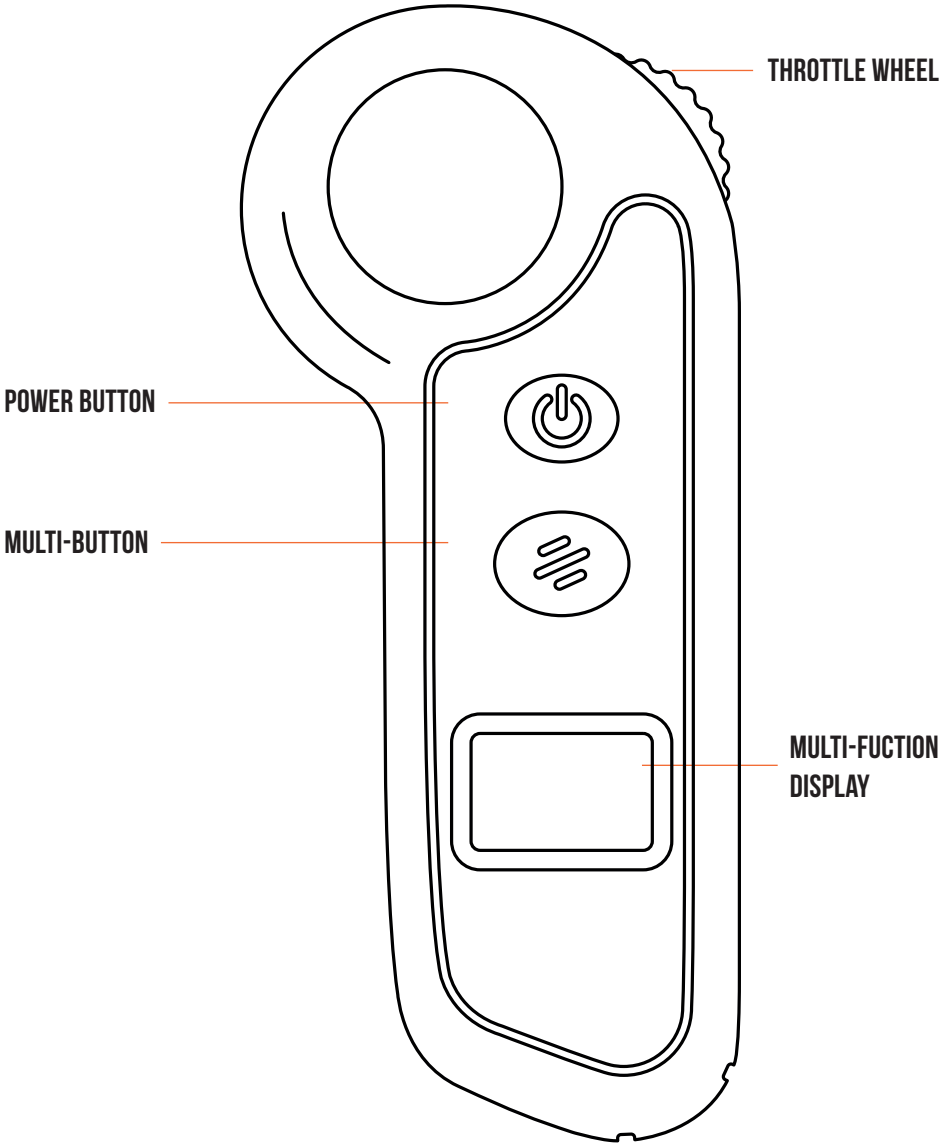

A) BOARD GLOSSARY

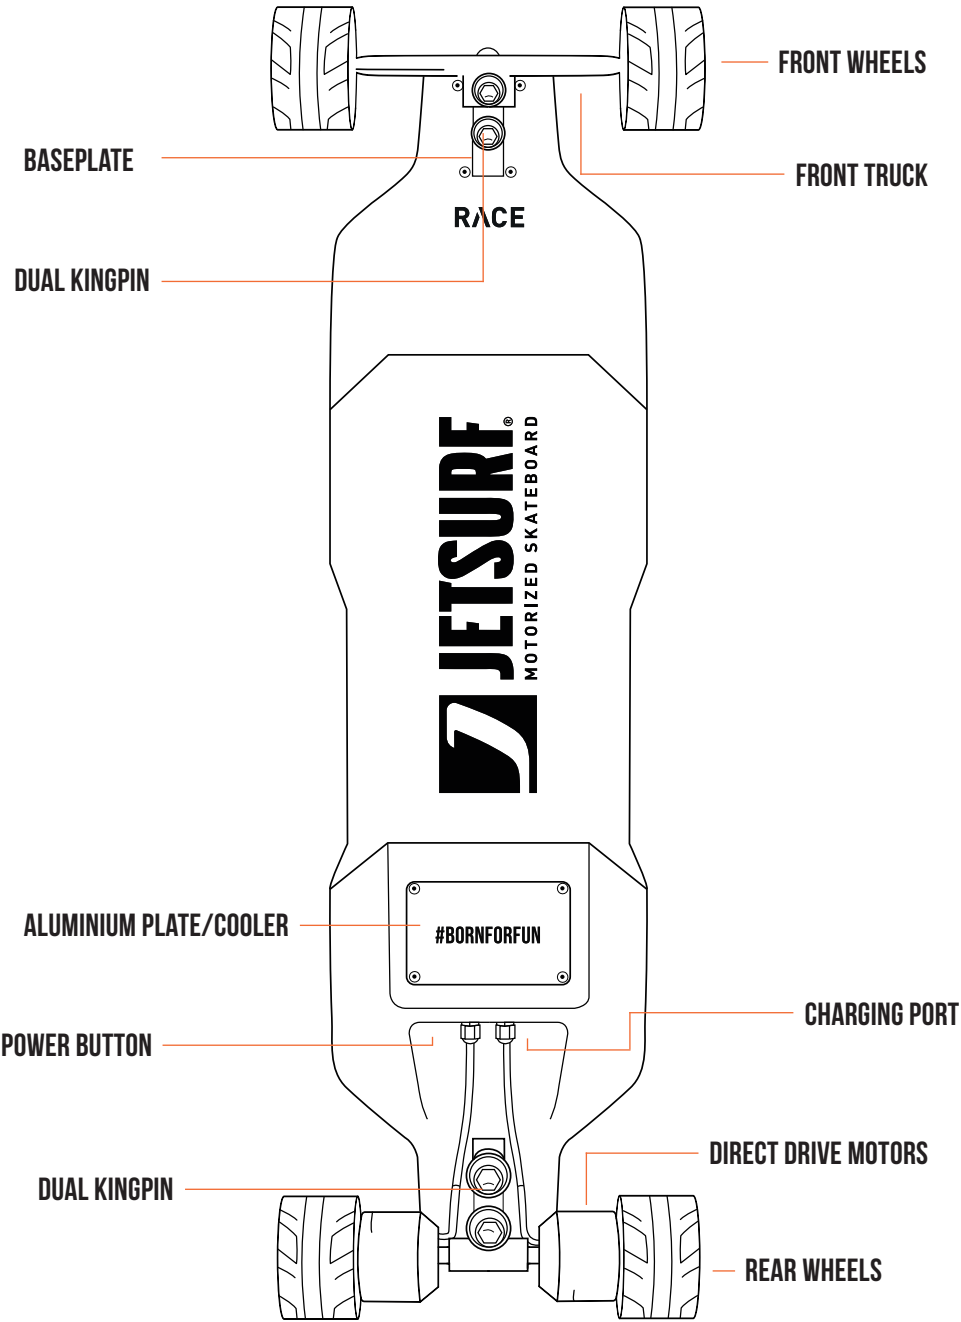


A) BOARD GLOSSARY – FRONT

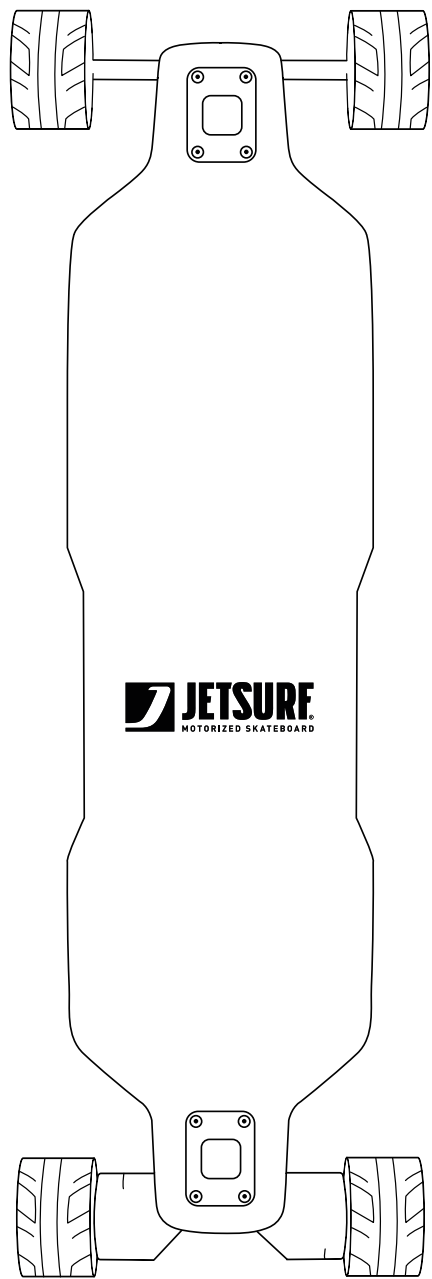




1) GET READY

ALWAYS WEAR A HELMET.

- Find an open, flat area with clean pavement for your first ride.
- Read the warnings on the skateboard and at the beginning of this manual.
- For more details on skating, check out the on-line tutorials at www.boostedboards.com/training.

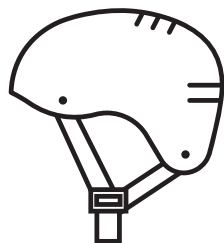

OTHER PROTECTIVE EQUIPMENT IS HIGHLY RECOMMENDED.

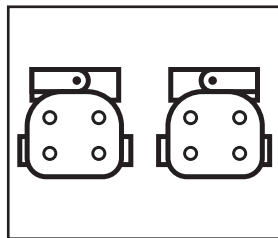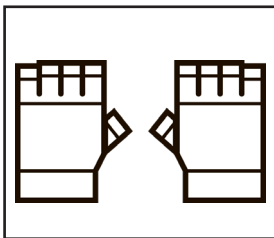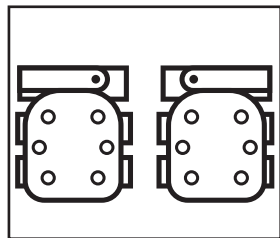

AVOID THESE THINGS THAT CAN CAUSE SLIPPING:



AVOID THESE THINGS THAT CAN CAUSE TRIPPING:



AVOID THESE THINGS THAT CAN CAUSE COLLISIONS:



2) RIDING BASICS

ARE YOU A "REGULAR" OR "GOOFY" FOOT RIDER?

If you are unsure, place the foot you kick a ball with in the back.

REGULAR FOOTED
(LEFT FOOT FORWARD)



GOOFY FOOTED
(RIGHT FOOT FORWARD)



STANCE:


Your Boosted board has a lot of power.

Follow these tips to ensure a safe riding experience:

- Move the Throttle Wheel in small increments.
- Keep a wide stance on the board.
- Keep a low center of gravity.
- Lean forward when accelerating.
- Lean backwards when braking.


3) POWER ON/OFF THE REMOTE

Press the Multi-Button for 2 seconds.

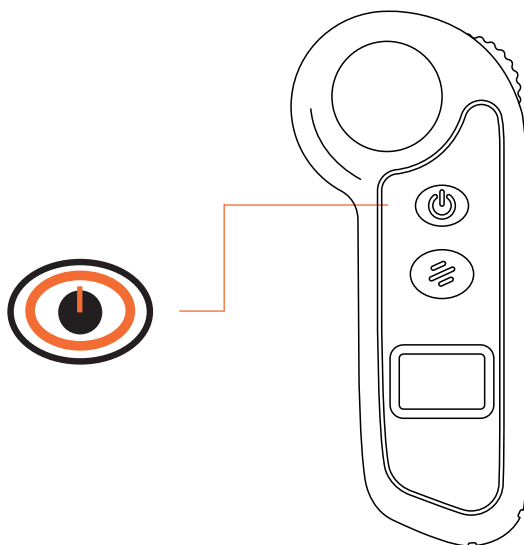


4) POWER ON/OFF THE BOARD

Press the Power Button for 2 seconds.

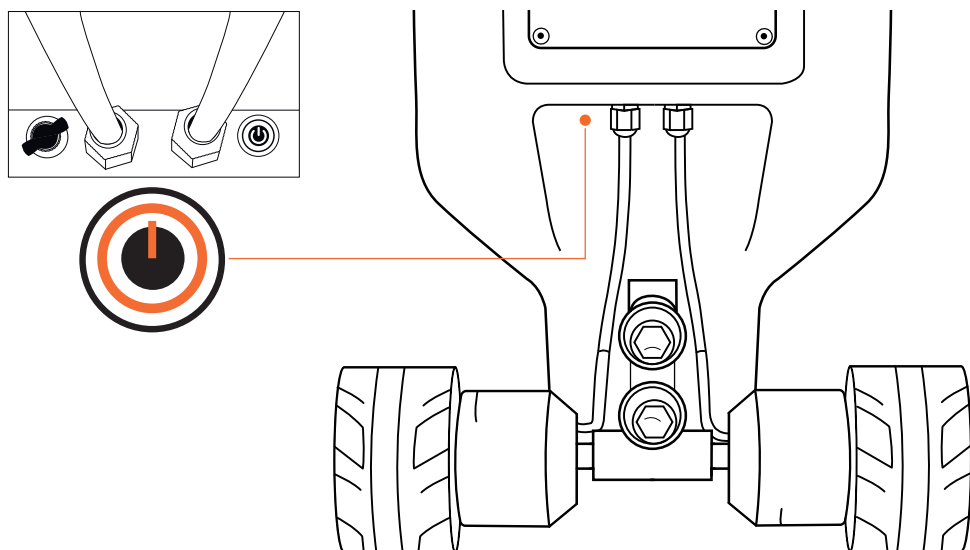


5) CHECK THE REMOTE-BOARD PAIRING

Track the pairing on the display

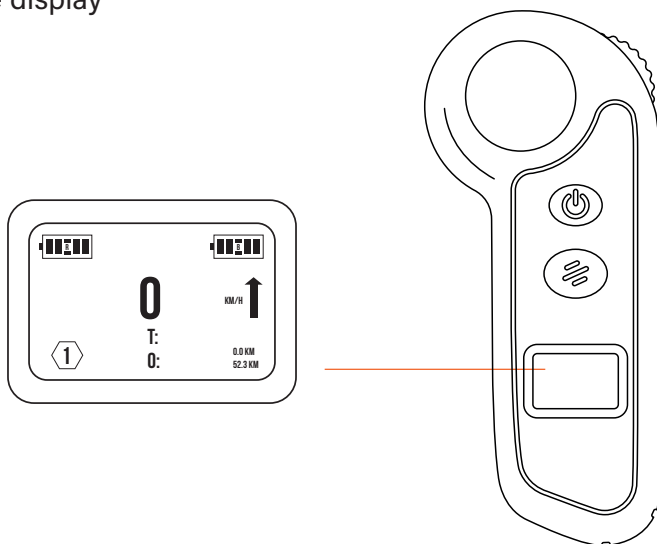

6) CHECK THE REMOTE BATTERY LIFE


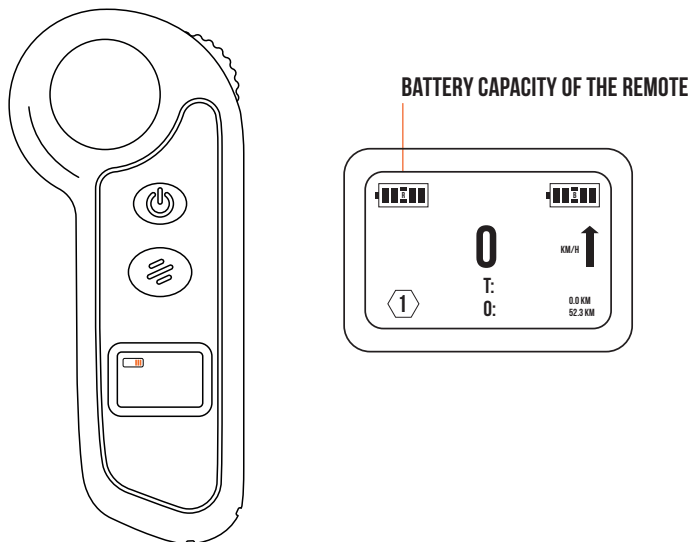


WARNING:

Never start a ride with a low remote battery indication.



7) CHECK THE BOARD BATTERY LIFE

BATTERY CAPACITY OF THE BOARD

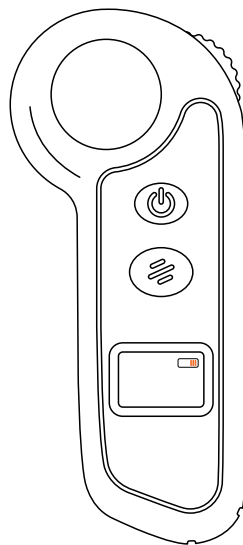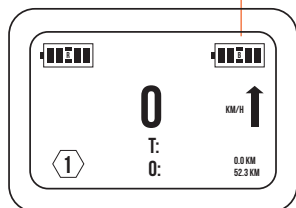


8) OPERATING THE BOARD WITH THE REMOTE

Rotate wheel forward or backwards

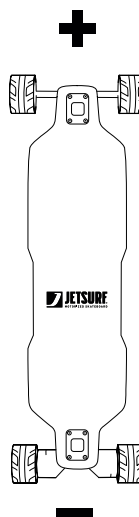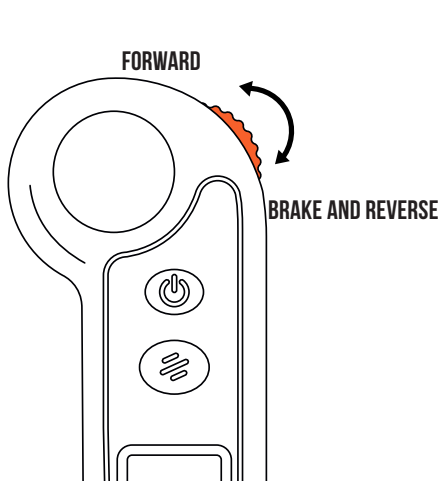


9) CHANGING MODES

Speed modes

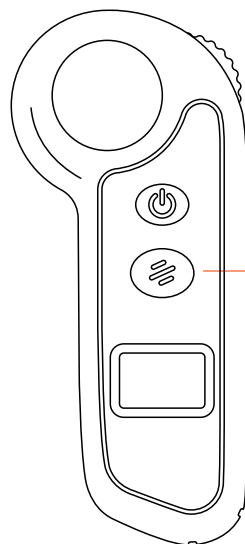


Speed mode button:
1 click-higher
speed (1-3)


FIRST CLICK

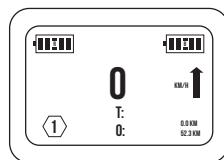


SECOND CLICK

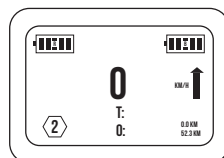

THIRD CLICK

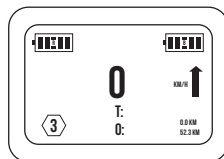


Tempomat

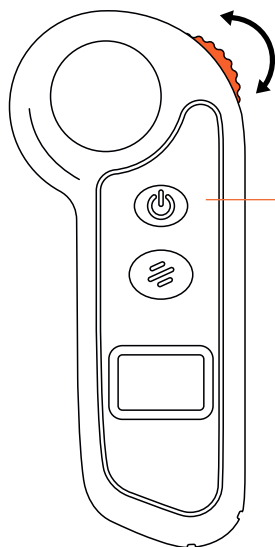


Press power button
spinning the wheel
forward

Reverse mode

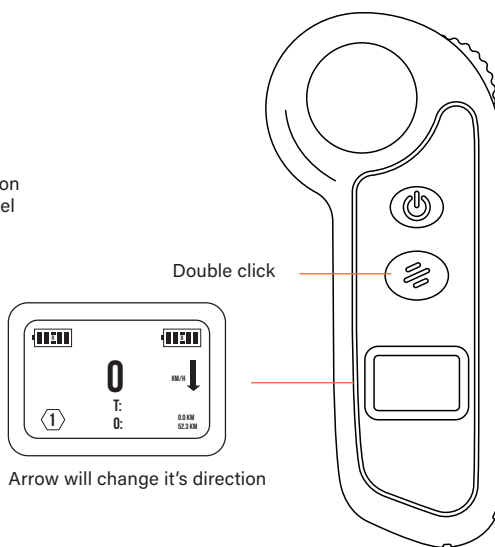



Double click

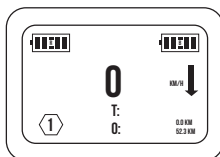

Arrow will change it's direction


10) HOW TO OPERATE WITH THE BOARD

Power button on the remote

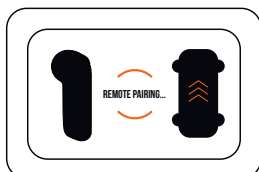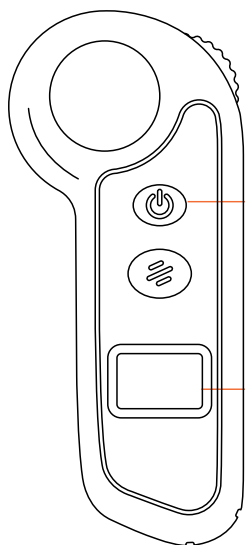


POWER BUTTON ON THE REMOTE


Push and hold this button for 10sec or until it will remote pair with the board.

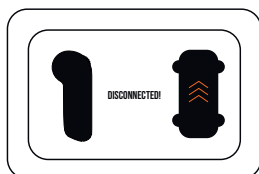

When the board is disconnected

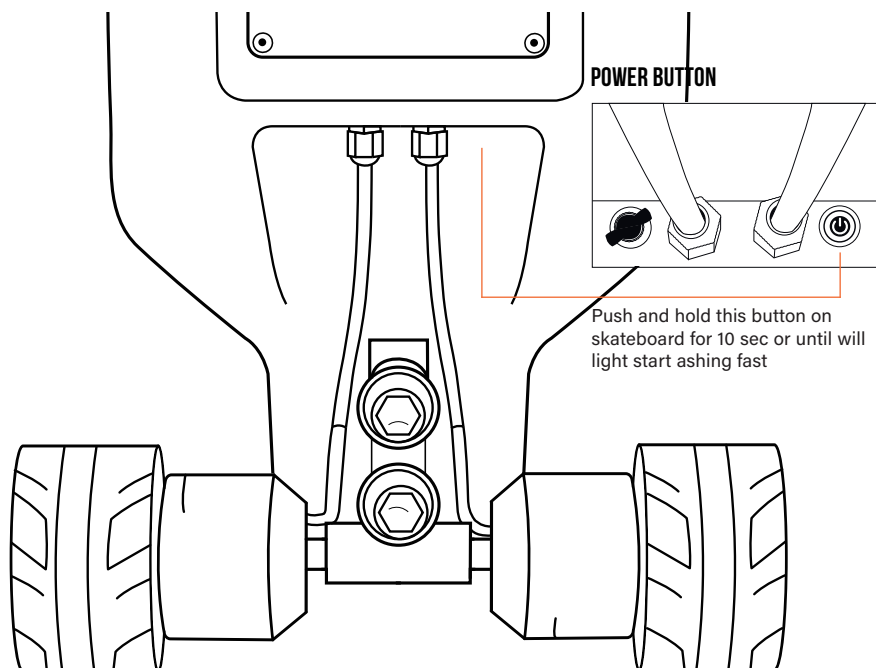


POWER BUTTON

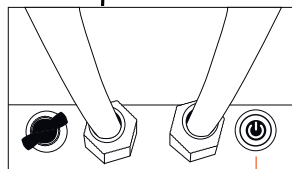

Push and hold this button on skateboard for 10 sec or until will light start flashing fast


11) CHECK THE REMOTE BATTERY LIFE

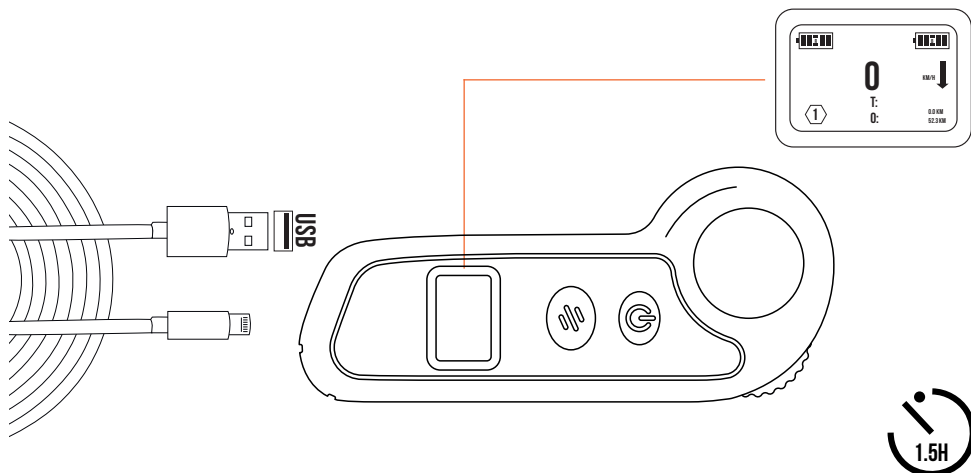

NOTE:

If the remote is charged everytime the board is charged it will take much less time to charge

12) CHARGE THE BOARD

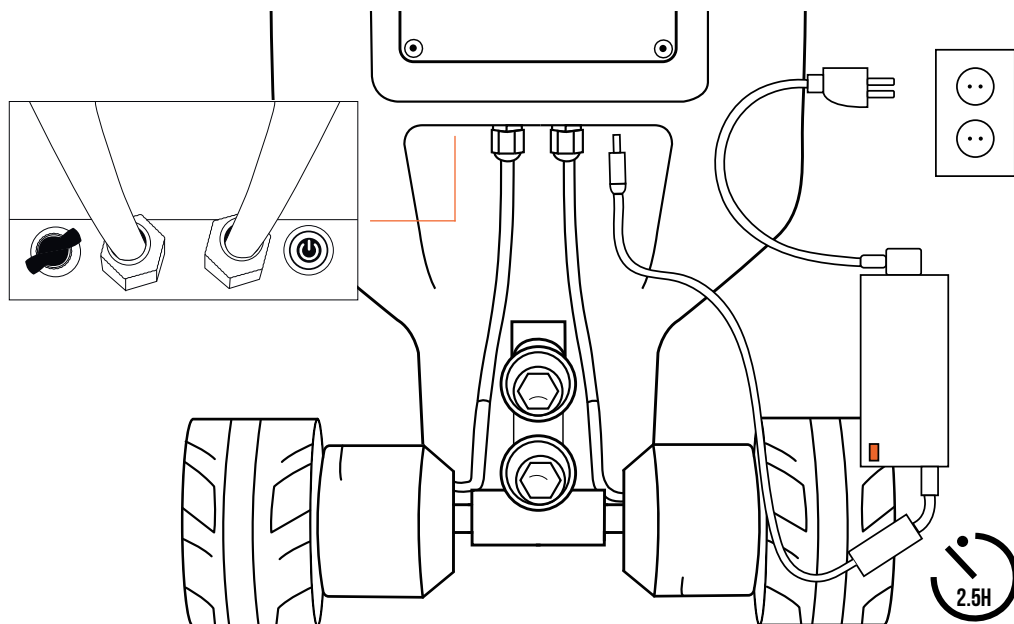

LIMITED WARRANTY:

This board is covered by a 90 day manufacturer's warranty that covers defects in workmanship and material. This does not cover damage caused by abuse, misuse, negligence, accident, or riding in water.

If the product has a manufacturing defect within 90 days of ship date, contact warranty www.jetsurf.com before shipping the board back in order to get a return authorization.

FOR ALL RETURN AND WARRANTY SHIPPING:

Please keep your shipping box. The warranty does not include damage from shipping in insufficient packaging.

