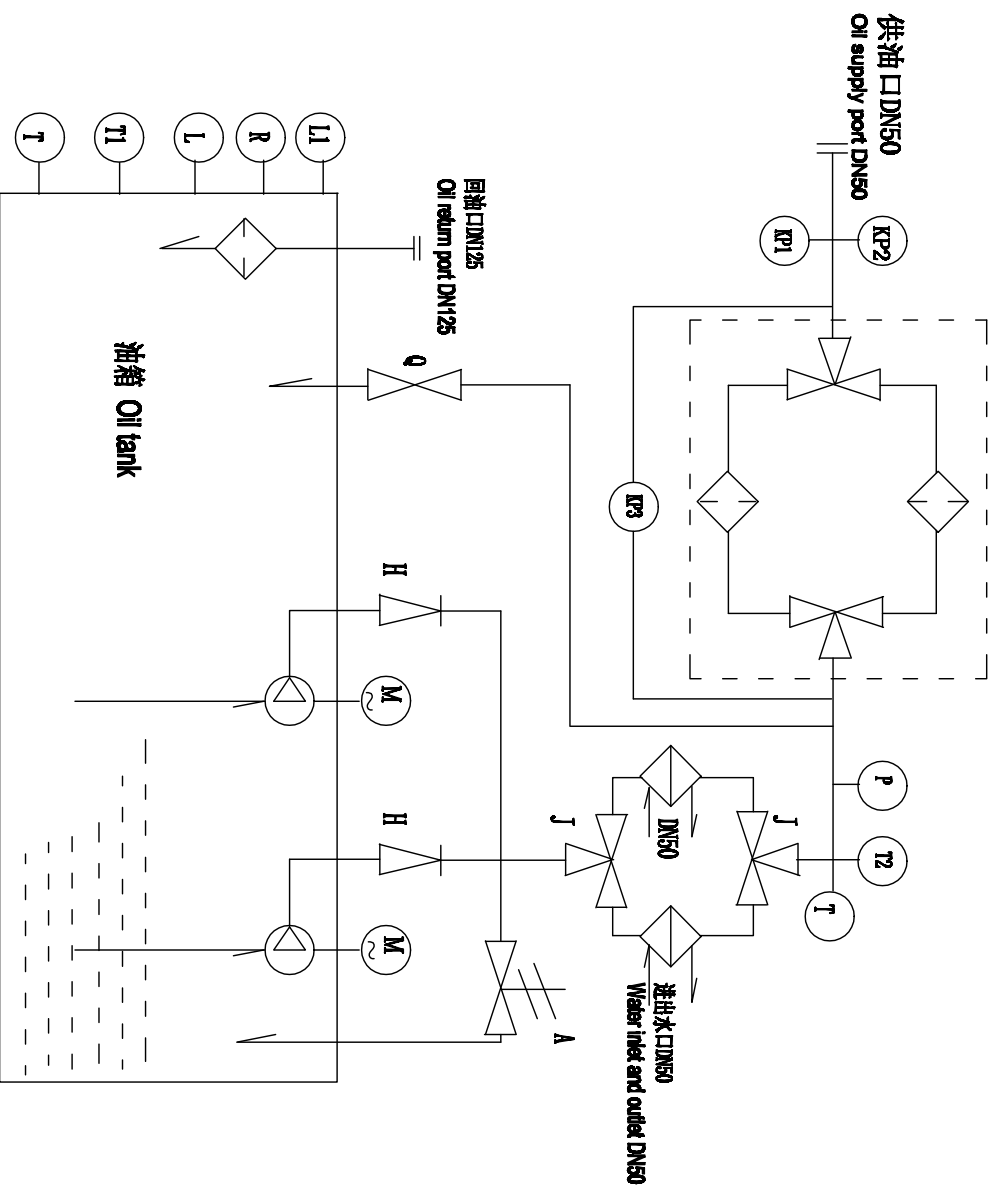


控制仪表清单 Controlling Gauge List

符号 Symbol	型号 Type	名称 Name	数量 No.	安装位置 Installation site
kp1	YK-100	隔膜式压力泵 Diaphragm pressure pump	1	泵油室 Oil supply pipe
	KP1≤0.1MPa,各用泵工作, KP1≥0.35MPa,各用泵停 Spies pump operates when KP1≤0.1MPa, stops when KP1≥0.35MPa			
kp2	YK-50	压力控制器 Pressure controller	1	供油管 Oil supply pipe
	KP2≤0.1MPa报警 Warning			
kp3	隔膜式压力泵 Diaphragm pressure pump			
T1	KP3≥0.1MPa报警 Warning		1	过油器前后 Before and after the filter
	WTZ-240	油温电阻 Thermistor	2	T1注油器、T2冷却器后 T1 locates behind oil tank, and T2 condenser
T2	T1<20℃故障报警工作, >30℃切断故障报警 Faulted alarm should be started to work when T1<20℃, stopped when T1>30℃. T2≥55℃报警 Warning			
L1	UKG-01	浮球液位控制箱 Floating ball level controller	1	油箱 Oil tank
M	Y132M-4	电机 Electric motor	2	油泵 Oil pump
	GYT4-240/3	电磁换向 Electric handler	3	油箱 Oil tank
R	~240V, 3KW			
Q	Q11F-16	球阀 Ball valve	1	冷凝器或文氏管 Ref. B) Pass of condenser
	调整合适的供油压力 Regulate to a suitable oil supply pressure			
A	A211F-16	安全阀 Safety Valve	1	泵后支管路 Riser pipe-pass of pump
	确保泵电机不过载, 0.5MPa切断油 Ensure electric motor of pump do not over load, 0.5MPa of leak.			
H	H41F-16	止回阀 Check valve	2	泵后消管路 After piping of pump
	防止油的倒流 Stop oil from flowing backwards			
J	Q45F-16	三通阀 Triple valve	2	冷却器前后 Before and after the condenser
T	WSS-301	温度设计 Temperature gauge	2	泵油室示油室 Locally indicating gauge
L	L-500	液位计 Level gauge	1	泵油室示油室 Locally indicating gauge
P	YN-100	压力表 Pressure gauge	1	泵油室示油室 Locally indicating gauge

[illegible]