


HEGduino

Quick-update guide.

Step 1: Download the latest update file, which is a **.bin** file. It is available in the github repo here: https://github.com/moorthyknight/HEG_ESP32. Find the **.bin** update file for your respective ESP32 board in the Device Drivers folder and download it.

Step 2: Connect to your HEG's WiFi signal "**My_HEG**" with password "**12345678**"

Step 3: In a web browser (preferably Chrome or Firefox), enter the address "**192.168.4.1/update**" to come to the update page.

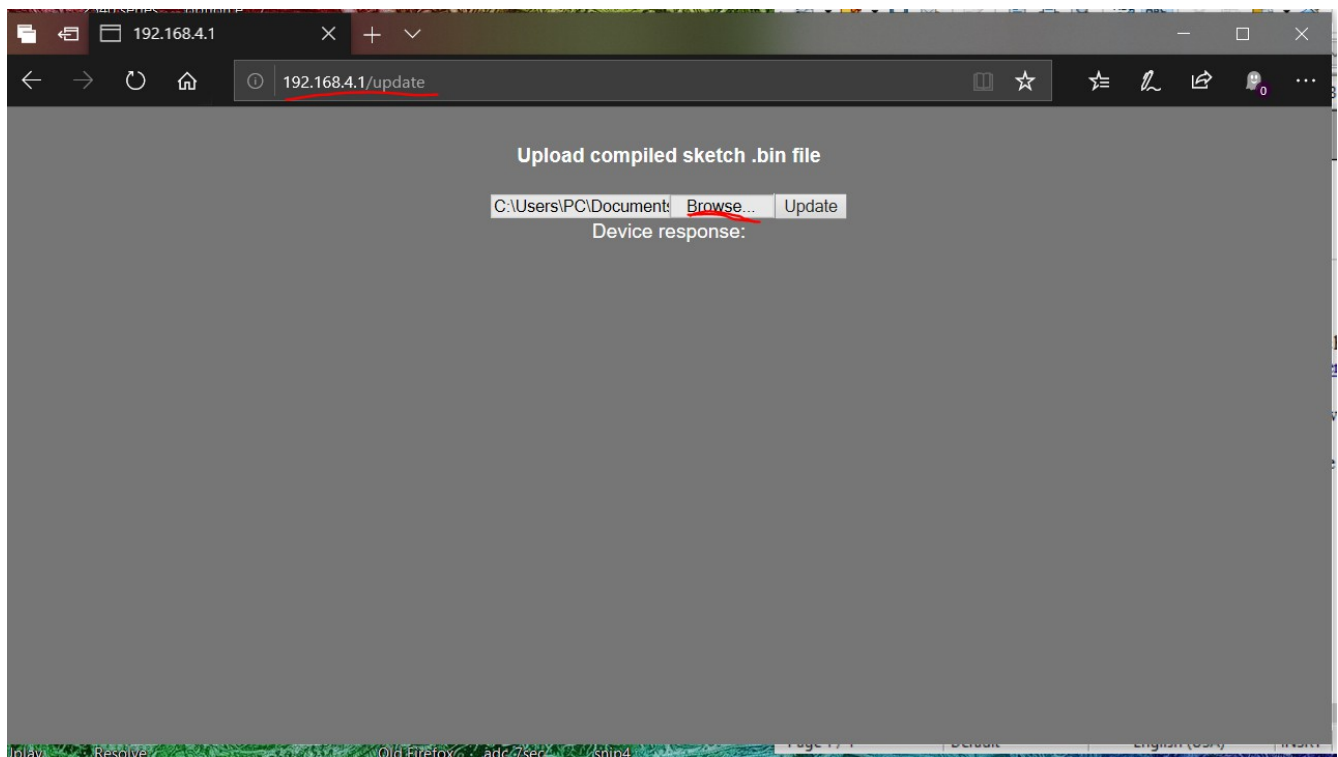

Step 4: Press the Browse button and find the downloaded update file

Step 5: Press Update. Wait a few minutes as it should freeze up while updating. You should see a progress message.

Step 6: Reconnect and test your output via the HTML5 Demo from "**192.168.4.1**" in the browser, you can check the Console of your browser to see if the signal is outputting correctly if nothing shows up in the data table. Right-click the page and press "Inspect" or "Inspect element" to bring up your side console. If the console tab is not selected, select it to see an output stream (image on next page)