


VSC8541XMV

CAUTION: This schematic is a reference for GMII MAC implementation and for enabling the internal oscillator using an external crystal. This is only meant to offer breakout and layout reference material and not meant to show all the various configuration options and operating modes. The hardware bootstrapping option signals are only shown to offer routing guidance in the layout reference files. They are not meant to be copied without referencing the datasheet to determine desired configuration. Consult the PCB layout guidelines and datasheets for information specific to desired use.

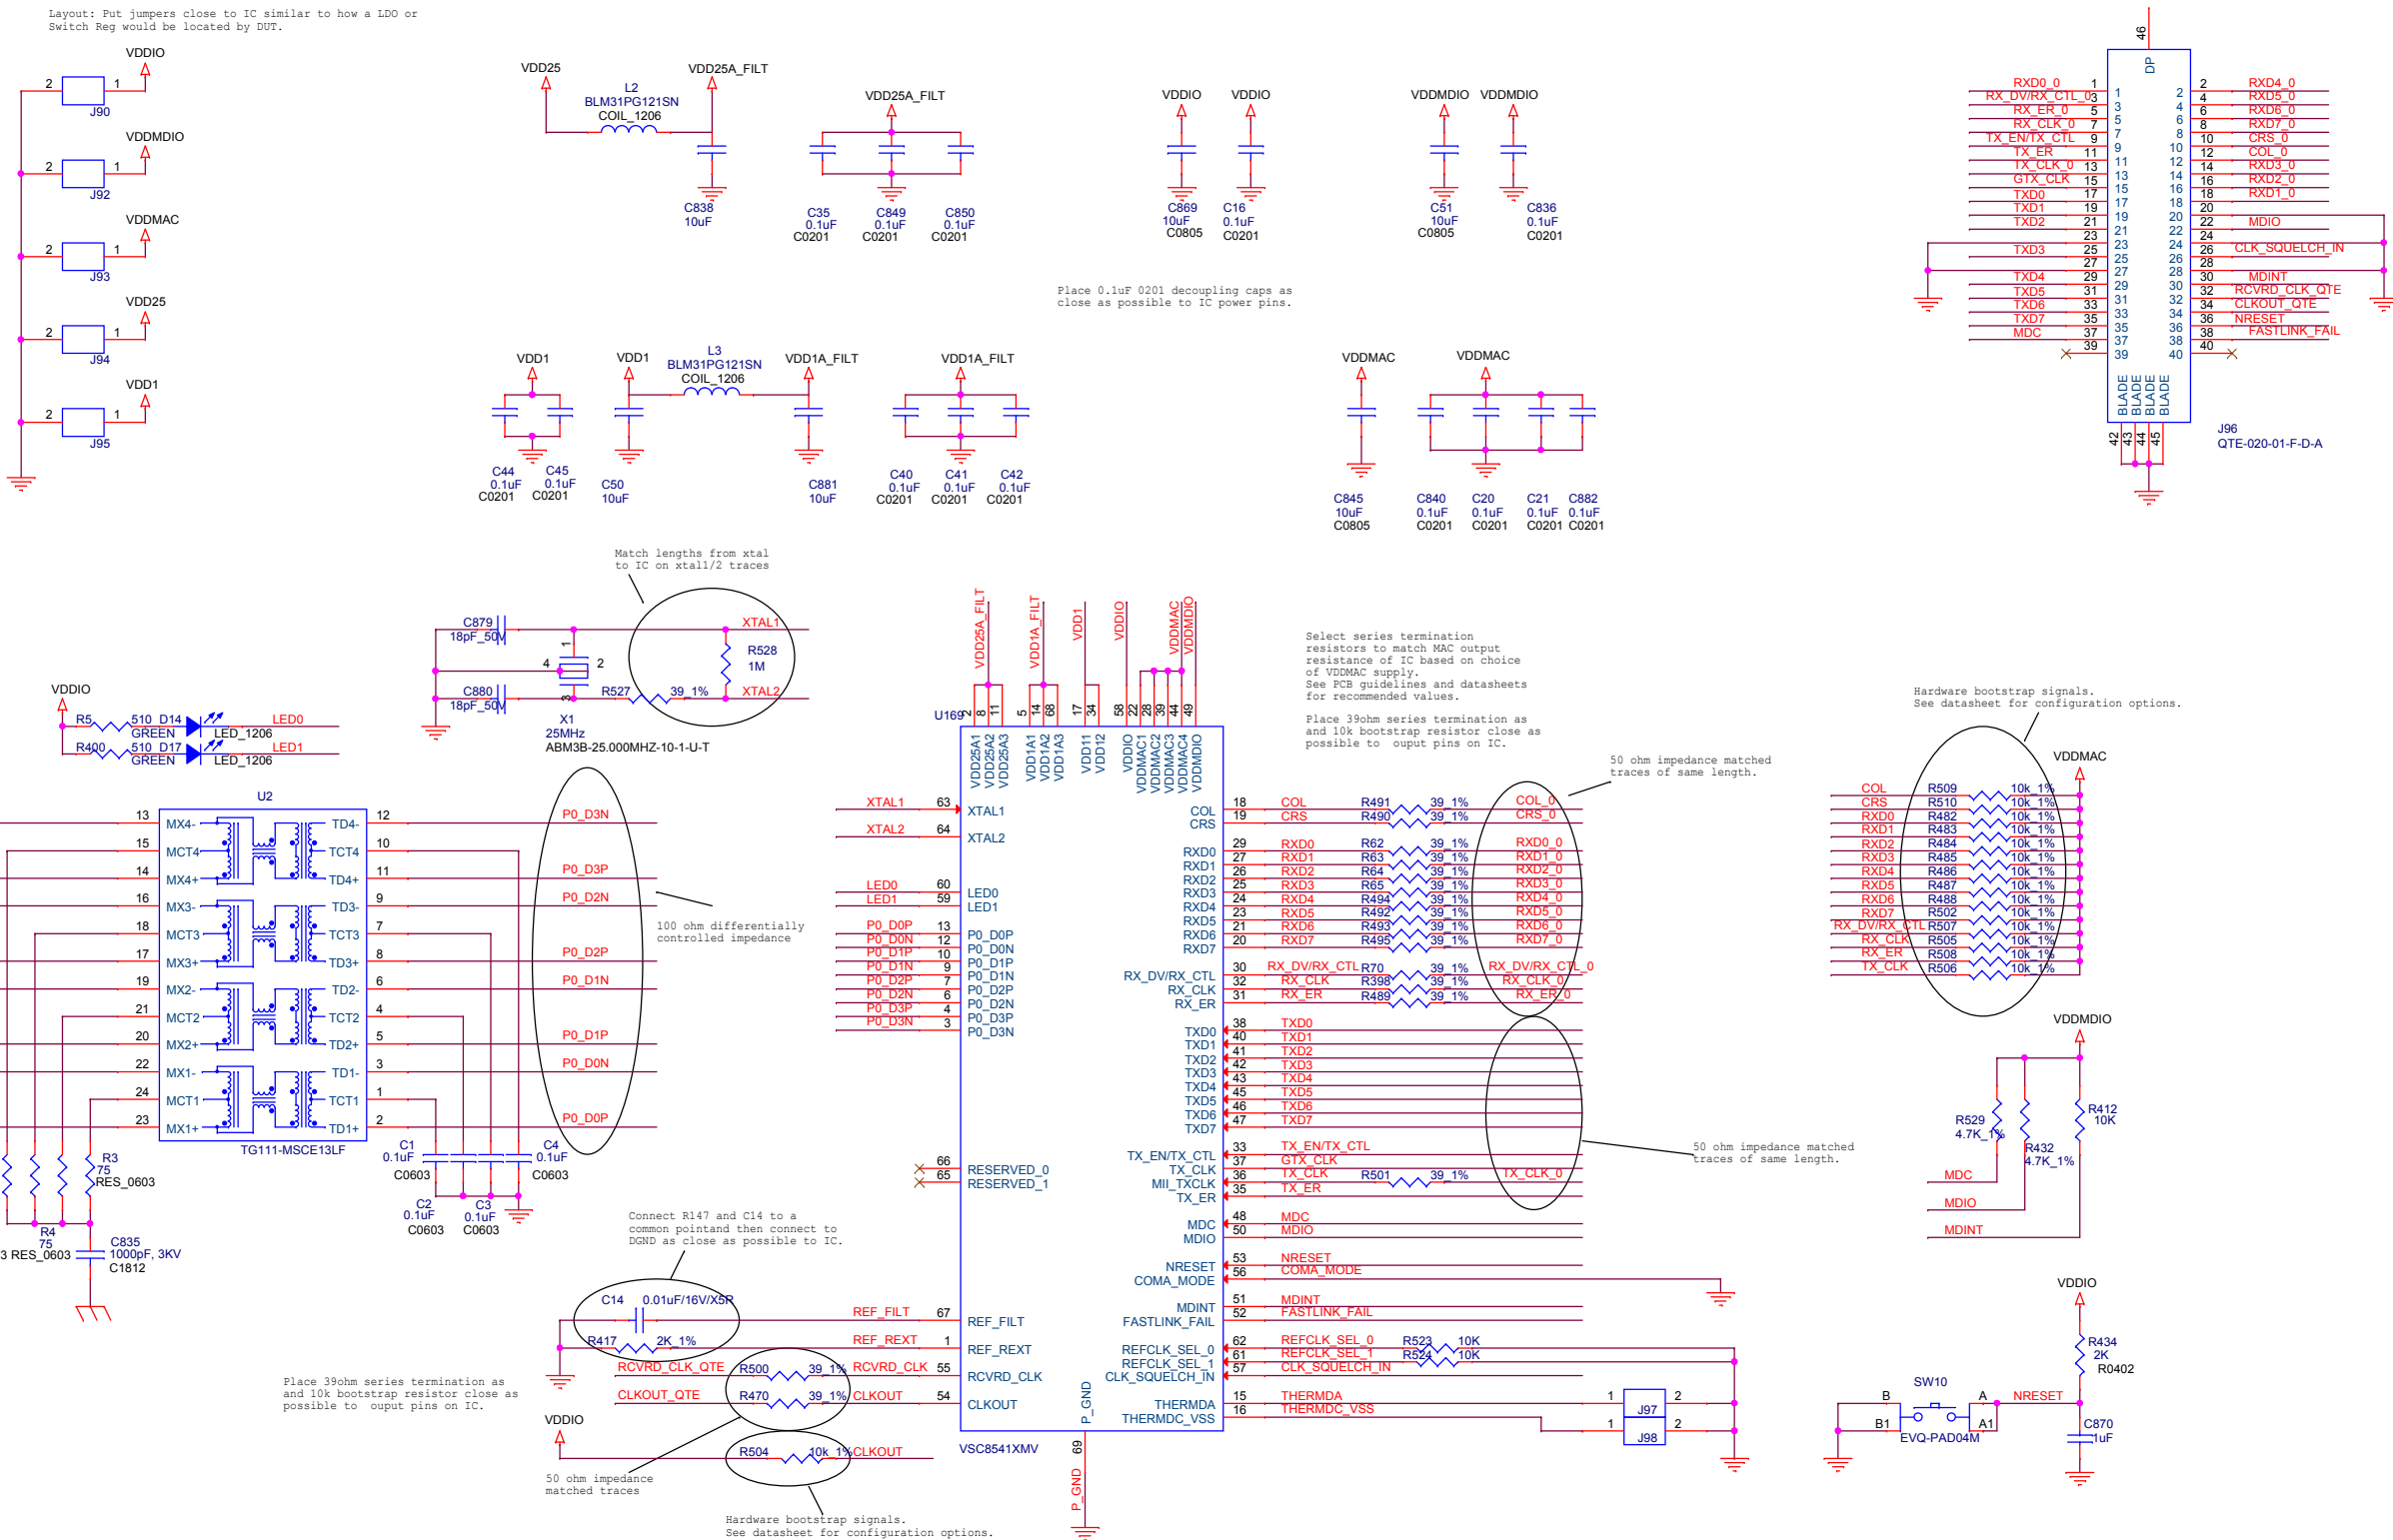

TITLE VSC8541XMV_Customer_Reference_Schematic		
Microsemi		
SIZE Custom	DOCUMENT NO.	REV A
DATE: Friday, May 13, 2016		SH 1 OF 1