


Item X

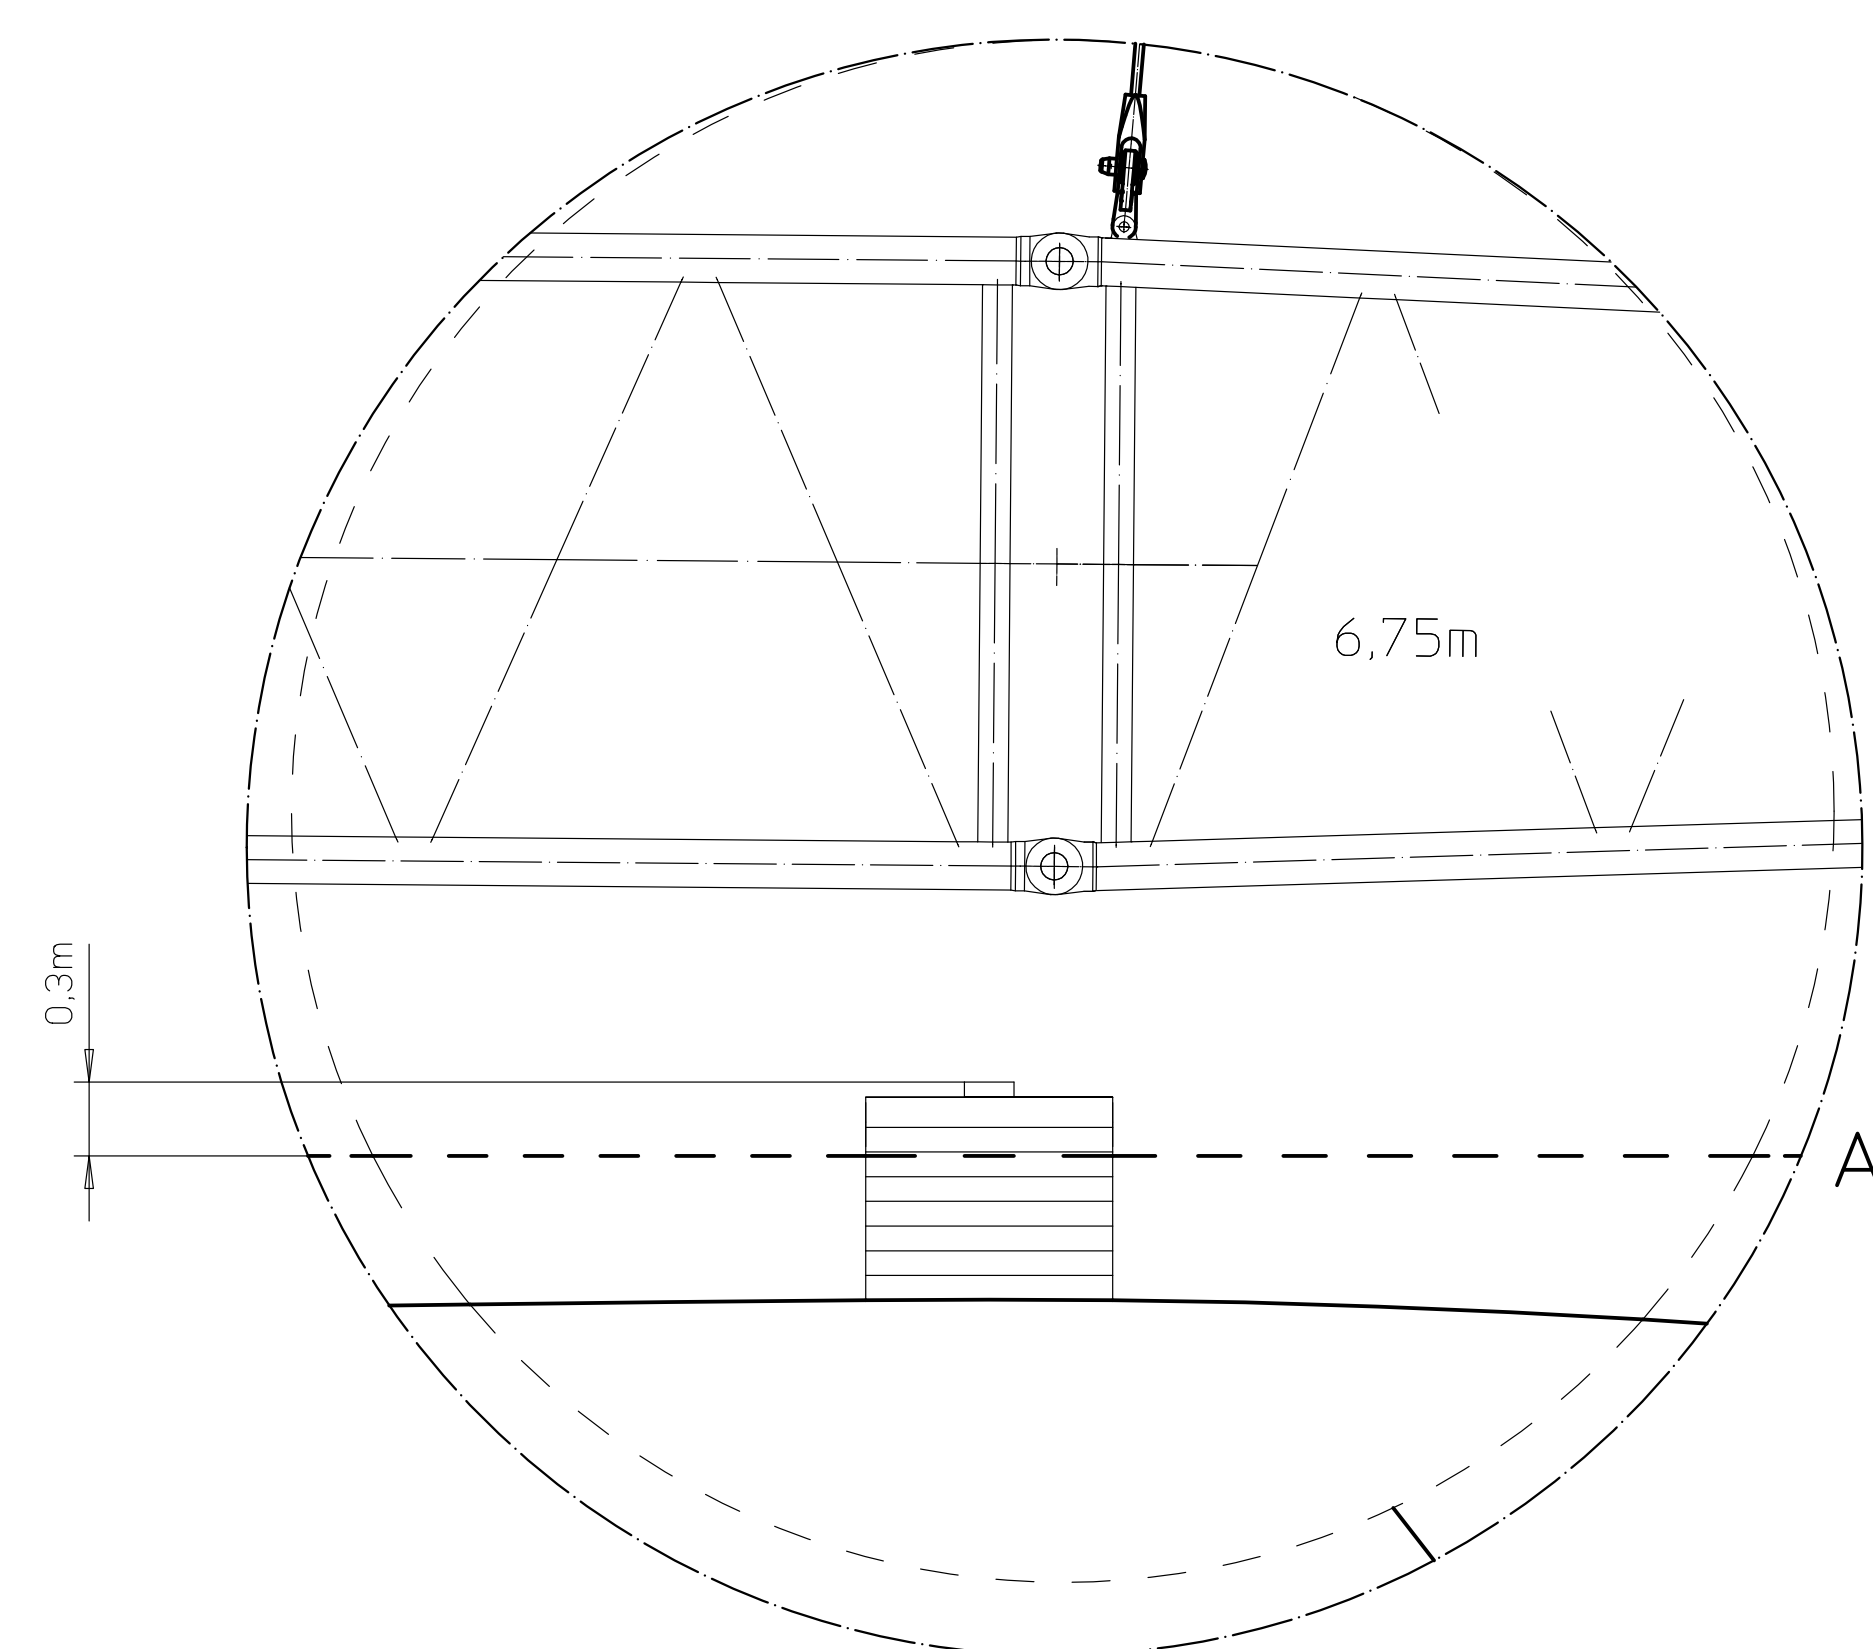

The upper edge of the base must be 0,3m above the alignment level.

Alignment level of height data is the placement level of the crane.
Erection / take down is done on this level.
If necessary, establish this level by supporting the boom from below.

A = Alignment level

Statically checked:	Administrator	Date	Name
	Department manager		
Comment:			

LWE_CAD			
04.11.2009	SAR		
SLD-ASSEMBLY NARROW TRACK		1666-720.00.03.014-000	
		9880 938 08	