


Item X

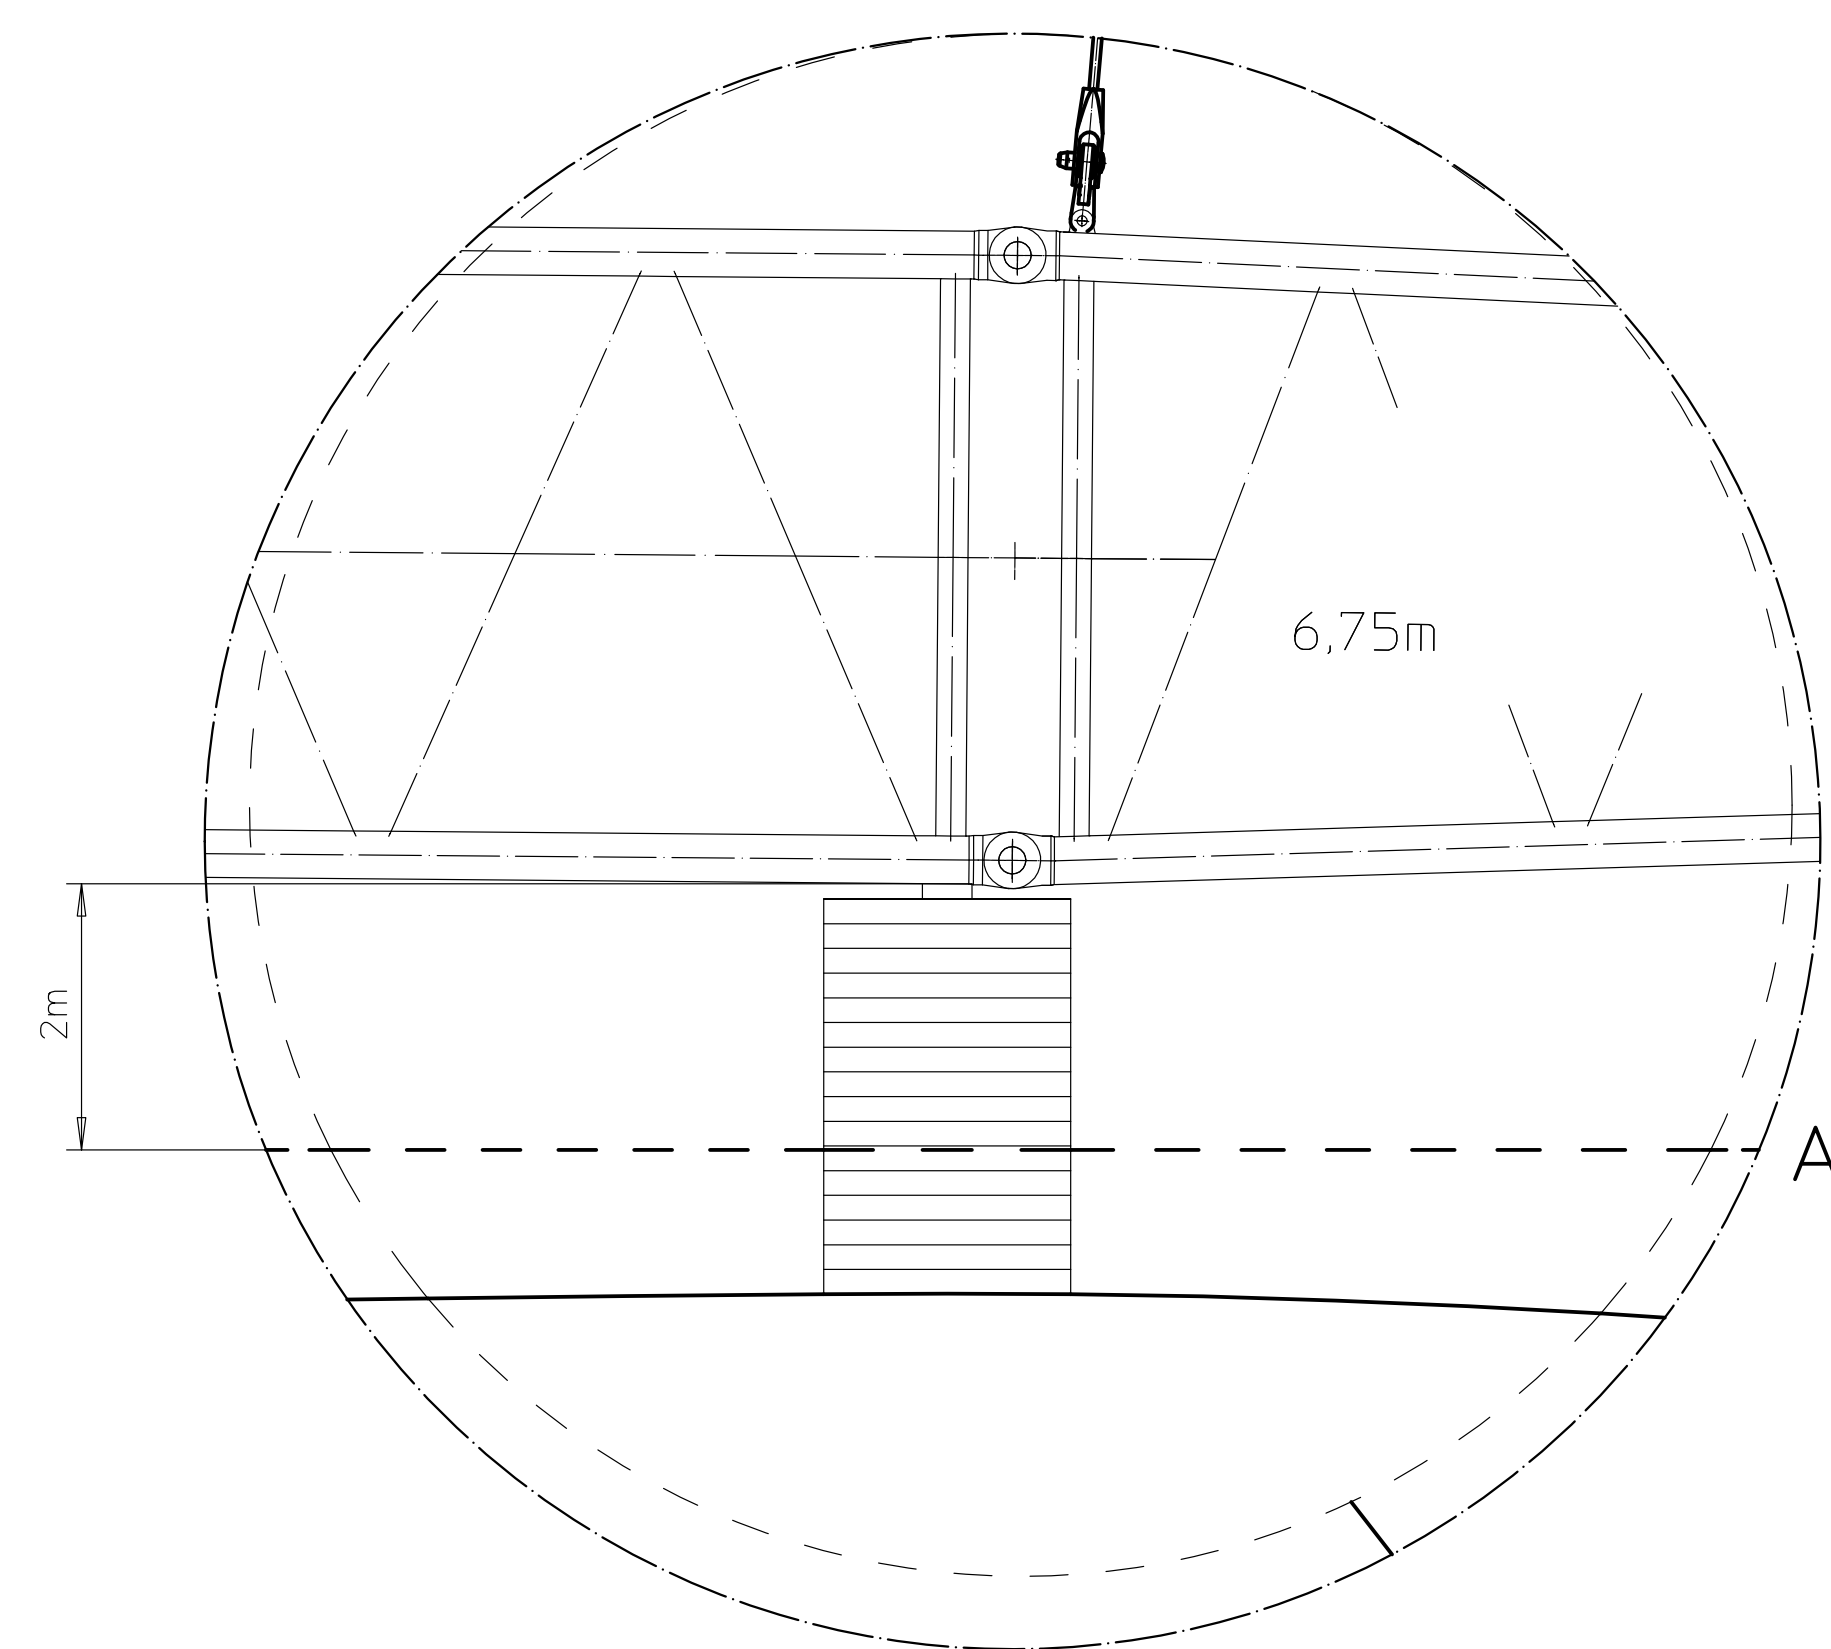

The upper edge of the base must be 2m above the alignment level.

Alignment level of height data is the placement level of the crane.  
Erection / take down is done on this level.  
If necessary, establish this level by supporting the boom from below.

A = Alignment level

Statically checked:	Administrator	Date	Name
	Department manager		
Comment:			

30.10.2008

SAR

LWE\_CAD

1:150

SDL-ASSEMBLY

1666-720.00.03.007-000

9873 042 08