


Detail X

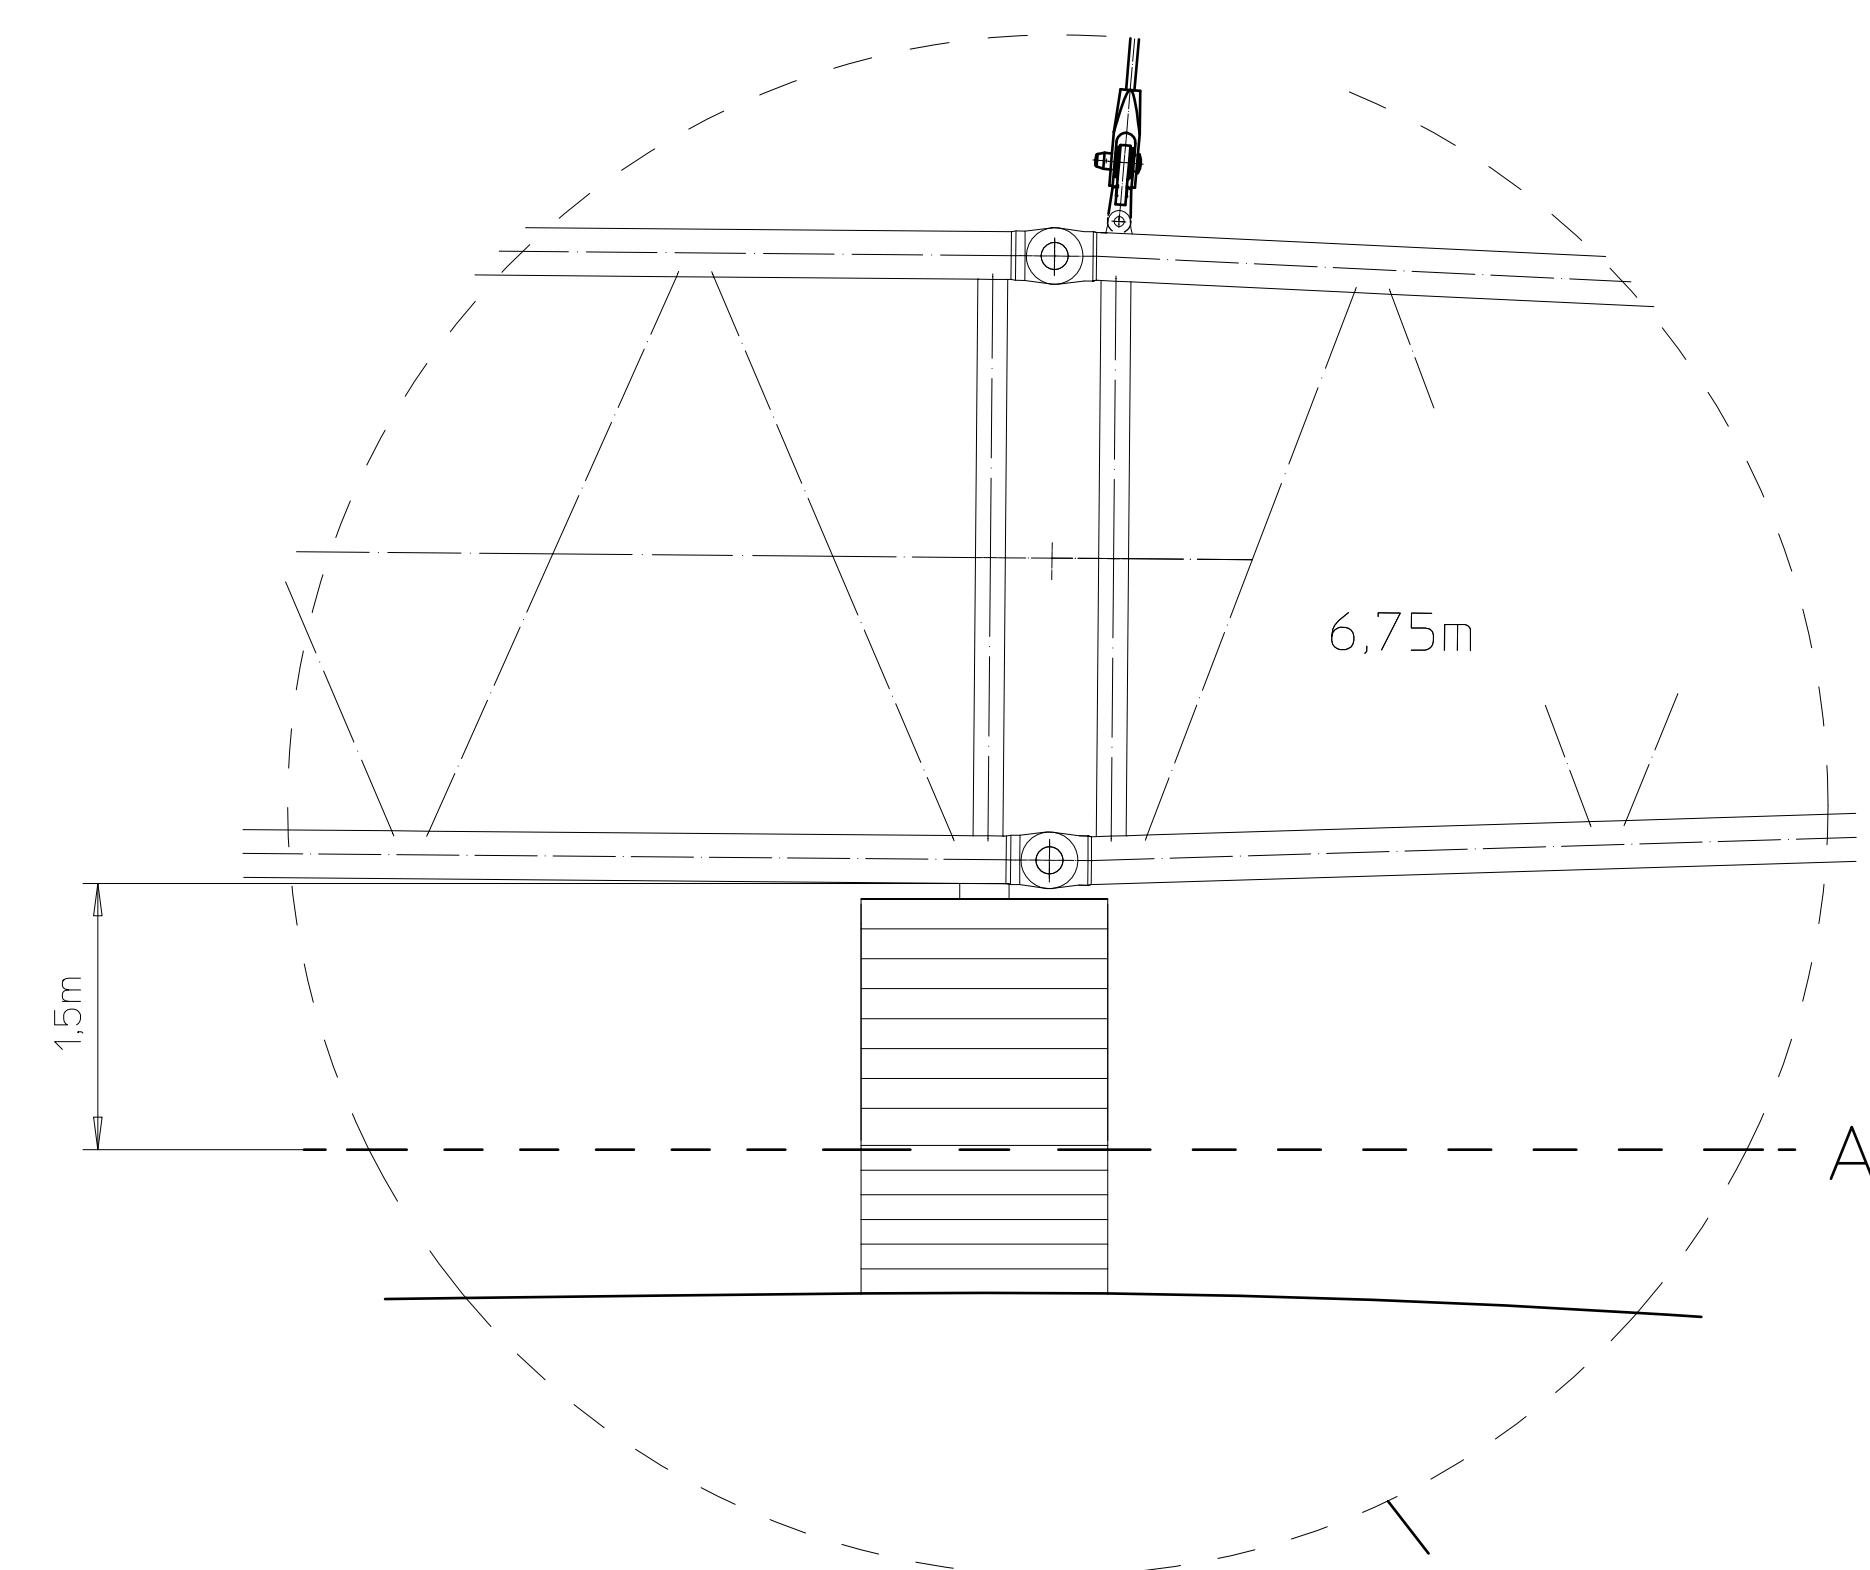

The upper edge of the support must be 1.5m above the alignment level.

Alignment level of height data is the placement level of the crane.  
Erection / take down is done on this level.  
If necessary, establish this level by supporting the boom from below.

A = Alignment level

Static		Date	Name
Inspected:	Administrator		Kranke
Comment:	Change: 001, Detail X, Support height changed from 0.3m to 1.5m.		

04.11.2009 SAR

LWE\_CAD

A0

1:150

SLD-ASSEMBLY  
NARROW TRACK

1666-720.00.03.014-001

9880 938 08