


Detail X

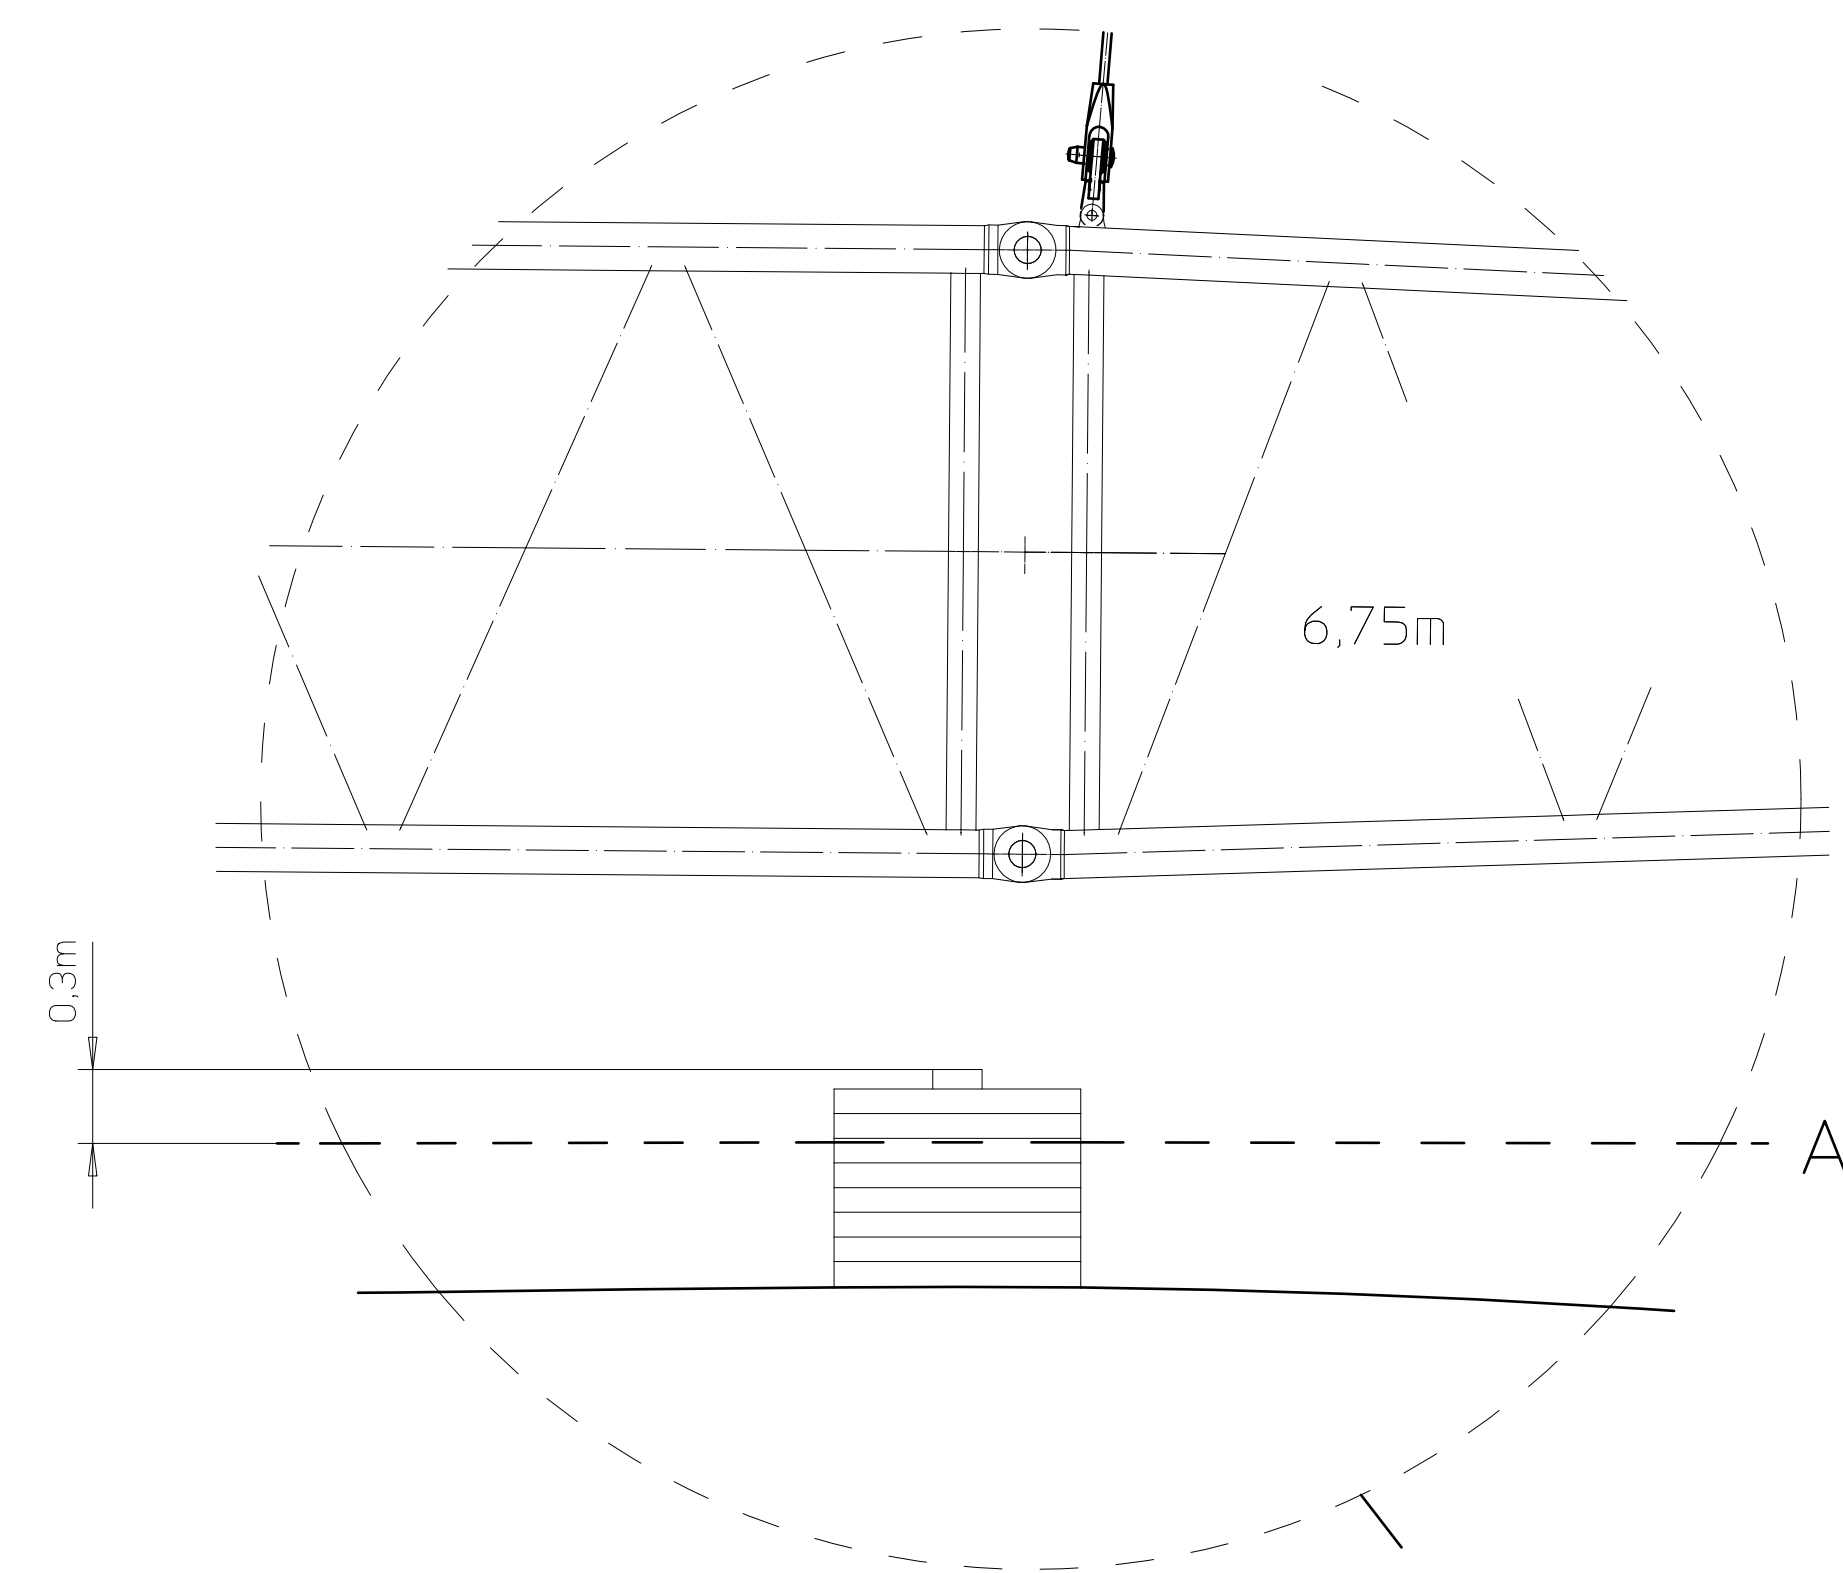

The upper edge of the support must be 0.3m above the alignment level.

Alignment level of height data is the placement level of the crane.
Erection / take down is done on this level.
If necessary, establish this level by supporting the boom from below.

A = Alignment level

| | | | |
|------------|---|------|--------|
| Static | | Date | Name |
| Inspected: | Administrator | | Kranke |
| Comment: | Change 001, Detail X, Support height changed from 2m to 0.3m. | | |

30.10.2008

SAR

✓

LWE_CAD

A0

1:150

SLD-ASSEMBLY

1666-720.00.03.007-001

9873 042 08