



HIDn SEEK


The Smart Accurate GPS Tracker

- Range & Accuracy
- Motion Sensor
- Custom Alerts
- Rechargeable
- Geo Fencing



**USER
MANUAL**

HidnSeek is available on IOS, Android and the Web



CONTENTS

| | |
|---------|---|
| Page 3 | Important Information about your device <ul style="list-style-type: none">Electromagnetic CompatibilityRisks for children and people in need of careSafety AdviceBattery Operation |
| Page 4 | Disposal <ul style="list-style-type: none">Functions and use |
| Page 5 | Declaration of conformity <ul style="list-style-type: none">CE compliance statement |
| Page 6 | CE radiation exposure statement <ul style="list-style-type: none">RSS (category equipment) |
| Page 7 | Quick Setup Guide |
| Page 8 | Getting Started <ul style="list-style-type: none">ChargingActivationThe app |
| Page 9 | Using the Smartphone App <ul style="list-style-type: none">Sign inAdd/ Delete device |
| Page 10 | Location |
| Page 11 | Advanced information screen |
| Page 12 | Device and Alert settings <ul style="list-style-type: none">Rename deviceBattery levelMotion detectionGeo-fencing |
| Page 13 | Create a Geo-fence <ul style="list-style-type: none">Delete a Geo-fenceGeo-fence settingsAlerts screen |
| Page 14 | Turning HidnSeek Off/ On |
| Page 15 | Sport Mode |
| Page 16 | Device Components |
| Page 17 | LED and device status |
| Page 18 | Support |

IMPORTANT INFO ABOUT YOUR DEVICE

ELECTROMAGNETIC COMPATIBILITY

Very strong magnetic fields (e.g. transformers) should always be avoided as this may result in variations in the transmission. Failure to follow these instructions may lead to malfunctions or damage to your HidnSeek GPS device.

RISKS FOR CHILDREN AND PEOPLE IN NEED OF CARE

The use of this device is not intended for people (including children) with limited physical, sensory or mental abilities or lack of experience and/or lack of knowledge, unless they are supervised by a person responsible for their safety or have been instructed on the use of the device.

NOTE: Some countries, states or regions have laws related to location based tracking of people, animals and objects. It's the sole responsibility of the owner and user to abide by the law and rules in the area where the HidnSeek GPS device is used.

SAFETY ADVICE

Important: Although the HidnSeek GPS device is small in size, it might be too large or heavy for small or injured children.

BATTERY OPERATION


Your transmitter is operated by a rechargeable lithium polymer battery. Below you will find some advice on the use of rechargeable batteries:

- The battery of the HidnSeek GPS device cannot be replaced and must not be removed.
- Batteries may not be disassembled, thrown into fire or short-circuited.
- Never expose the HidnSeek GPS device to excessive heat such as sunshine, fire or similar source. This increases the danger of battery leakage.
- Only use the USB cable that came with your HidnSeek GPS device. The use of other cables and/or adapters might overcharge the battery and can lead to fire or explosion.

Disregarding these instructions can cause damage and possibly even cause the battery to explode.

DISPOSAL

Batteries are hazardous waste. For the correct disposal of batteries, appropriate containers are provided at the premises of commercial battery dealers as well as local council waste disposal facilities. If you want to dispose of your HidnSeek GPS device, follow the current local provisions at the time. Information may be obtained from the local council waste disposal facility.

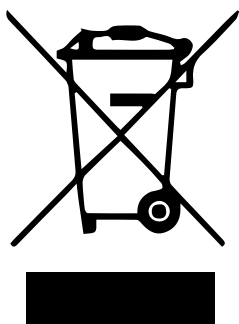

FUNCTIONS AND USE

In order to locate your things with HidnSeek, a PC with internet connection or a smartphone (Android, iPhone) is required. The HidnSeek GPS app can be downloaded from the Google Play Store for Android or the Apple App Store for iOS.

The HidnSeek GPS device can only be used after successful activation through a web browser.

IN ORDER TO COMPLY WITH AVIATION AUTHORITIES, SWITCH OFF YOUR HIDNSEEK DEVICE BEFORE TAKE-OFF AS THIS MAY CAUSE ELECTROMAGNETIC INTERFERENCE TO AIRCRAFT SYSTEMS.

HIDNSEEK IS A SIGFOX READY DEVICE AND NEEDS SIGFOX NETWORK COVERAGE TO OPERATE.



DECLARATION OF CONFORMITY

EMC Directive 1999/519/CE:

Short text of the Declaration of conformity: HidnSeek SAS hereby declares that the HidnSeek GPS device conforms to the fundamental Requirements and other relevant provisions of directive 1999/519/CE.

EN 60950-1 (2006+A11/2009+A1/2010+A12/2011) IEC 60950-1 (2005+A1/2009)

ETSI EN 300 220-1 V2.4.1 (2012)

ETSI EN 300 220-2 V2.4.1 (2012)

COUNCIL RECOMMENDATION N° 1999/519/CE of 12 July 1999

ETSI EN 301 489-1 (V1.9.2) - ETSI EN 301 489-3 (V1.6.1)

CE COMPLIANCE STATEMENT

This device complies with CE Rules. Operation is subject to the following 2 conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the Party responsible for compliance could void the user's authority to operate this equipment.

NOTE: This equipment has been tested and found to comply with the limits for ETSI EN 300 220-1 V2.4.1 (2012), ETSI EN 300 220-2 V2.4.1 (2012), pursuant of the CE Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the Instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular Installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the GPS tracker,
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CE RADIATION EXPOSURE STATEMENT

This requirement complies with CE radiation exposure limits set forth for an Uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

RSS (CATEGORY I EQUIPMENT)

This device complies with Industry France license-exempt RSS standard(s).

Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

QUICK SETUP GUIDE

1 Charge HidnSeek



2 Activate HidnSeek <http://www.hidnseek.com/activate>

3 Download the App



That's it!

GETTING STARTED

PACKAGE CONTENTS

1 HidnSeek GPS Device

1 USB Charging Cable

1

Charging HidnSeek

We recommend fully charging the HidnSeek GPS device before first use. Attach the micro-USB to your HidnSeek Device then Connect the USB cable to your PC. The LED on the HidnSeek GPS device will turn yellow while the device is charging.

Once the device is fully charged, the yellow light will disappear.

2

Activate HidnSeek

Activation of the HidnSeek GPS device requires the device to be powered on.

Enter the link below into the address bar of your browser to access the HidnSeek homepage, which will guide you through the step by step activation of your HidnSeek GPS device.

<http://www.hidnseek.com/activate>

3

Smartphone App

To download the App from the Apple Iphone, load up the Itunes App Store and search for 'HidnSeek'. Alternatively, if you are using an Android, open up the Google play Store and start a search for 'HidnSeek'.


USING THE SMARTPHONE APP

SIGN IN


If you didn't register/ activate an account as yet, please select 'JOIN HIDNSEEK' and follow the instructions.

If you have already subscribed to HidnSeek and have an account then simply tap on 'SIGN IN' Button and enter your email and password.

*Share tracker
Id's with friends
and family and
look after
what's
important!*

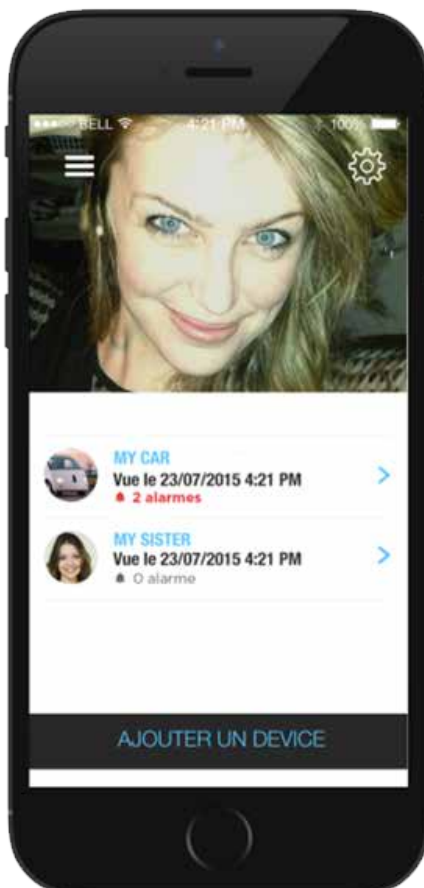


ADD/ DELETE A DEVICE


To Add a Device, go to the main menu  and select Devices.

Select 'Add Device' and enter Device ID and Key provided. Then validate your entry by tapping the 'ADD' button.

To Delete a Device, go to the main menu  and select

Devices, Then Select the Device you want to Delete. Tap on the Device settings  button and scroll down until the 'Remove' button is displayed. Tap on 'REMOVE' button to confirm deletion of the device.


LOCATION


To View all your Devices just go to the main Menu  and select Location. 

The view will zoom automatically to display all your devices.



By tapping on a Device marker you can view the summary of information about your device including:

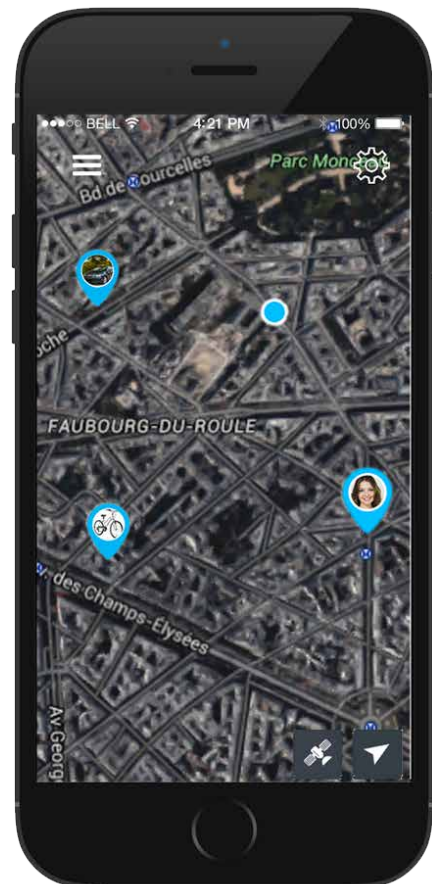Alt (Altitude),
Cap (Direction),
Sp (Speed),
Bat (Battery level).




Press on  to display the advanced information screen for the device.


ADVANCED INFORMATION SCREEN

Tapping the  button is not the only way to display the advanced info, you can also navigate to this screen via the Devices button available from the main menu. 

Just tap on the desired device of your choosing.

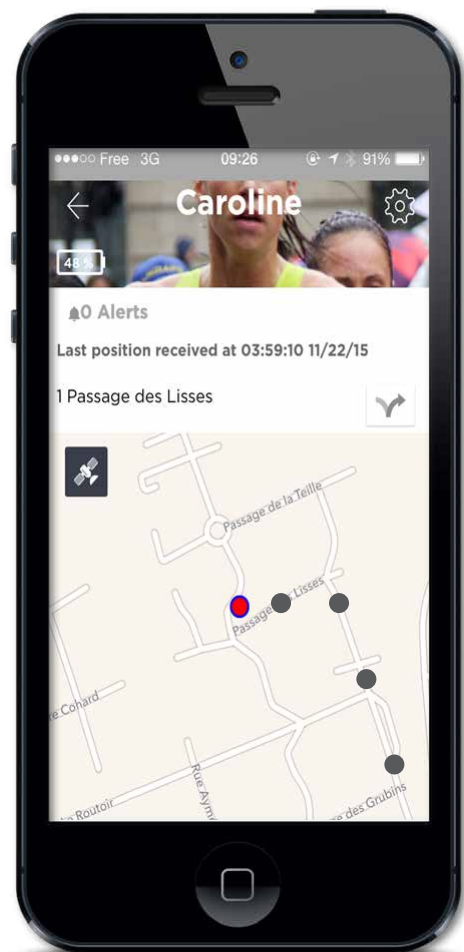



The following information is displayed:

- Picture caption
- Battery level
- Number of Alerts
- Display last known Address
- Satellite or Street Map view with last 5 positions
- Tap on the icon  and your smartphone App will guide you right to your HidnSeek Device

DEVICE AND ALERTS SETTINGS

RENAME DEVICE


From the Device menu,  select a device and then tap on Settings.  You can enter or change the device name here.

BATTERY LEVEL

To set an alert for your battery level, simply tap on the Battery button to switch on the alert and select the desired level you want for your notification.

MOTION DETECTION

To setup Motion Detection select the option to be alerted for motion or when device does not move.

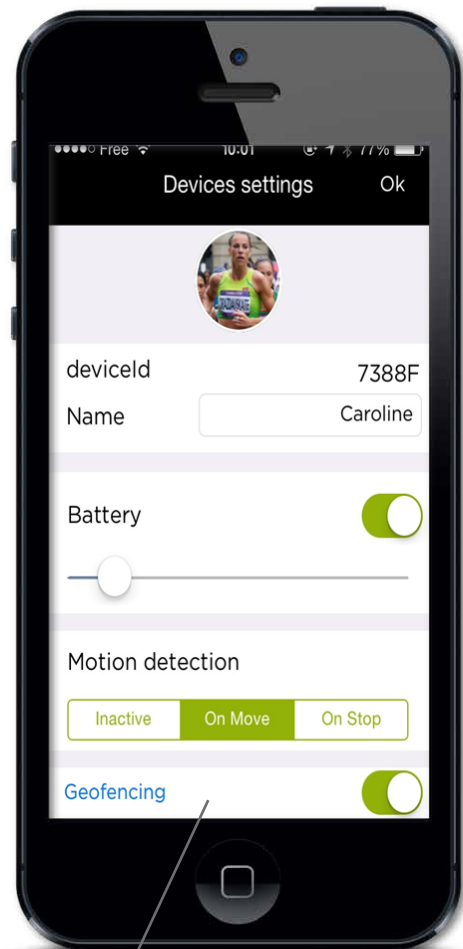

Geofencing





GEO-FENCING

Tap on geofencing at the bottom of the Device Settings menu.


CREATE A GEO-FENCE

Zoom into the desired area where you want to create a geofence. Draw geofence from the options available:

- point to point geo-fence 
- radius geo-fence 

DELETE A GEO-FENCE



Touch and drag the geo-fence to the bottom of the screen where you will see the area called 'Drop Here To Delete'.

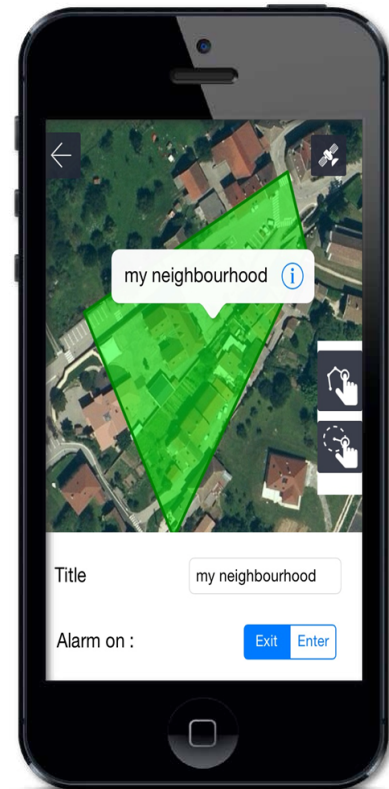


GEO-FENCE SETTINGS

Tap on the geo-fence area to display the information window.

Enter a title for the geofence and set the alert to 'exit' or 'entry' (or both).

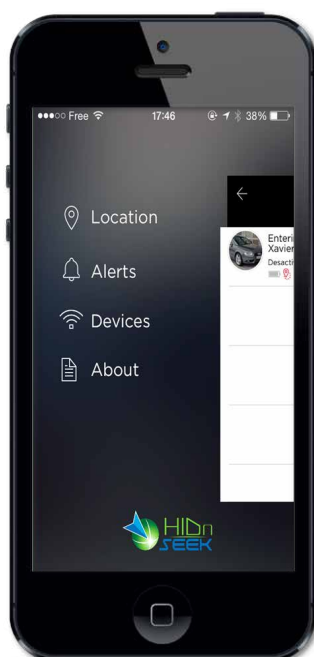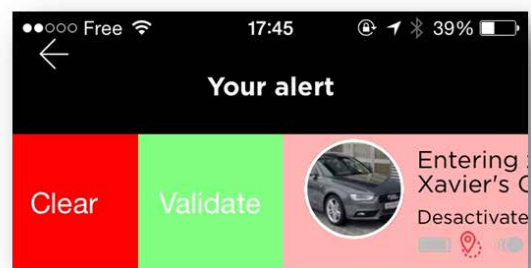

ALERTS SCREEN

Notifications or Alerts repository can be found by tapping the Alerts button  in the main menu. A non-validated Alert is displayed with red background.

Swipe the Alert message and select validate to acknowledge the notification or select clear to remove it completely.

TURNING HIDNSEEK OFF/ ON

In the event you should need to turn the device off. Follow the steps below precisely.


- 1** Lie the device flat on it's back and wait for the red light.



- 2** Put the device on its side, with the edge flat. Pay attention to correct orientation. Hold for 8 seconds



- 3** Flip the device around on its other side and hold edge flat for 8 seconds.

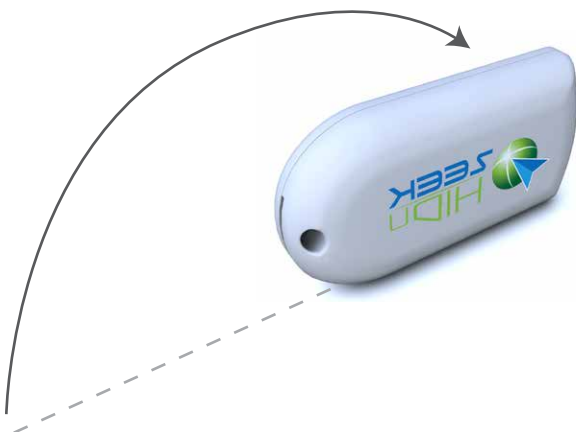

- 4** Flip the device back to the first side (as in step 2) and hold for 8 seconds.



The red light will flash and the device will now be off.

To turn back on, just tether the device to a computer with the USB cable.

SPORT MODE

HidnSeek by default, runs in Smart mode, which means, it will only ever update its position and all other attributes when it detects motion. It can only do this as frequently as every 10 minutes. Sport Mode puts the device into a constantly ready state. It will update every 5 minutes, regardless of whether or not it detected motion. This mode will remain active for 4 hours and then return to Smart mode.

NOTE: Sport mode will drain your battery quicker!

- 1** Lie the device flat on it's back and wait for the red light.



- 2** Put the device on its side, with the edge flat. Pay attention to correct orientation. Hold for 8 seconds



- 3** Flip the device around on its other side and hold edge flat for 8 seconds.



- 4** Lie the device flat on its back once more. After 8 seconds the device will enter Sport mode.



DEVICE COMPONENTS



GPS

Green LED

Red LED

Aerial

Micro USB

Blue LED


Modem

LED AND DEVICE STATUS

| | |
|-------------------|--|
| Powered on by USB | |
| Firmware update | |
| Start Sequence | |

| | |
|-----------------------------|--|
| GPS Search | <div> Satellites Visible Repeat 4 minutes </div> <div> No Satellites Repeat 2 minutes </div> |
| Sending Position and status | |
| Sleep loop | <div> No Motion </div> <div> Motion </div> |

EXAMPLE

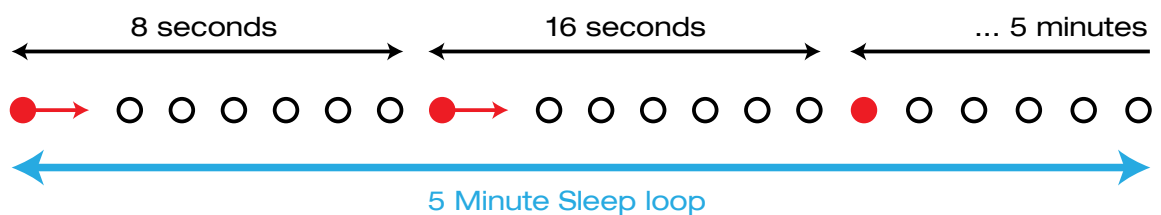

2 motions occurred within a 5 Minute Sleep loop

SUPPORT

If you have a question or would like to submit a comment, you have the following options:

a) Read through the frequently asked questions (FAQs)

<http://www.hidnseek.com/faq>

b) Contact your point of sale

c) Send us an e-mail: contact@hidnseek.fr

PLEASE NOTE THAT DUE TO ORGANIZATIONAL REASONS WE WILL NOT ACCEPT ANY UNANNOUNCED PACKAGES SENT VIA CARRIAGE FORWARD.