


THE NETWORK ANALYZER

PHASOR DIAGRAM

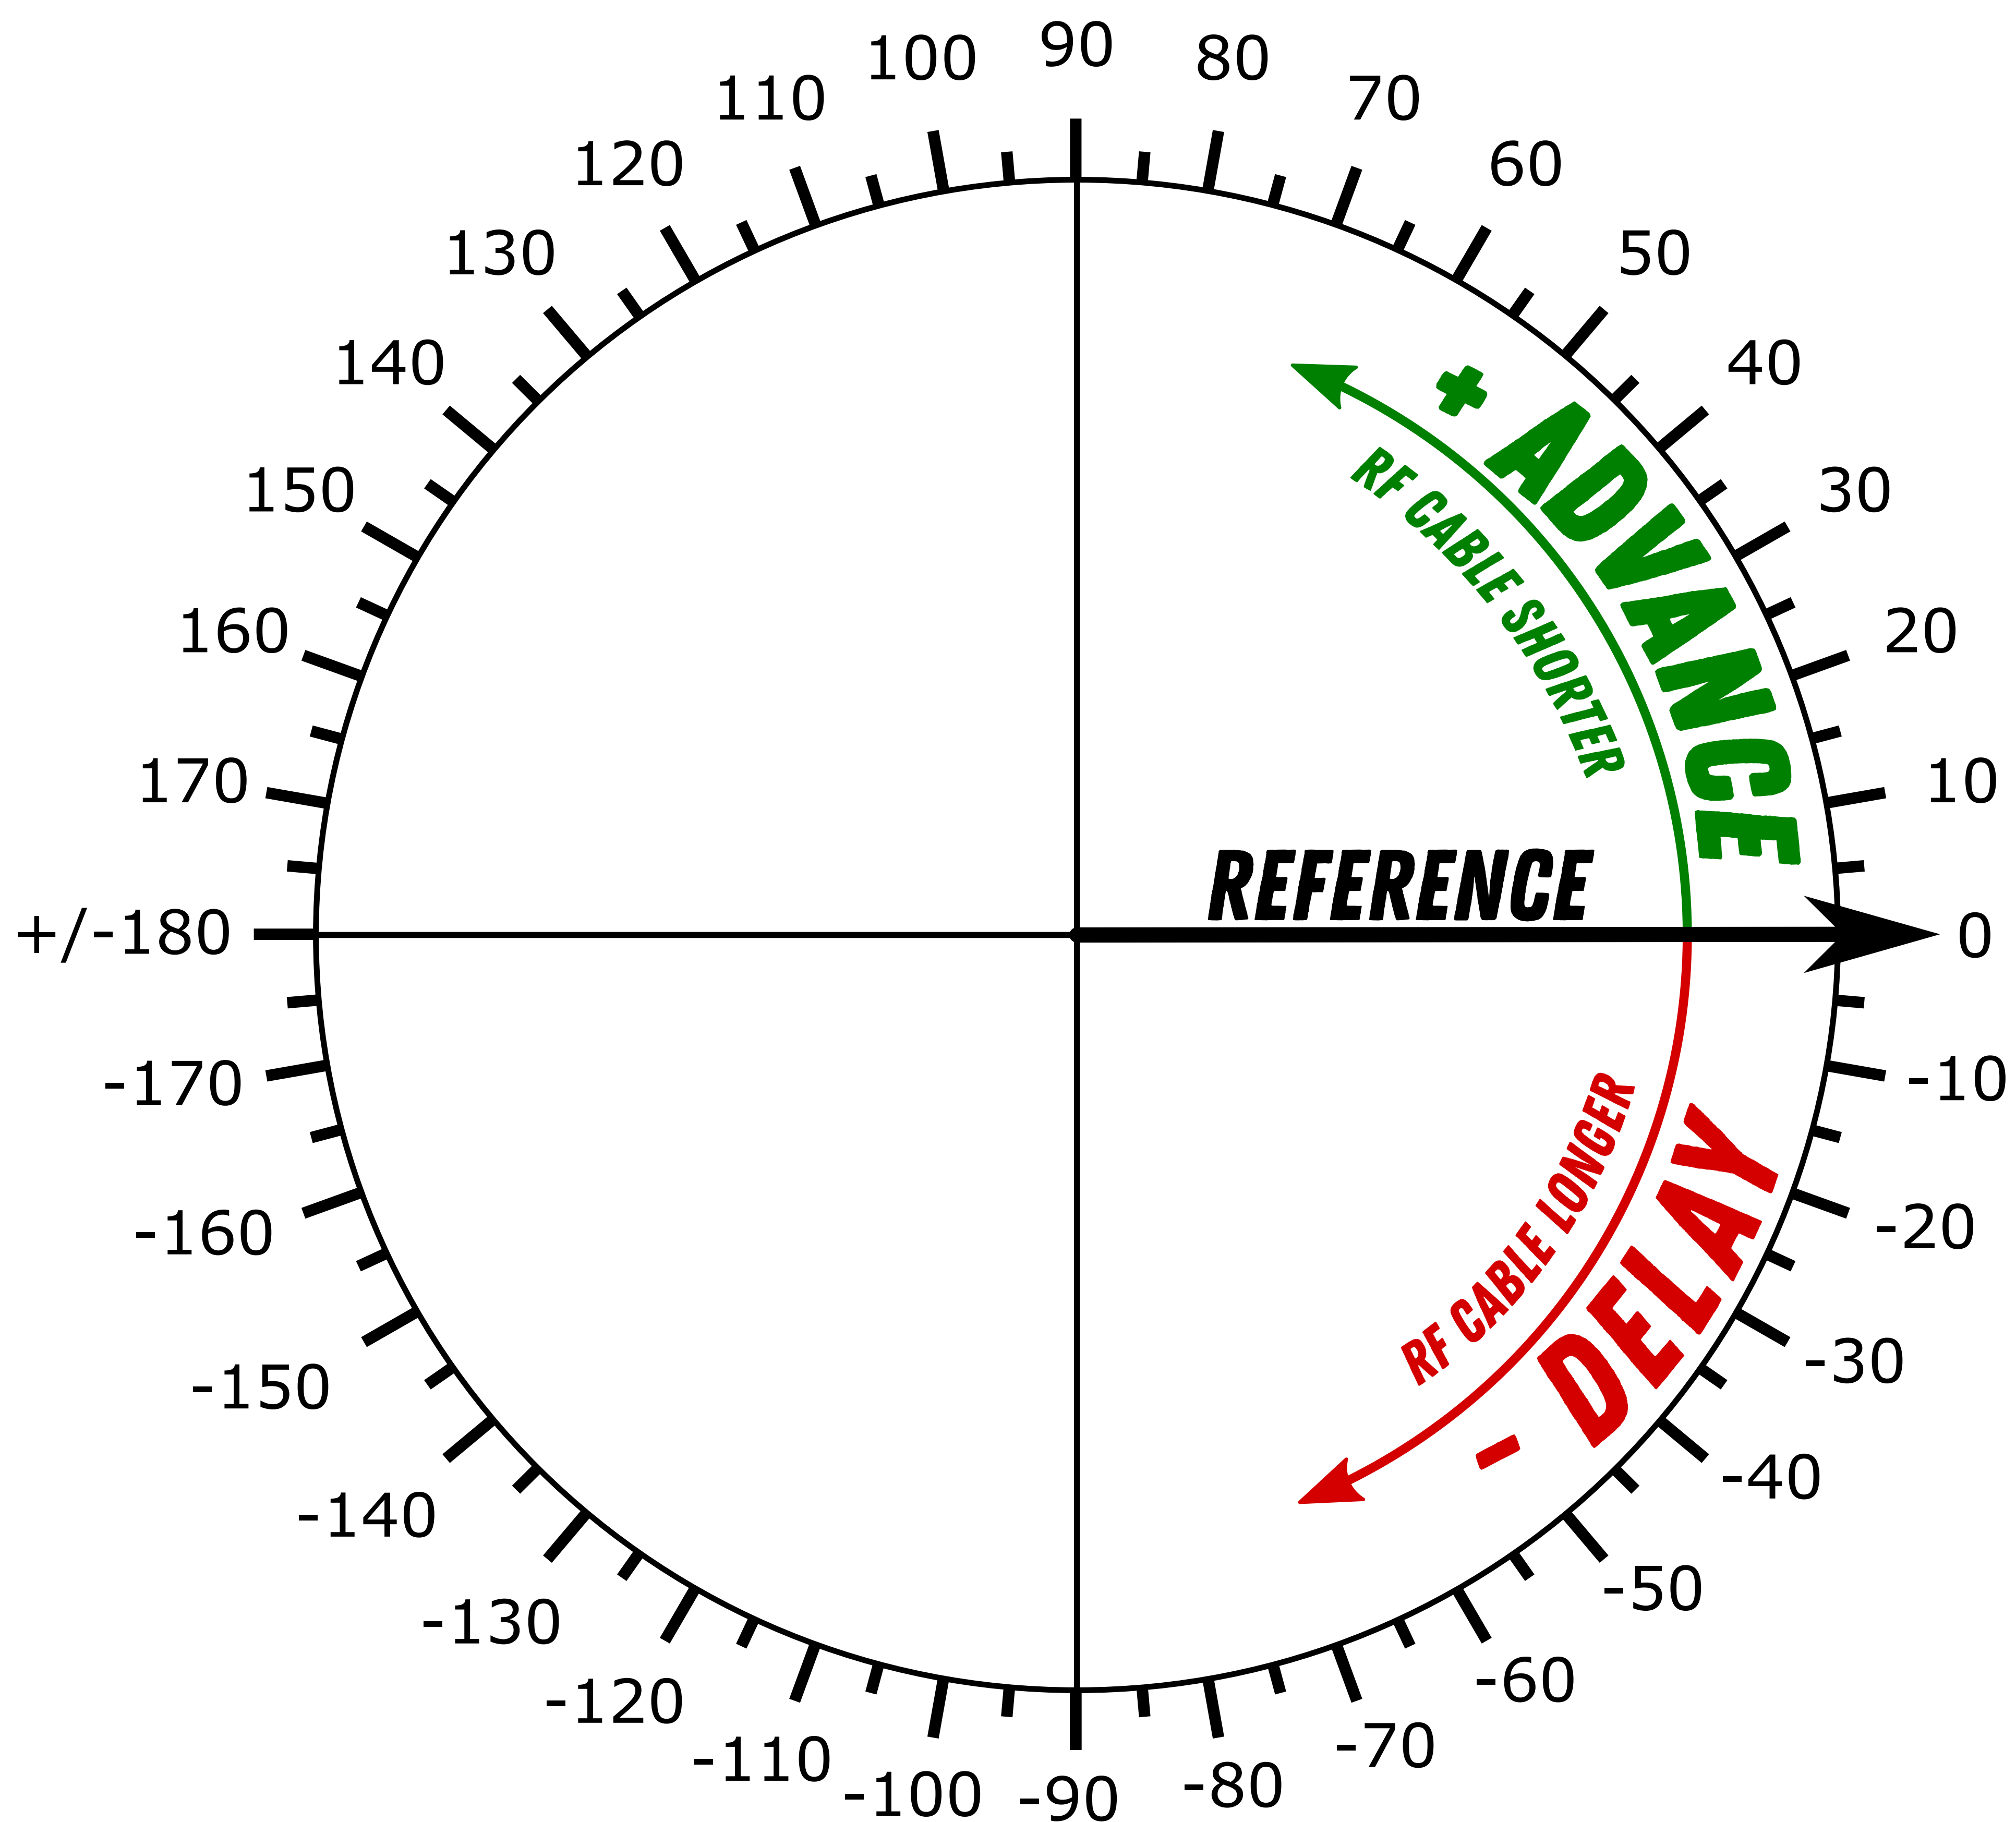

PHASE CONSTANTS FOR COMMON CABLES & ADAPTERS AT FREQUENCIES FOR NAVIGATIONAL AIDS:

CABLE TYPE

LOCALIZER/VOR

GLIDE SLOPE



RG-214/223

5 DEGREES / INCH

15 DEGREES / INCH



HELIAX

4 DEGREES / INCH

12 DEGREES / INCH



N-TYPE ELBOW

6 DEGREES

19 DEGREES



N-TYPE BULLET & BARREL

10 DEGREES

30 DEGREES



TNC ELBOW

5 DEGREES

15 DEGREES